




HP Officejet J4550 All-in-one Paper-Feed Roller Replacement

This guide explains how to take out the paper-feed roller in your HP Officejet J4550.

Written By: Jiayin Zhu

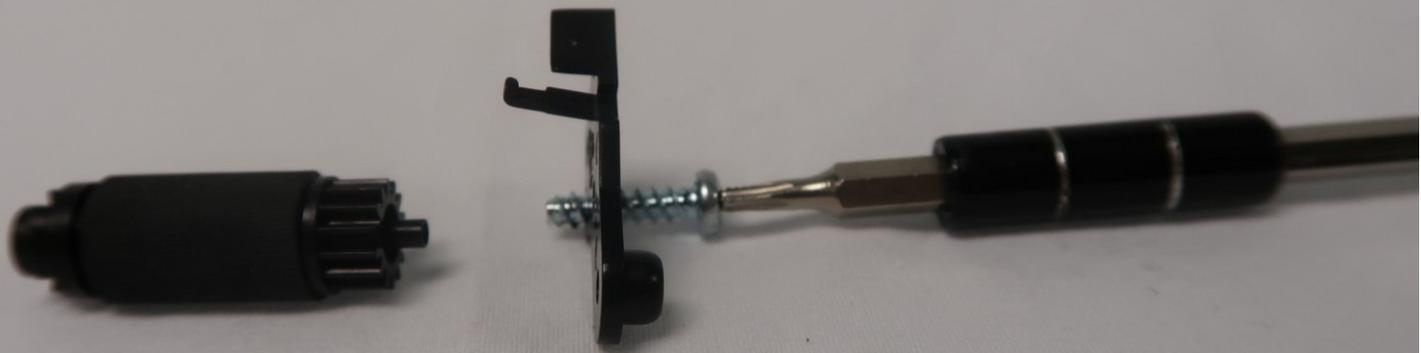


INTRODUCTION

Is the paper not coming out of your printer correctly? Consider using this guide to replace the paper feed roller in your printer.

TOOLS:


- [T8 Torx Security Bit Screwdriver](#) (1)
-

Step 1 — Paper-Feed Roller

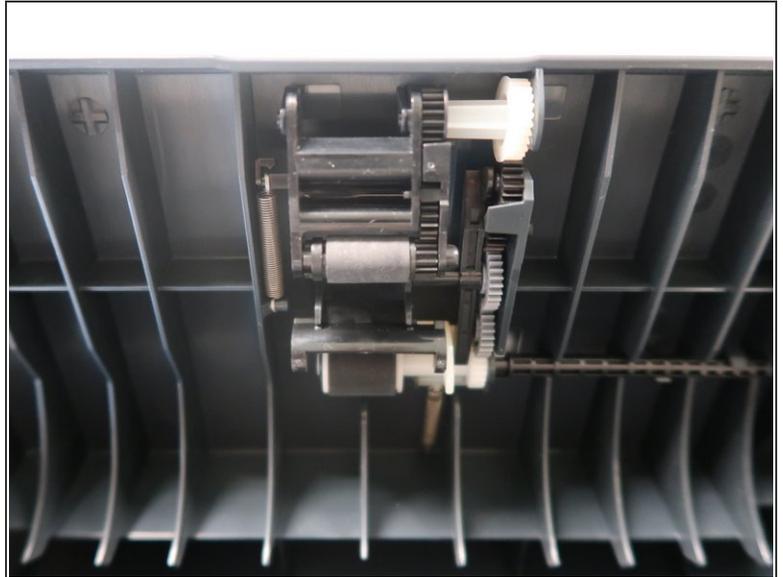



- Open the document feeder cover by flipping it to the left with the front panel facing you.
- Locate the manual paper-feed roller end of the document feeder cover.

Step 2

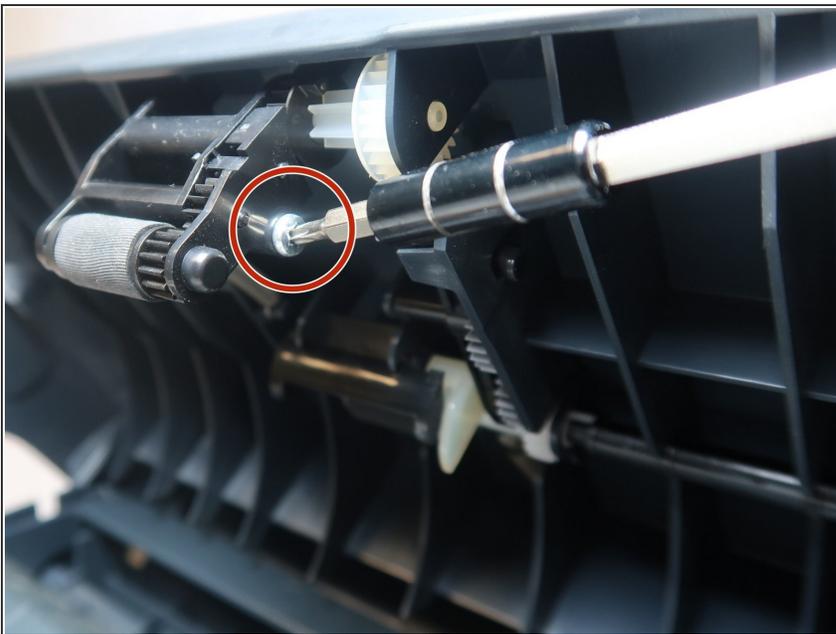

- Remove the 10mm screw on the side of the roller with T8 torx security screwdriver.

Step 3

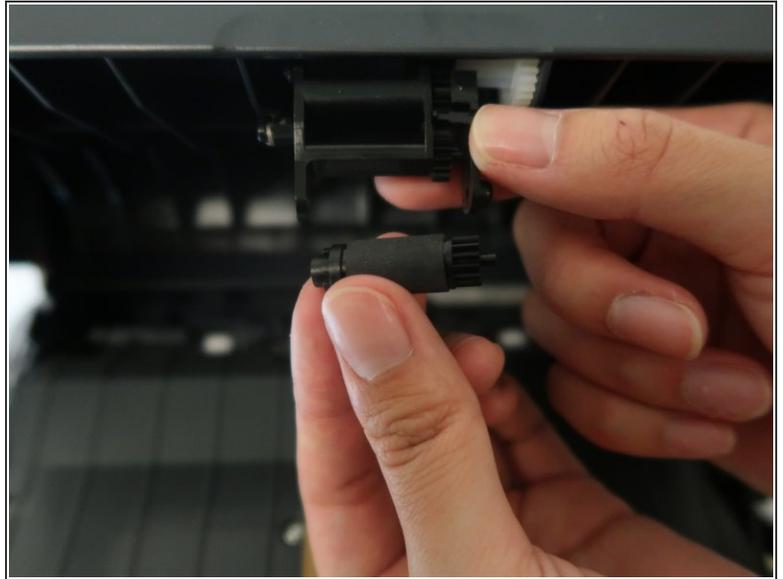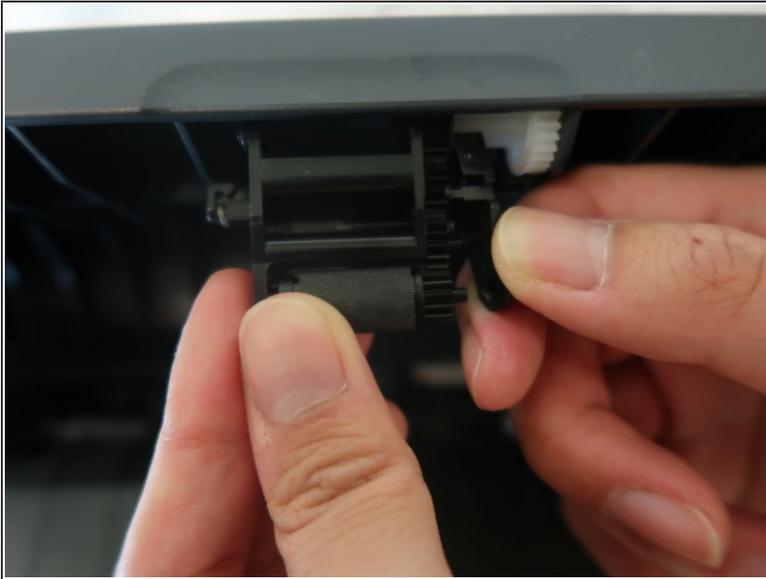

- Pull the side cover of the paper-feed roller to the right and remove the paper roller.

To reassemble your device, follow these instructions in reverse order.