




# HP Officejet J4550 All-in-one Button Replacement

This guide explains how to remove the button in your HP Officejet J4550.

Written By: Jiayin Zhu

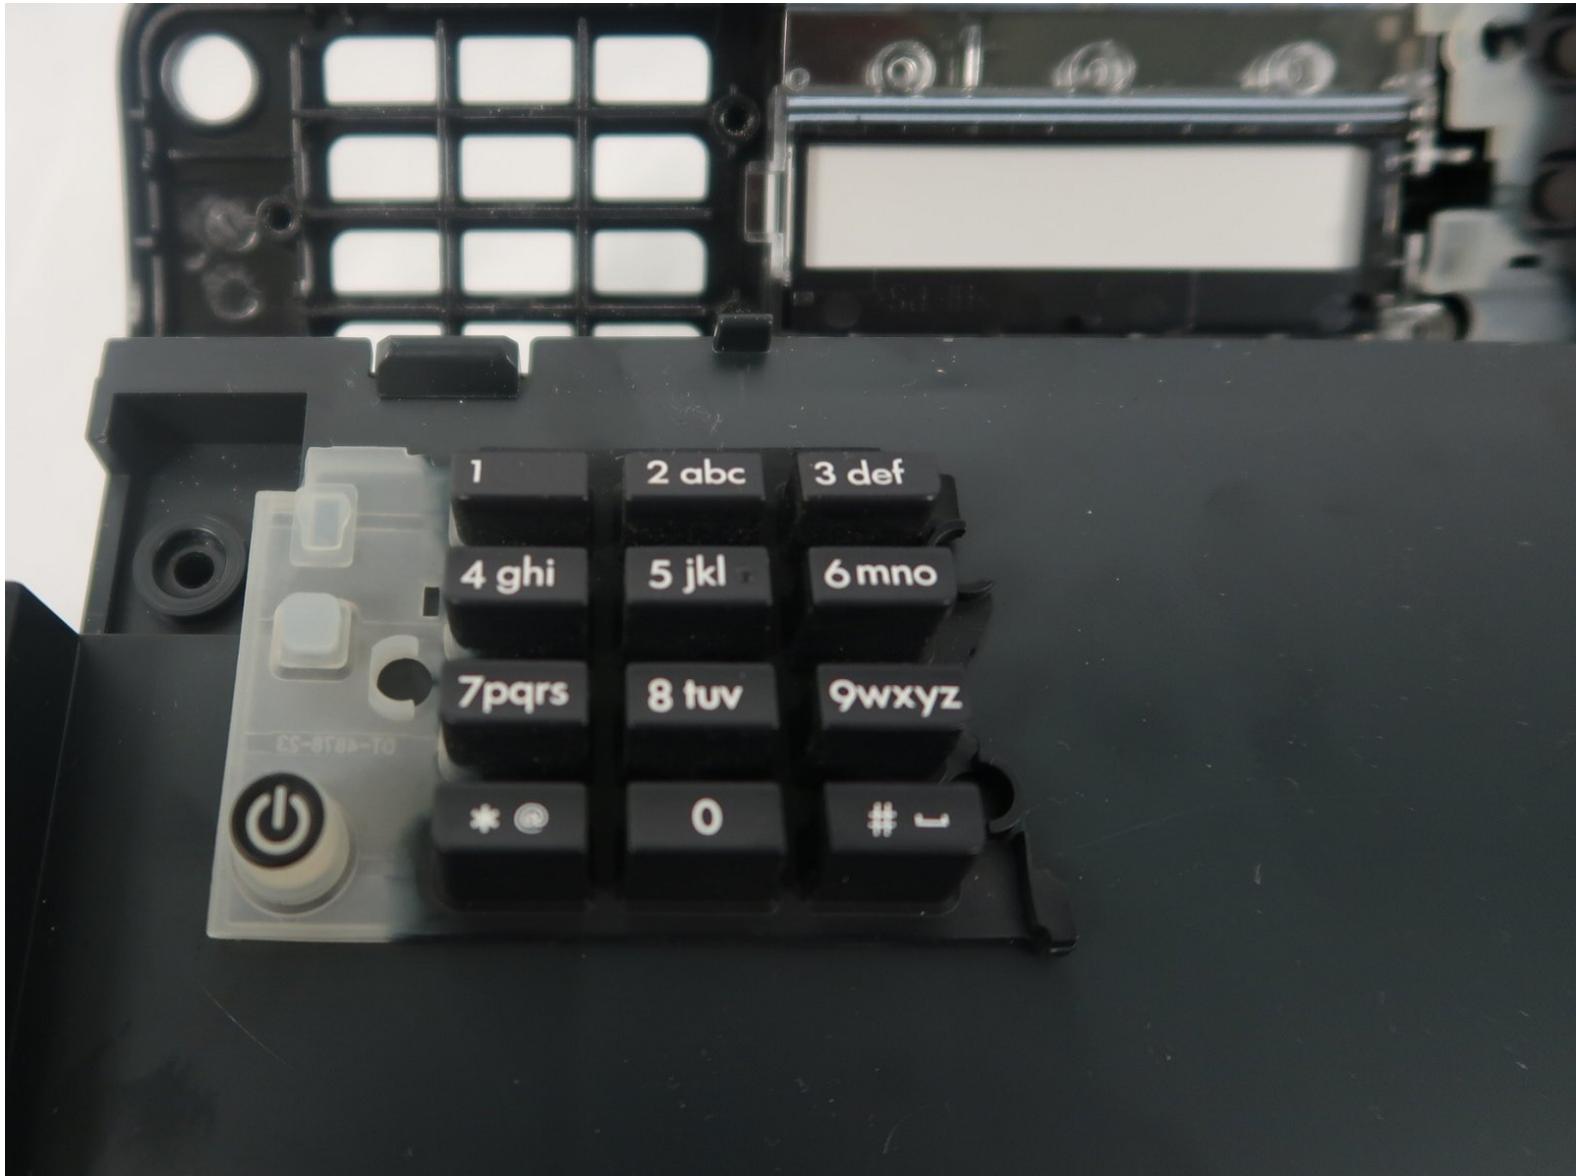

---

## INTRODUCTION

Are the buttons not working on your printer? Consider using this guide to replace the buttons in your device.

---

### **TOOLS:**



- [T8 Torx Security Bit Screwdriver](#) (1)
-

## Step 1 — Button





- Insert 2 fingers in the dent on the right side of the printer and pull towards the front of the printer.
- Using fingers to open the cover of the scanner which located on the top of the printer.

## Step 2

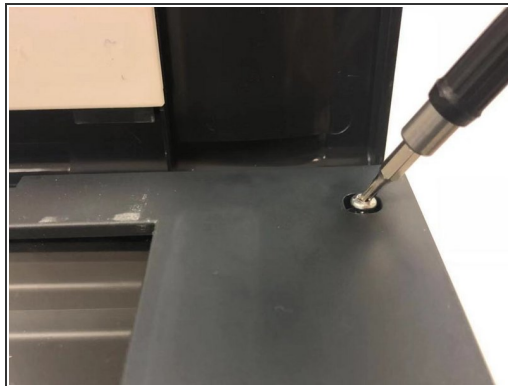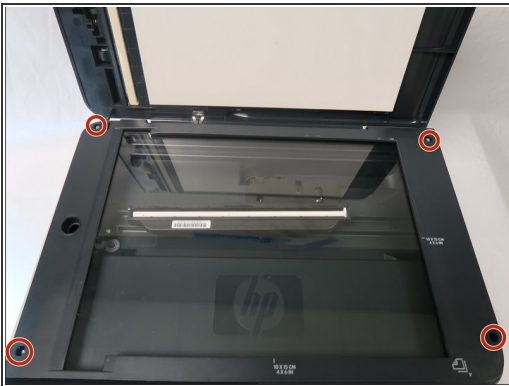



- Remove four 10mm screws on the panel with T8 torx security screwdriver.
- Remove the cover of the top part.

## Step 3

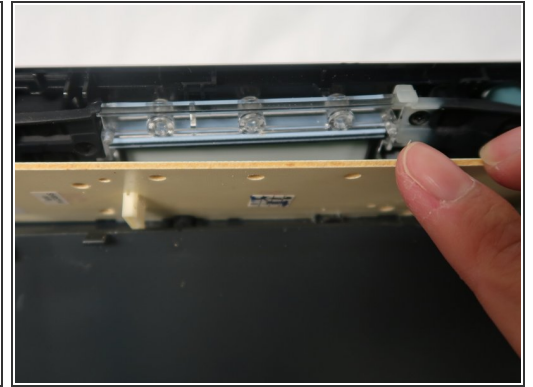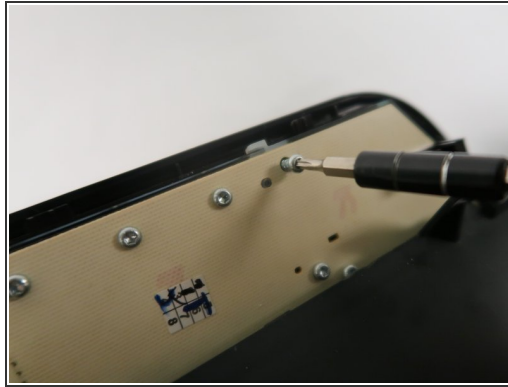

- Remove eight 10mm screws on the back of the controlling keyboard with T8 torx security screwdriver.
- Remove the back board of the controlling keyboard.

## Step 4

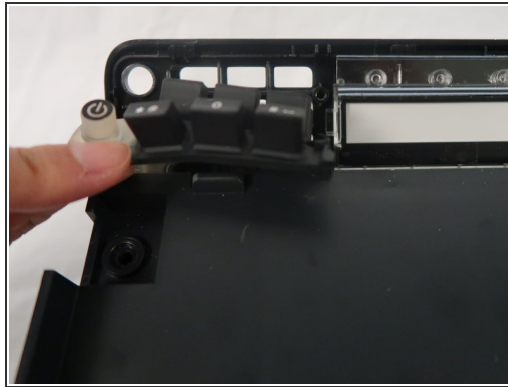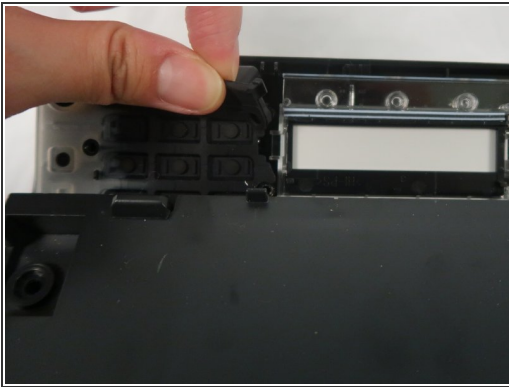

- Remove the button that is located at the left of the controlling keyboard.

To reassemble your device, follow these instructions in reverse order.