

HP Officejet J4550 All-in-one Glass Plate Replacement

This guide explains how to remove the glass plate in your HP Officejet J4550.

Written By: Jiayin Zhu



INTRODUCTION

Is the glass plate in your printer broken? Consider using this guide to replace the glass plate in your printer.



TOOLS:

• T8 Torx Security Bit Screwdriver (1)

Step 1 — Glass Plate





- Insert 2 fingers in the dent on the right side of the printer and pull towards the front of the printer.
- Using fingers to open the cover of the scanner which located on the top of the printer.

Step 2








- Remove four 10mm screws on the panel with T8 torx security screwdriver.
- Remove the cover of the top part.

Step 3



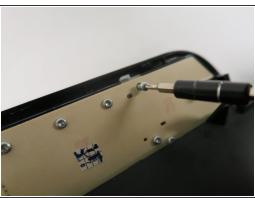



- Remove eight 10mm screws on the back of the controlling keyboard with T8 torx security screwdriver.
- Remove the back board of the controlling keyboard.


Step 4






Remove the controlling keyboard with hands.

Step 5

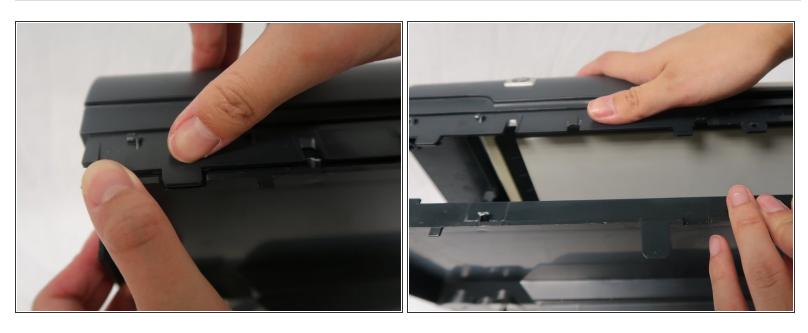


Using fingers to open the back cover board of the glass plate.

Step 6

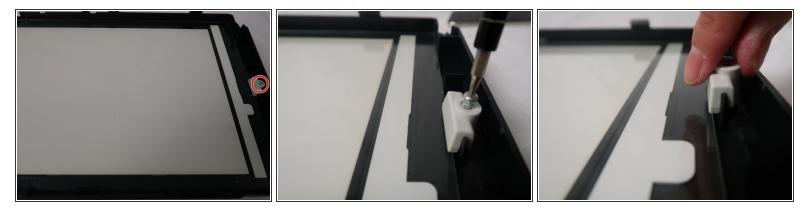

- Remove the 10mm screw on the right of the board with T8 torx security screwdriver.
- Remove the part that is under the 10mm screw.

Step 7

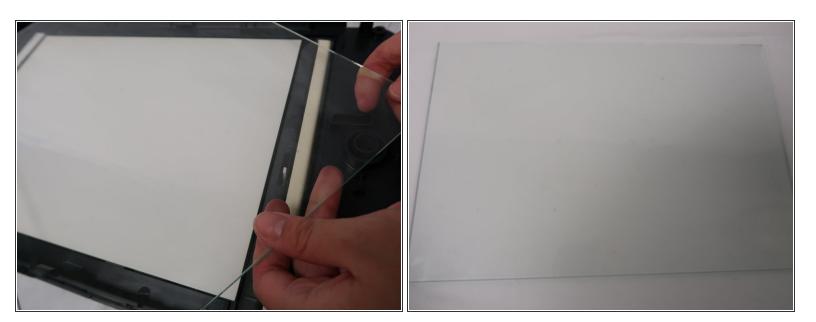

Remove the glass plate with hands.

To reassemble your device, follow these instructions in reverse order.