



Canon EOS 60D: Replacing Eye piece and Battery door

This guide will show you how to remove the battery door, and eye piece.

Written By: Eric D



INTRODUCTION



This is fairly straight forward, and something you may do in the normal use of your camera. It is even in the manual.

Step 1 — Eye piece and Battery door



- Removing the eyepiece is easy. There are two methods, you can do it yourself, or put it in your camera bag a dozen times and at least once, it will fall off.
- Grip the eyepiece by the sides firmly (index finger and thumb). Wiggle it upwards until it is off.

Step 2

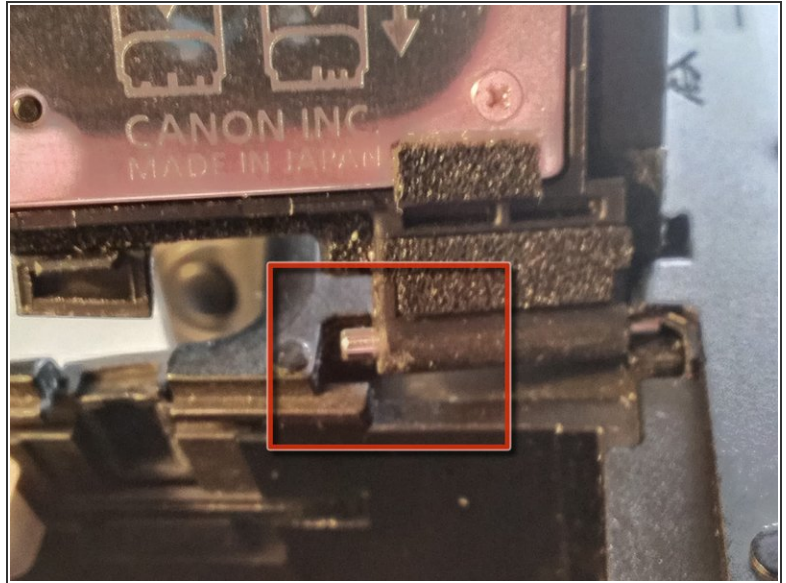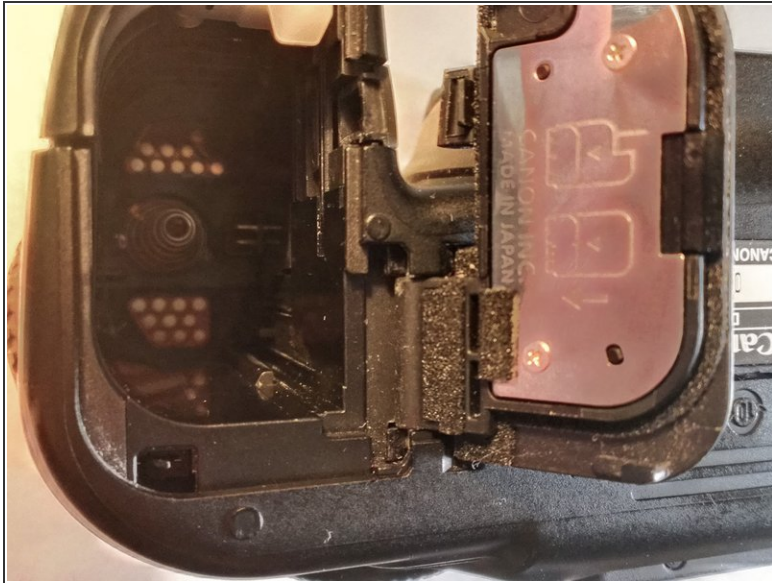

- Open the battery door
- Rotate the door so the one side of the hinge pops out (see photo #2)
- Slide other pin out (it pops out the same, but this is easier)

To reassemble your device, follow these instructions in reverse order.

Rubber grips will require adhesive. (I havent gotten this far, I assume rubber cement / double stick tape may work)