



Asus VivoBook X202E-DB21T Battery Replacement

How to replace the battery in an Asus VivoBook X202E-DB21T.

Written By: John Thomas



INTRODUCTION

You may need to replace the battery if it does not hold a charge or the laptop does not turn on. Be aware that this battery is a Lithium-Polymer battery and can explode if punctured.



TOOLS:

- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Asus VivoBook F201E, Q200E, S200E, X201E, X202E Battery](#) (1)

Step 1 — Battery



- Flip the device such that the labels are on top.
- Use a Phillips #1 screwdriver to remove the four 8mm screws near the back.
- Use the same screwdriver to remove the four 5mm screws in the front.
- Use the same screwdriver to remove the single 9mm screw in the center.



⚠ Make sure that the device is powered down and unplugged.

Step 2



- Remove the back cover by gently prying with a spudger.

Step 3

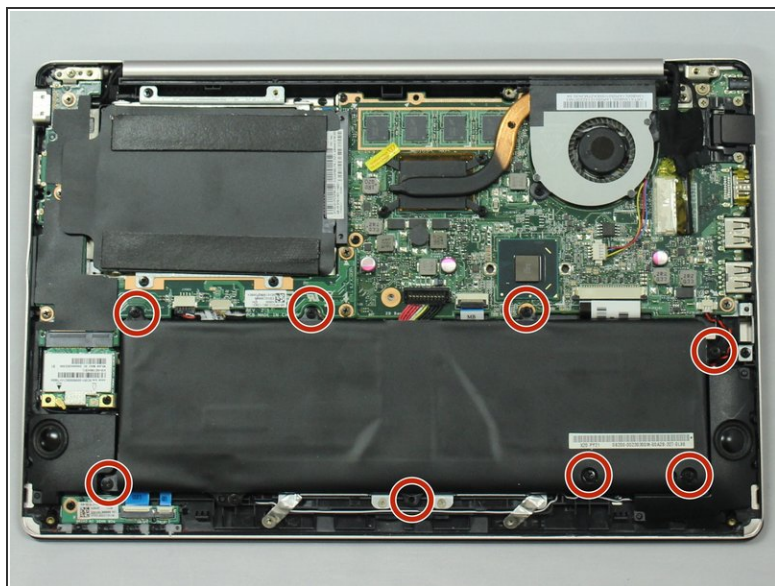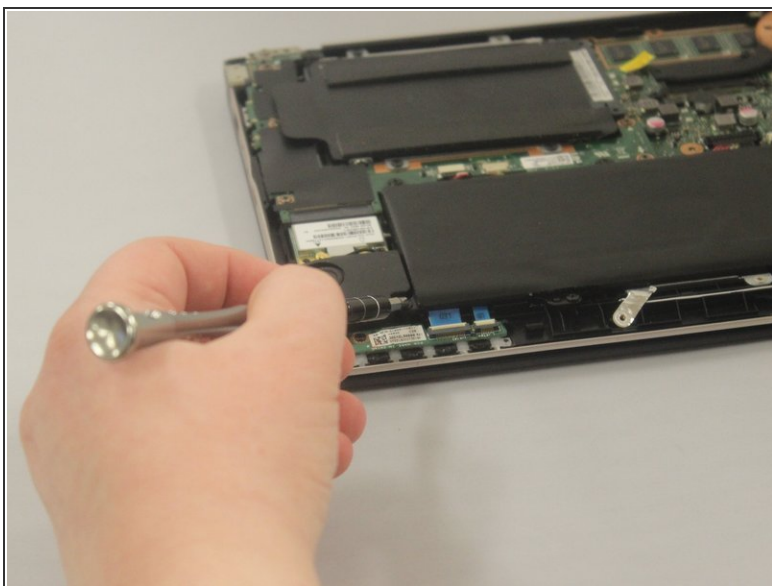

- Remove the eight 5mm screws using a Phillips #1 screwdriver.

⚠ Do not puncture the battery.

Step 4



- Disconnect the battery ribbon cable from the motherboard.

Step 5



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.