




# Acer Aspire 5742 Cover Panel Replacement

Replace the hard drive and RAM cover panel on your Acer Aspire 5742.

Written By: Skylar MacDonald

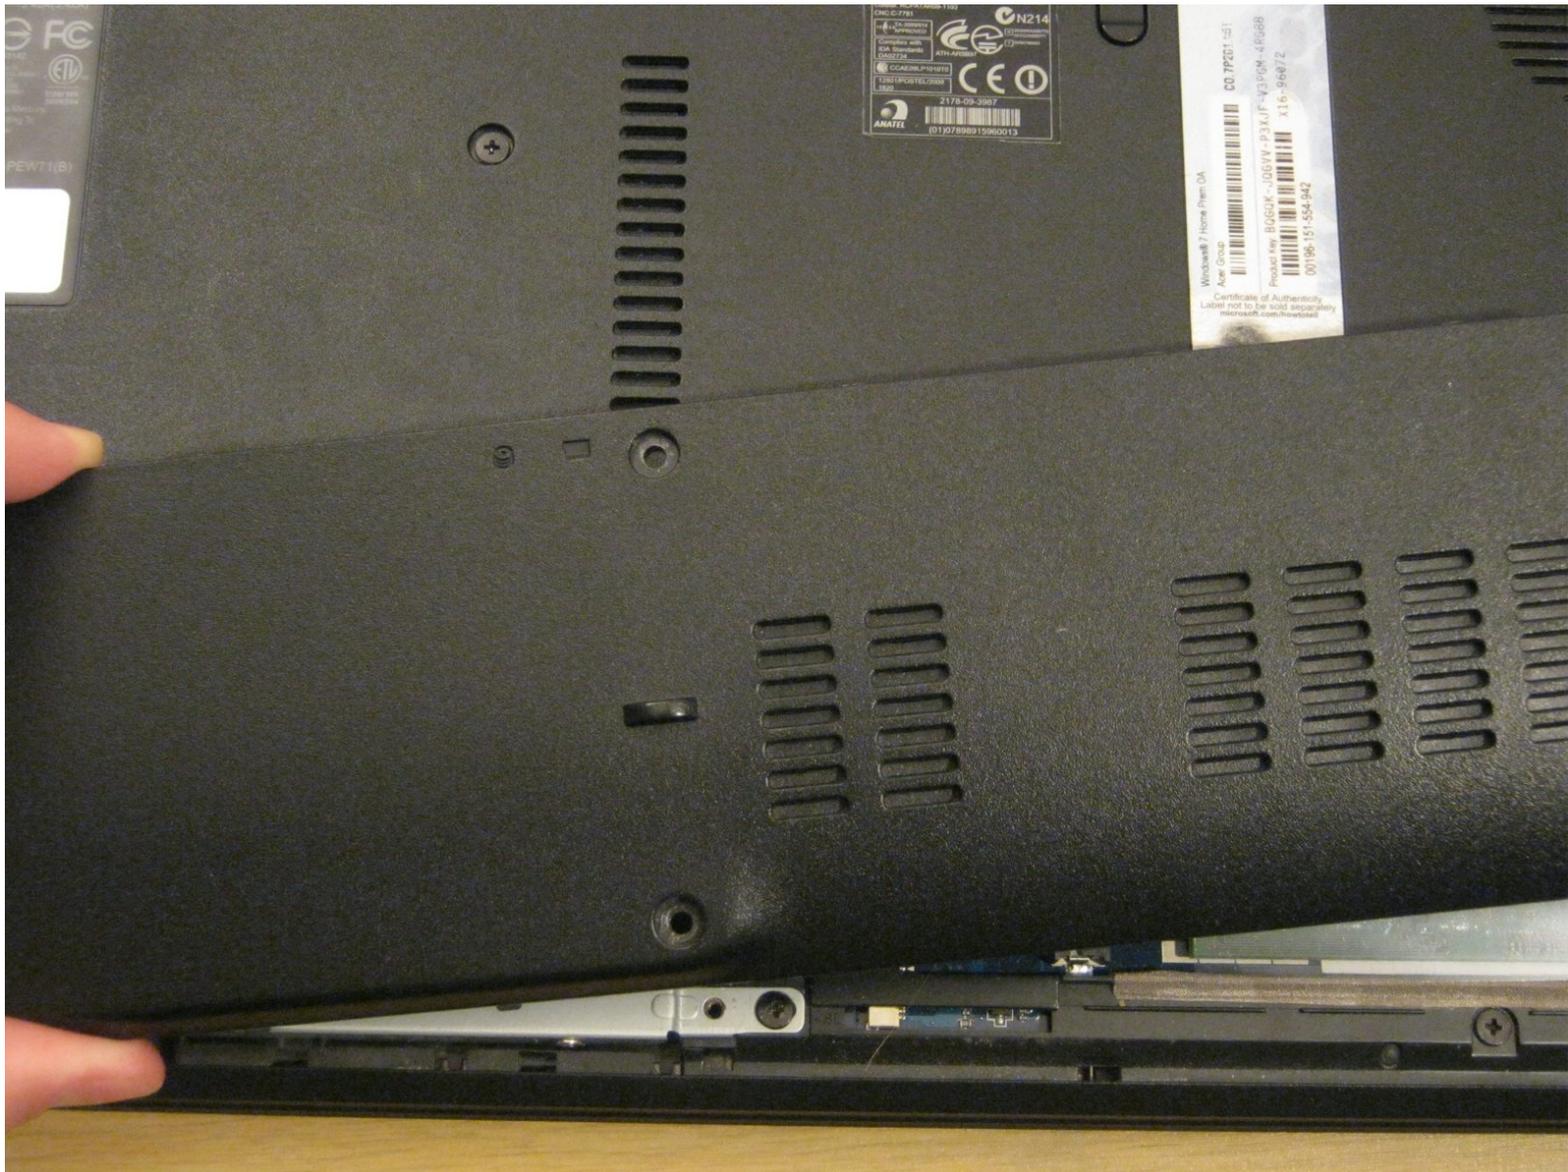

---

## INTRODUCTION


Replace a broken or worn out cover panel on your Acer Aspire 5742 to keep your RAM, hard drive and WLAN card safe.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Cover Panel

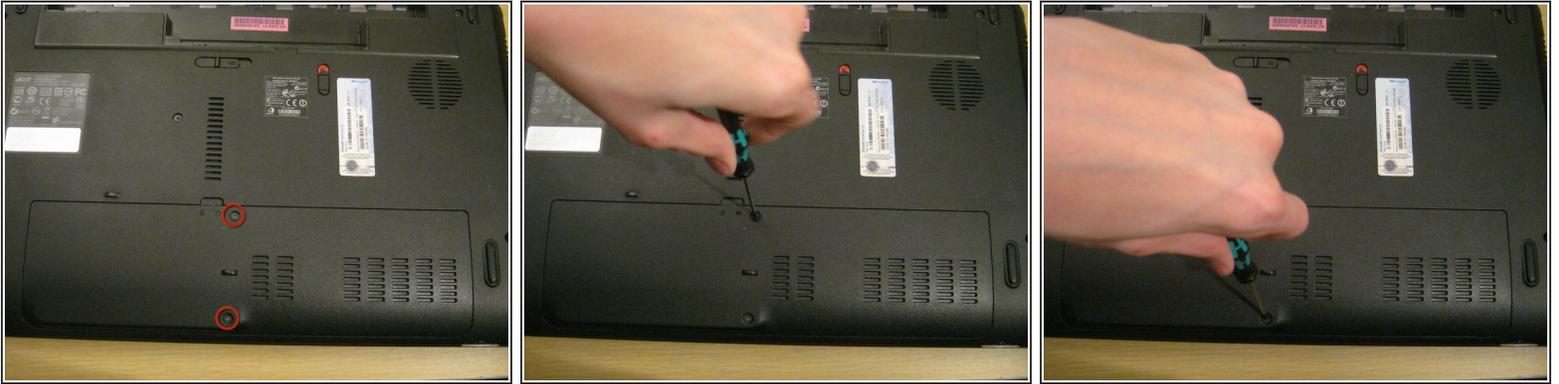

- Turn the notebook around to face you.
- There are two Phillips #00 screws securing the cover panel to the rest of the notebook. Remove these screws.

## Step 2



- Use a spudger to release the panel from the plastic retaining clips keeping it in place.
- ⚠ Do not apply too much force, or you may break the clips.
- Remove the panel and set it aside.

To reassemble your device, follow these instructions in reverse order.