




LG Optimus F60 Speaker Replacement

How to replace broken or faulty speaker in an LG Optimus F60.

Written By: Mohammad Mohammad

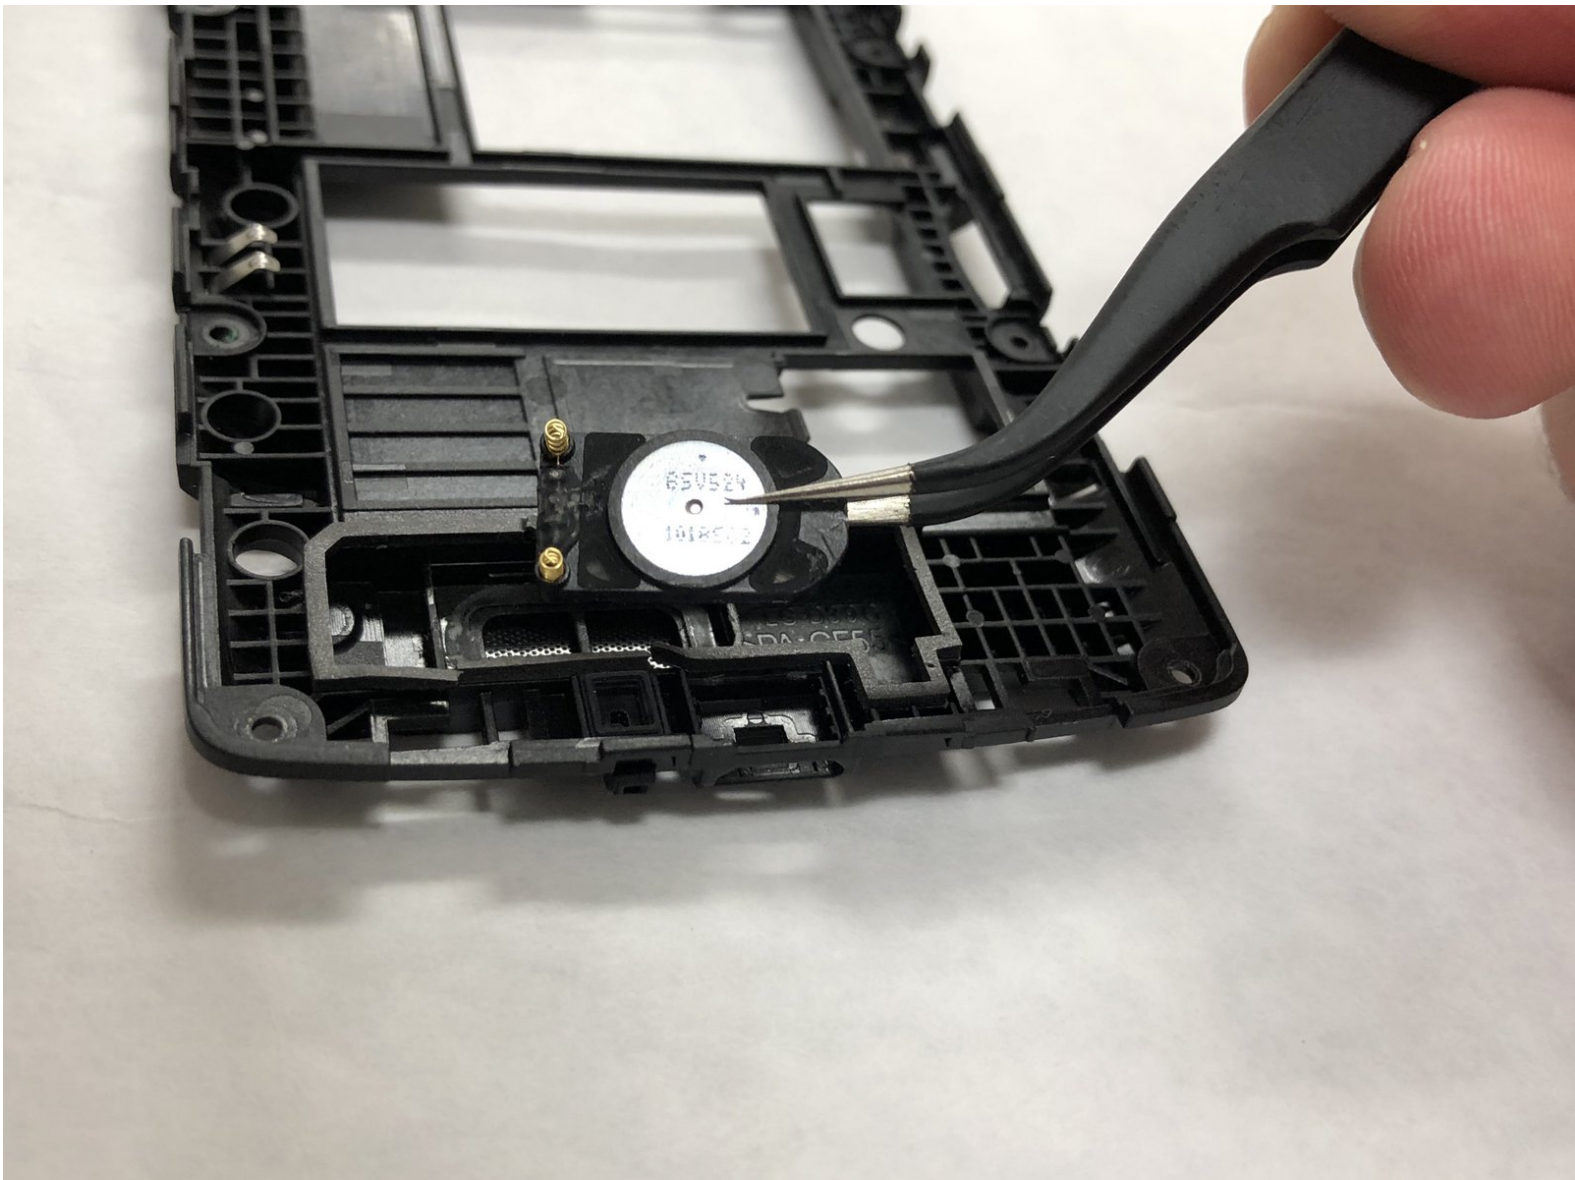

INTRODUCTION

This guide will show how to replace a faulty or broken speaker on a LG Optimus F60. This process is not complicated and can take 8 minutes to complete.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Hold the phone in your hand and position the small plastic opening tool or your finger under the lip of the phone by the USB port.
- Pry or lift up on the indent with the opening tool.
- Remove the back panel.

Step 2




- Place the small plastic opening tool or your finger at the indentation at the base of the battery.
- Pry upwards or lift with your finger and remove battery.

Step 3 — Speaker




- Use the Phillips #000 screwdriver to remove eight screws.

Step 4

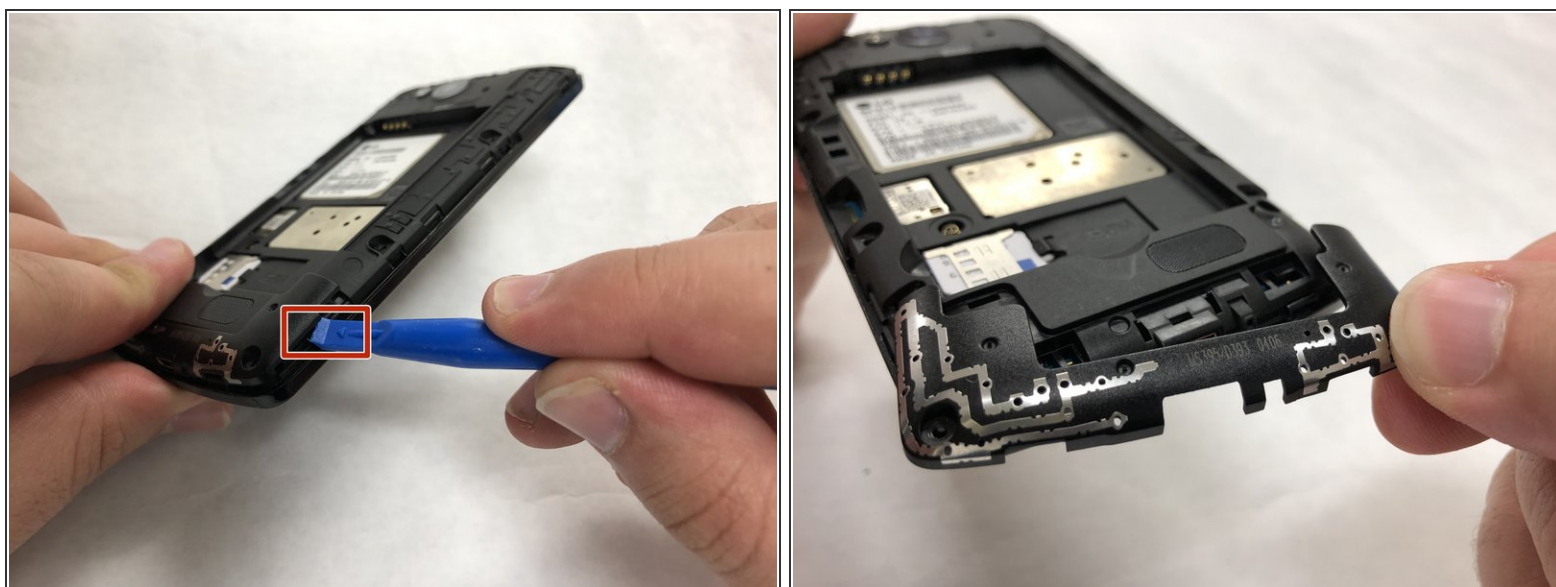


- Insert the iFixit opening tool in the indentation.
- Pry the plastic using the opening tool to remove the lower back panel.
- Remove the back panel from the device.

Step 5

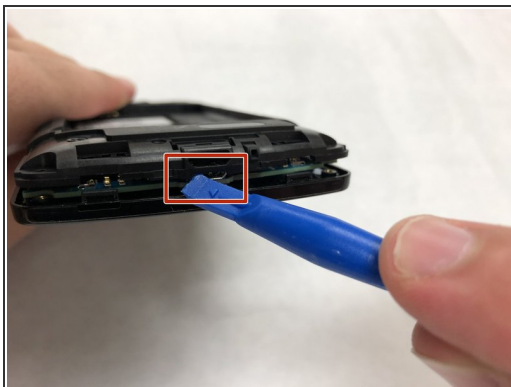

- Start at the charging port, and continue to pry at the edges until loose enough to remove.
- Remove the back panel.

Step 6

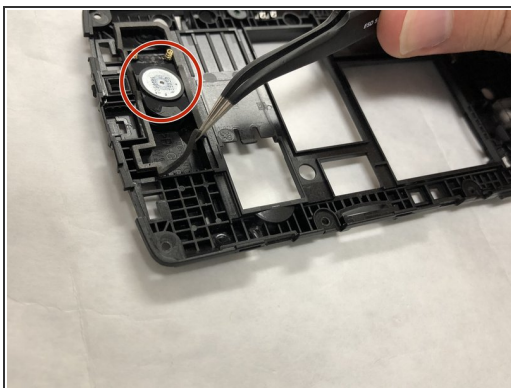

- Gently pry the foam seal from around the speaker.
- Pry out speaker using tweezers.
- Remove and replace the speaker.

To reassemble your device, follow these instructions in reverse order.