



RCA Maven Pro 11 Volume Button Replacement

This guide will teach you how to remove the volume button of the RCA Maven Pro 11.

Written By: Brady Alexander Cristancho



INTRODUCTION

The volume button turns up and down the volume on the RCA Maven Pro 11. If the button becomes damaged and will no longer press down this guide can be utilized to remove and replace it.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Cover




- Remove all the 8 mm Phillips head screws on the side and back of the device.

Step 2

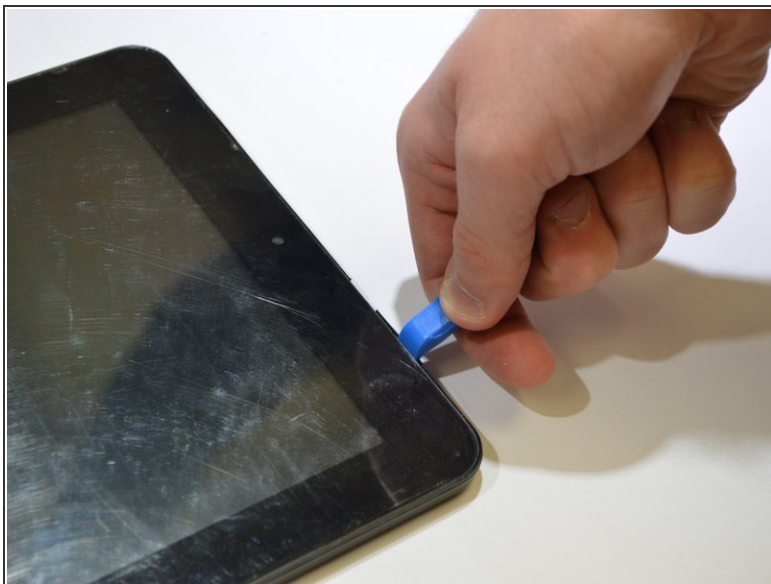

- Pry off the cover by sticking a wedge in between the screen and the cover.
- ⚠ Be careful with the plastic because it can easily break.
- Once the cover is partly removed, use your hands to take off the rest of the cover.

Step 3 — Volume Button

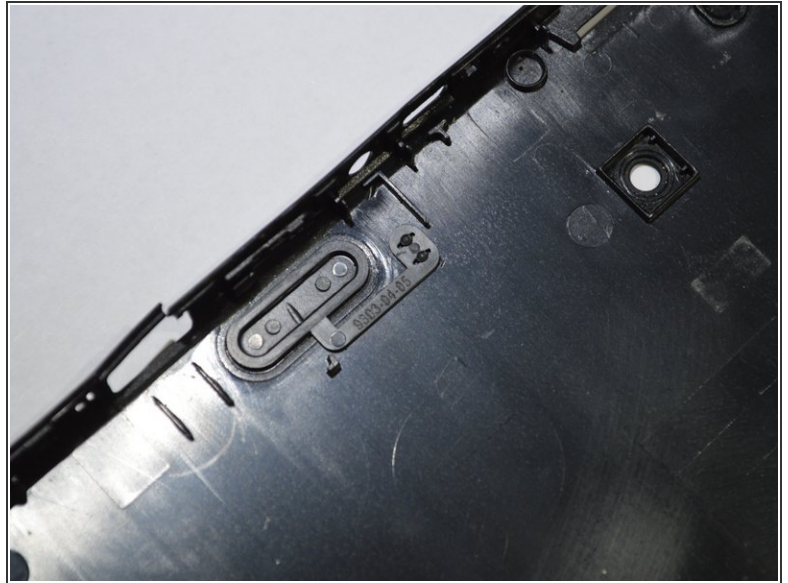

- Locate the volume button on the inside of the cover.
- Slide a wedge between the cover and the volume button and lightly lift it off.

To reassemble your device, follow these instructions in reverse order.