



Nexus 5X Motherboard Assembly Replacement

pre req

Written By: Dominik Schnabelrauch



INTRODUCTION

pre req only

TOOLS:


- [iOpener](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Motherboard Assembly




- [Use an iOpener](#) to loosen the adhesive beneath the rear facing camera. Place the iOpener across the top part of the phone for about 30 seconds.

Step 2

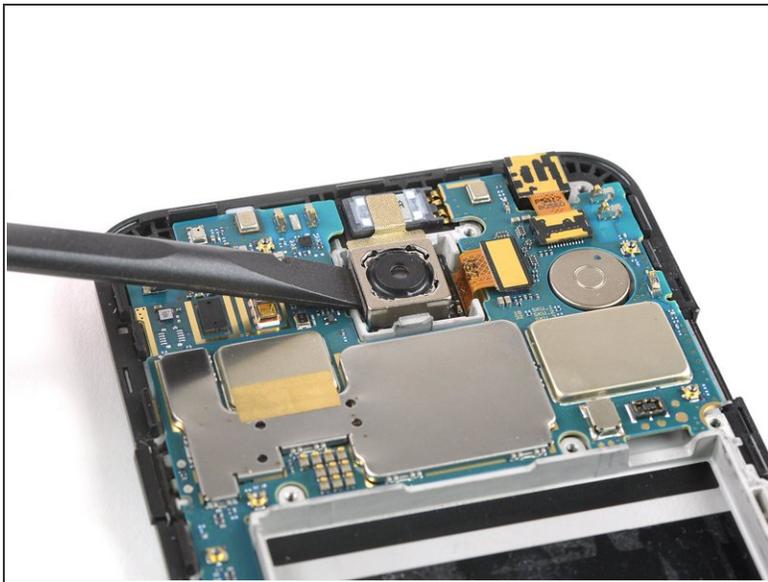


- Apply the flat end of a spudger to the left side of the rear facing camera and carefully lever it up. Make sure all of the adhesive underneath is loosened.

Step 3

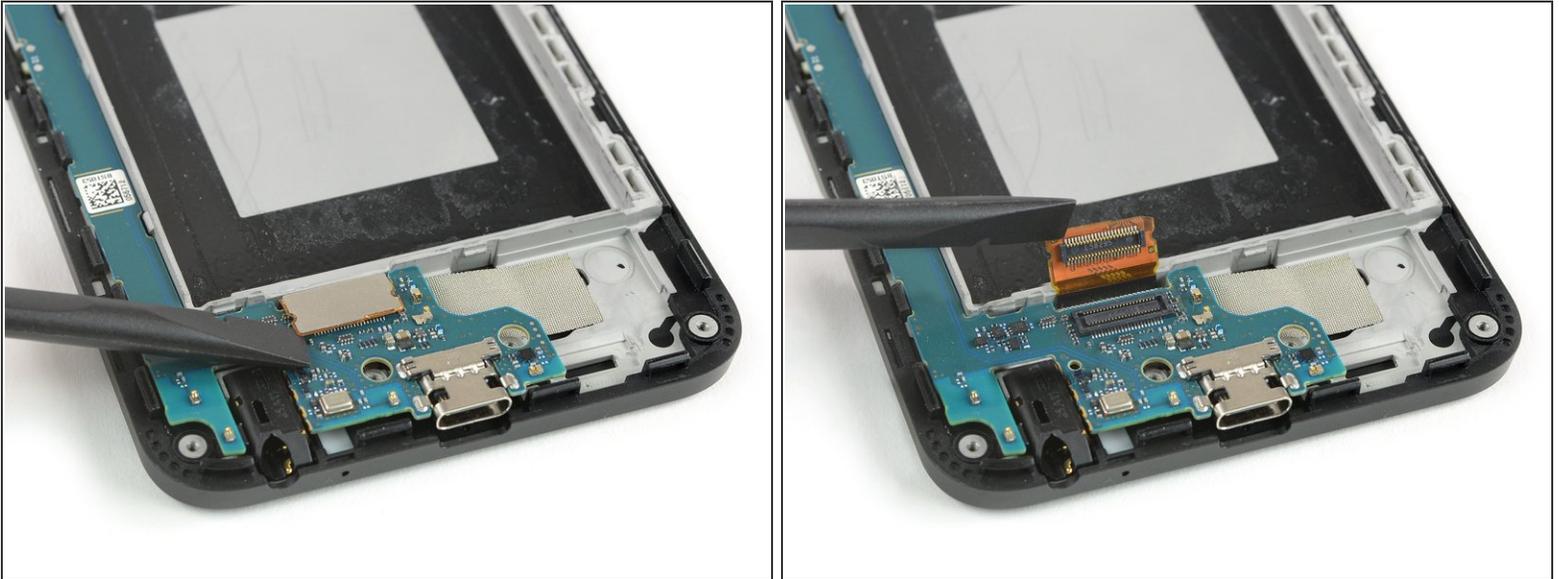

- Use the flat end of a spudger to pry up the display flex connector.

Step 4

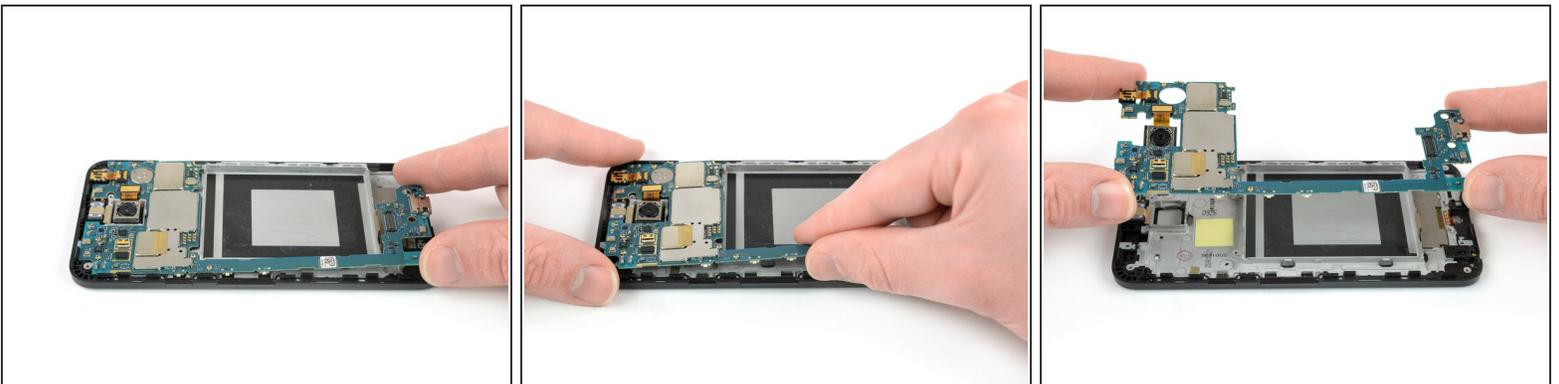

- Grip the lower part of the motherboard with your fingers and carefully lift it upwards.

⚠ There's a small plastic clip next to the rear-facing camera that holds the motherboard in place.

- Gently pull the motherboard towards the bottom edge to free it from the plastic clip next to the rear-facing camera.
- Carefully lift the motherboard out of the frame.

⚠ Be careful—the two cameras are still connected to the board.

To reassemble your device, follow these instructions in reverse order.