


Lenovo ThinkPad Yoga 370 Battery Replacement

Use this guide to replace the battery in your Lenovo ThinkPad Yoga 370.

Written By: Cassandra Shedden

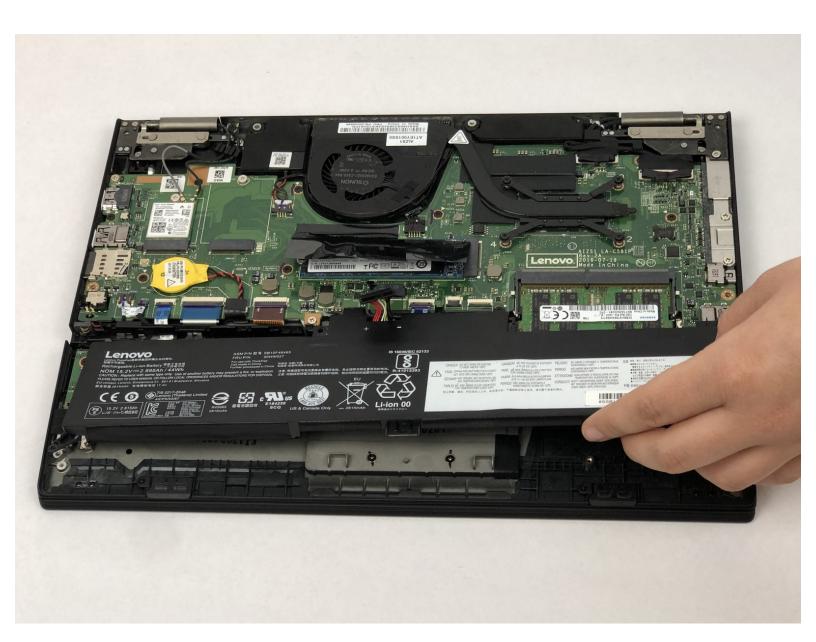

INTRODUCTION

For the Lenovo ThinkPad Yoga 370 (Model Number: 20JH002AUS), if the battery is not charging the device, it could be faulty and this guide will show step by step instructions on how to replace the faulty battery.

Caution: When replacing the battery, make sure the replacement battery is the exact same type as before. Replacement of a wrong battery could cause it to ignite.



TOOLS:

- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)



PARTS:

Lenovo Thinkpad Yoga 370/X380
Replacement Battery (1)


Step 1 — Battery



- Device needs to be powered off and unplugged.
- Remove the stylus from the device and set it aside.

Step 2



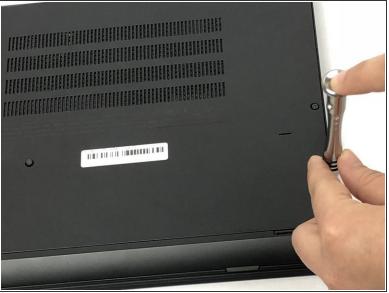

- Using the Phillips #00 screwdriver unscrew the eight circled 4mm screws until you hear a click.
- (i) The screws will remain attached to the back cover.

Step 3





- Note that while the screws are undone, the bottom cover is still attached by several plastic clips around the edges.
- Using the plastic opening tool, work around the edges of the bottom cover to undo the plastic clips.

Step 4





Gently remove the cover by placing your fingers around the edges.

Step 5







- With your fingers, fold back the plastic cover highlighted.
- Using two fingers, gently remove the battery connectors.

Step 6







- Using the Phillips #00 screwdriver, remove the two 4mm screws.
- Remove the battery.
- Make sure to only replace with a battery that matches your computer, any other battery could ignite or explode.

To reassemble your device, follow these instructions in reverse order.

Note: Due to the similarity of the devices, several of the pictures were used from the Lenovo ThinkPad Yoga 260 Battery Replacement Guide to show the specific components that were missing in the Yoga 370.