


# Dirt Devil Vibe Vacuum Brush Roller Replacement

Use this guide to replace the brush roller on your Dirt Devil Vibe vacuum.

Written By: Michell Lopez

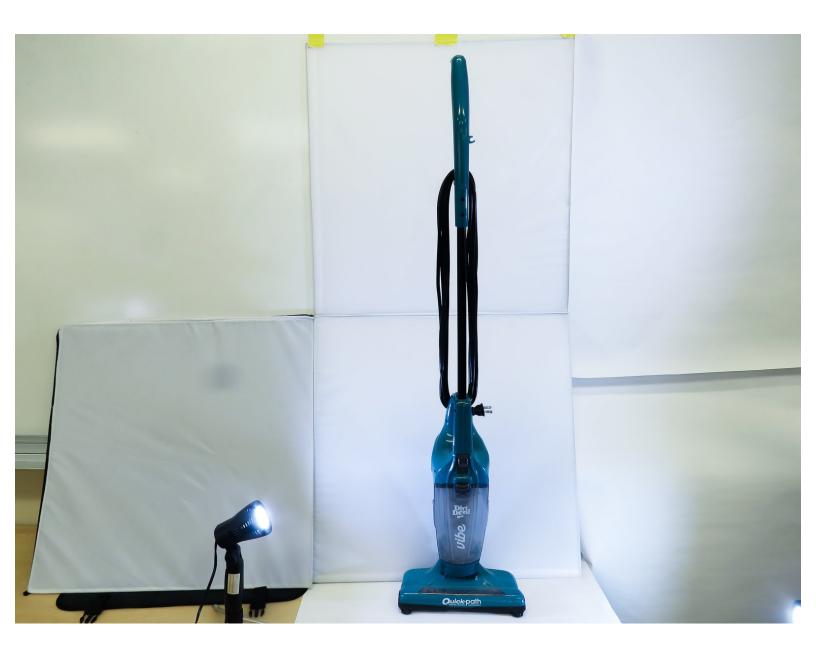

This document was generated on 2020-11-19 09:09:23 PM (MST).

#### **INTRODUCTION**


Use this guide to replace the brush roller on your Dirt Devil Vibe vacuum when the brush on your vacuum stops spinning or spins too slowly. You will need a #0 phillips-head screwdriver to complete this replacement. Make sure the vacuum is unplugged before starting the replacement process for safety purposes. Make sure to keep track of all screws that will be removed during the replacement process.



#### **TOOLS:**

Phillips #0 Screwdriver (1)

# Step 1 — The Brush Roller

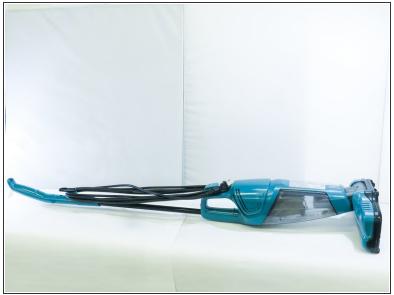



Lay the vacuum so it's facing up.

## Step 2




 Use a Phillips #0 screwdriver to remove each screw.

## Step 3







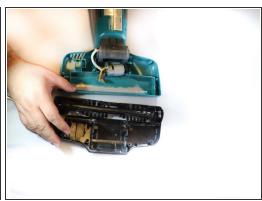

After removing all of the screws pull the vacuum's black cover up to remove it.


## Step 4

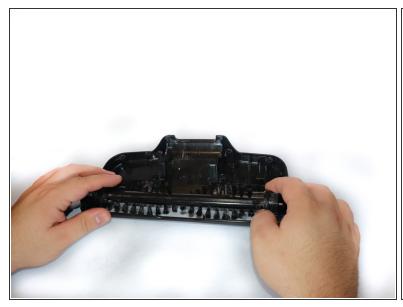

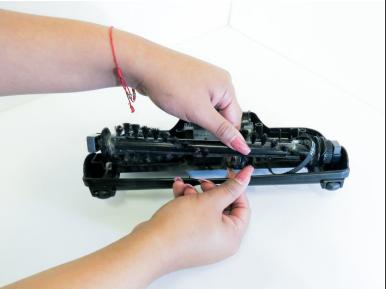

Pull the brush roll up to remove from the black cover.

## Step 5

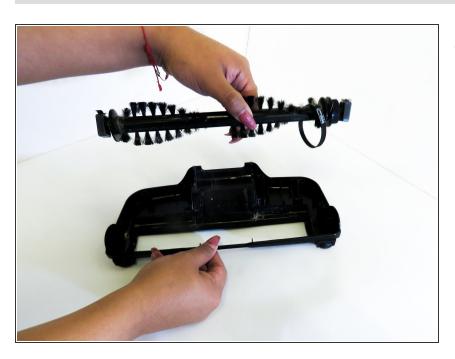

 Replace the brush roll with a new brush roll.

To reassemble your device, follow these instructions in reverse order.