




# Logitech MBJ58 Mouse Buttons Replacement

Use this guide to disassemble the mouse top cover and replace the mouse buttons.

Written By: Maximilian Betkowski

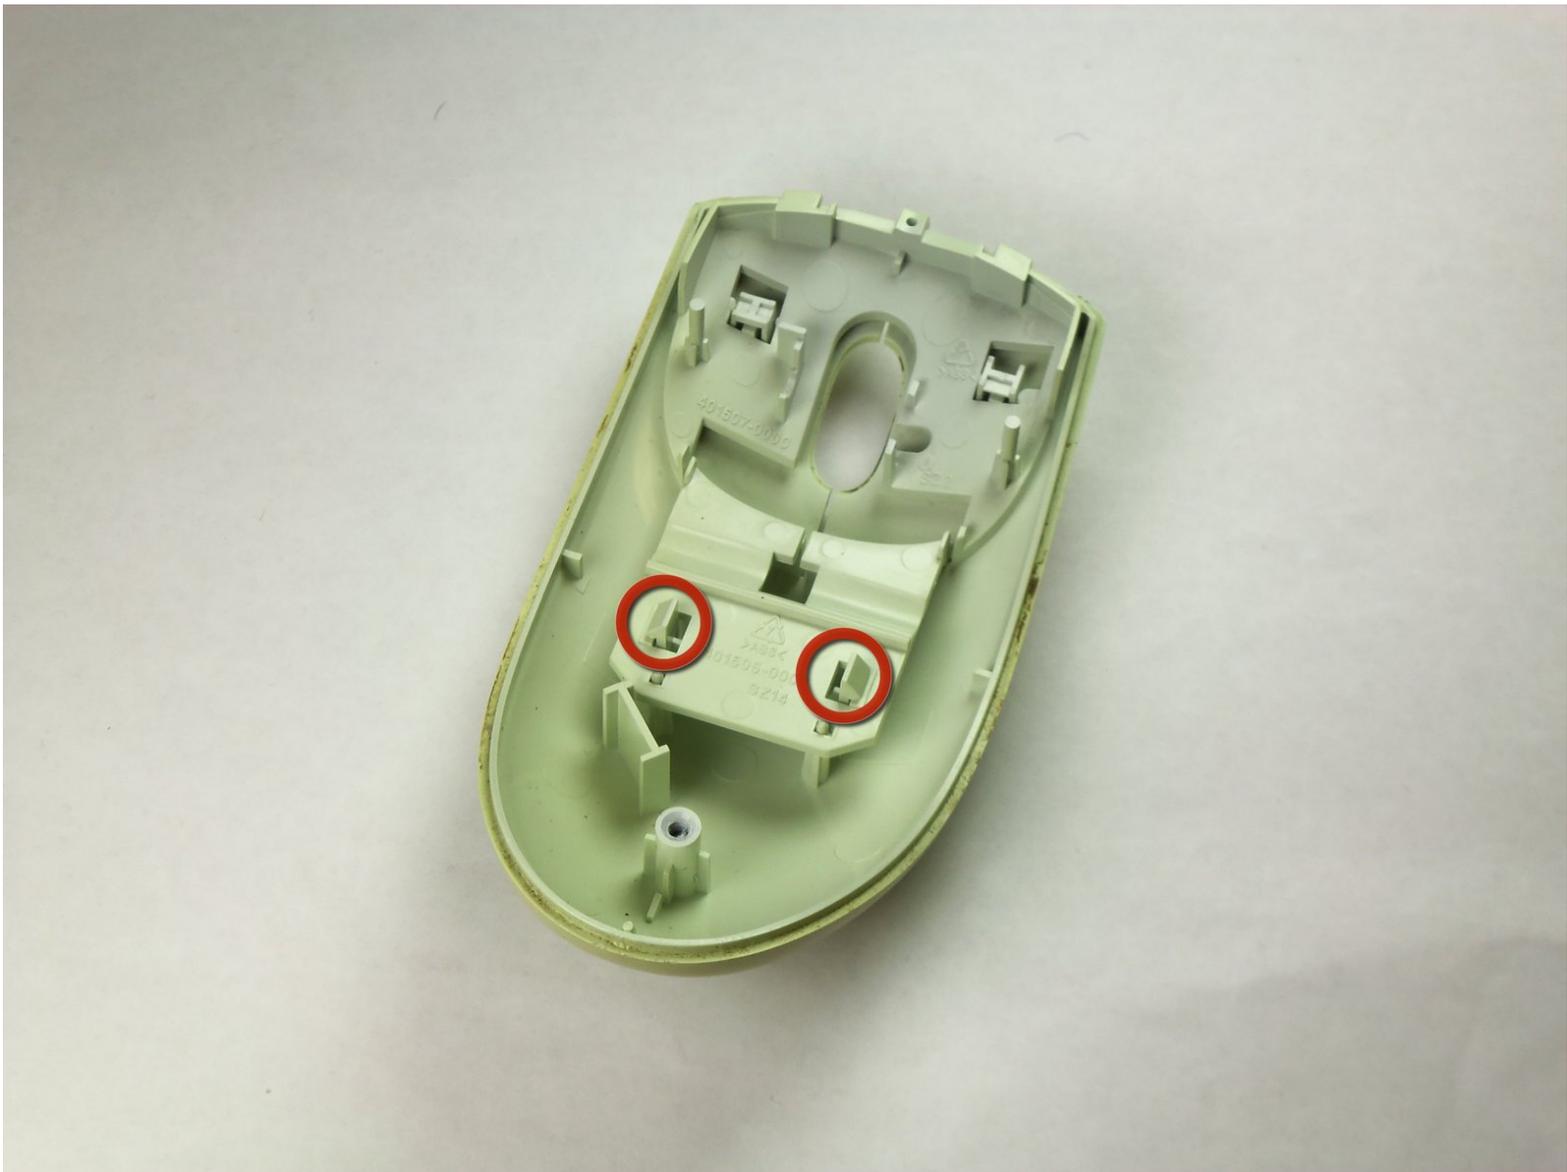

---

## INTRODUCTION

This guide will walk you through the process of removing the top cover of the mouse to replace the mouse buttons.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top cover




- Hold the mouse so that the bottom is facing up.
- Remove the single Phillips #1 screw from the bottom half of the mouse.

## Step 2




- Place the mouse so that the bottom is resting against a hard surface.
- Lift the top cover of the mouse gently, and remove it.

### Step 3 — Buttons

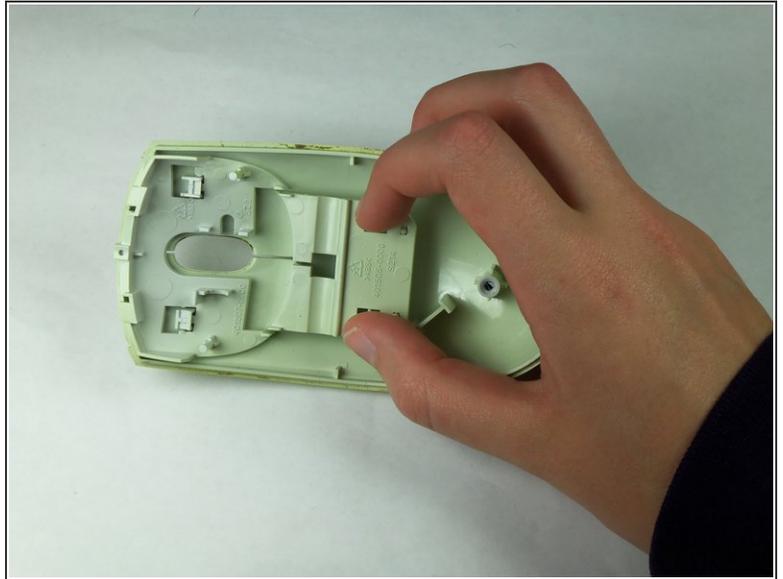

- Locate the two tabs that are protruding from the button assembly.
- ⚠ Be careful not to break either of the two tabs by squeezing too hard.
- Pinch the tabs together to free the buttons.

## Step 4

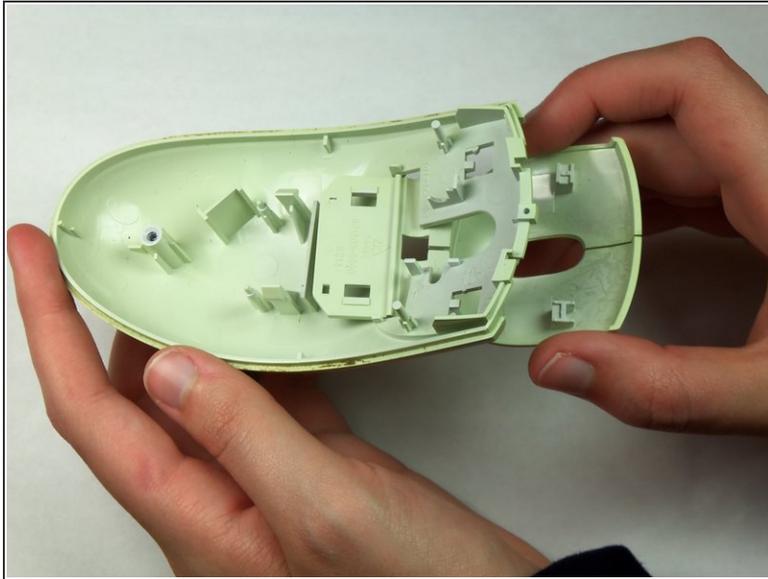

- Remove the button assembly from the top cover by flipping the top cover upside down and pulling the button assembly downward and away from the top cover.
- Slide the button assembly out from the top cover through the opening.
- ⓘ When fully disassembled, the top cover and the button assembly should look like this.

To reassemble your device, follow these instructions in reverse order.