



LG VX5200 Screen Replacement

Written By: jmarcum



INTRODUCTION

This section covers how to disassemble the upper casing of the LG VX5200 to access the phone's screen.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Screen



- Pry the grey pieces of plastic off the corners of the screen with a spudger.

Step 2




- Unscrew each of the four screws with a Phillips #00 Screwdriver.
- ⓘ These screws are the same size as the ones from the back casing, but are not the same size as the screw from the antenna.
- ☑ These screws are the same size as the ones from the back casing, but are not the same size as the screw from the antenna.

Step 3




- Close the phone after removing the screws.
 - Slide a spudger into the cracks in the top half of the phone's casing.
 - Wedge and lever the spudger to remove the casing.
- ☑ Apply constant pressure to avoid cracking the plastic casing. This step can take a few minutes.

Step 4

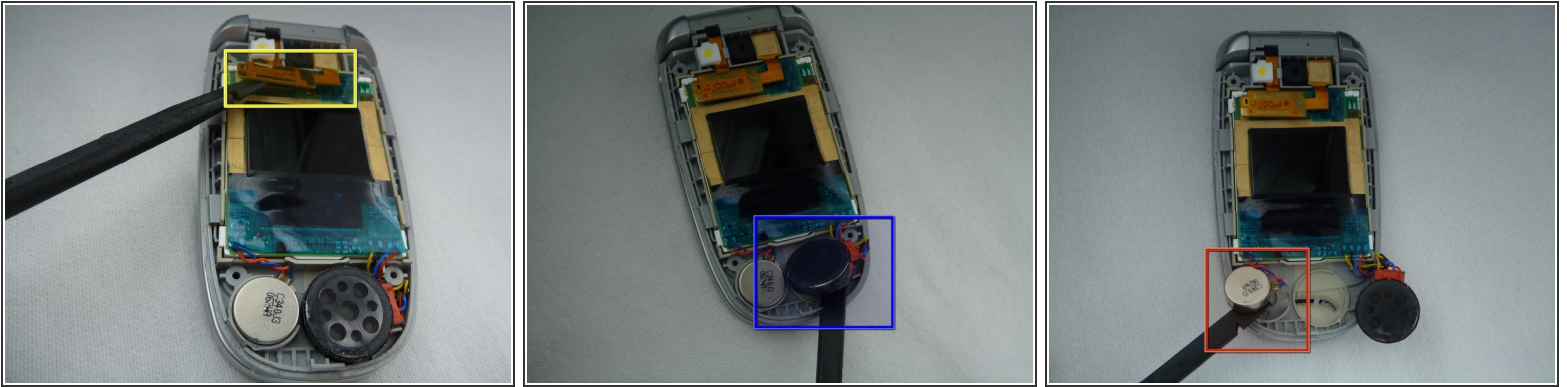

- Remove the chipboard from the screen by sliding a plastic spudger under the screen and lifting.
- ⚠ Use a plastic spudger to avoid short-circuiting the phone's electronics.
- Gently lift the speaker out of the plastic casing using a plastic spudger.
- Remove the small battery adjacent to the speaker with a plastic spudger.

Step 5

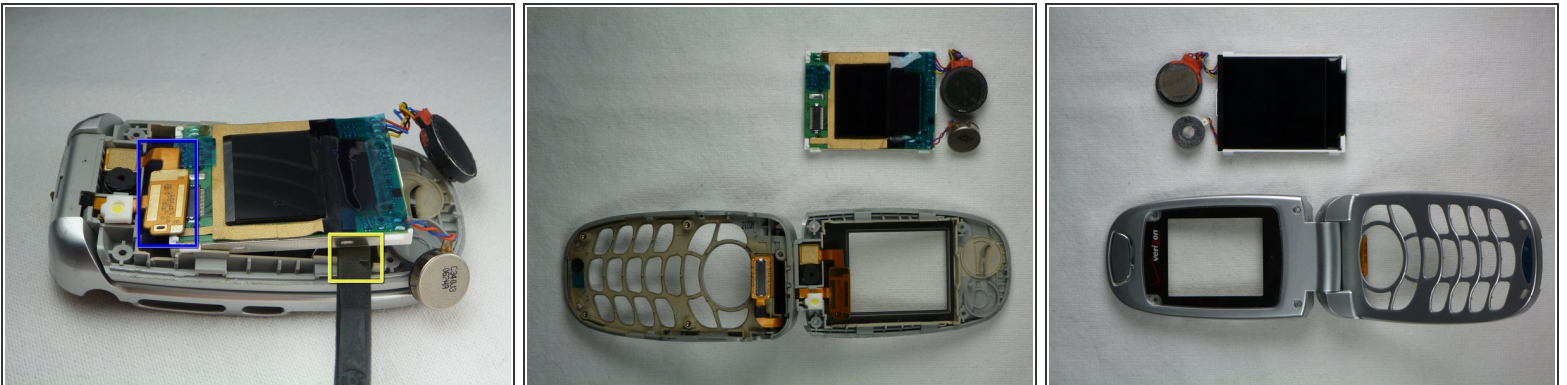

- Slide and lever a plastic spudger between the screen and it's housing.
- ⚠ Avoid tearing the wires connecting the screen, the small battery and the speaker.
- Remove the chip connecting the screen to the camera using your fingers.

To reassemble your device, follow these instructions in reverse order.