


# Lenovo Yoga 720-15IKB RAM Replacement

This guide shows you how to replace the Lenovo...

Written By: Shaina Bagri

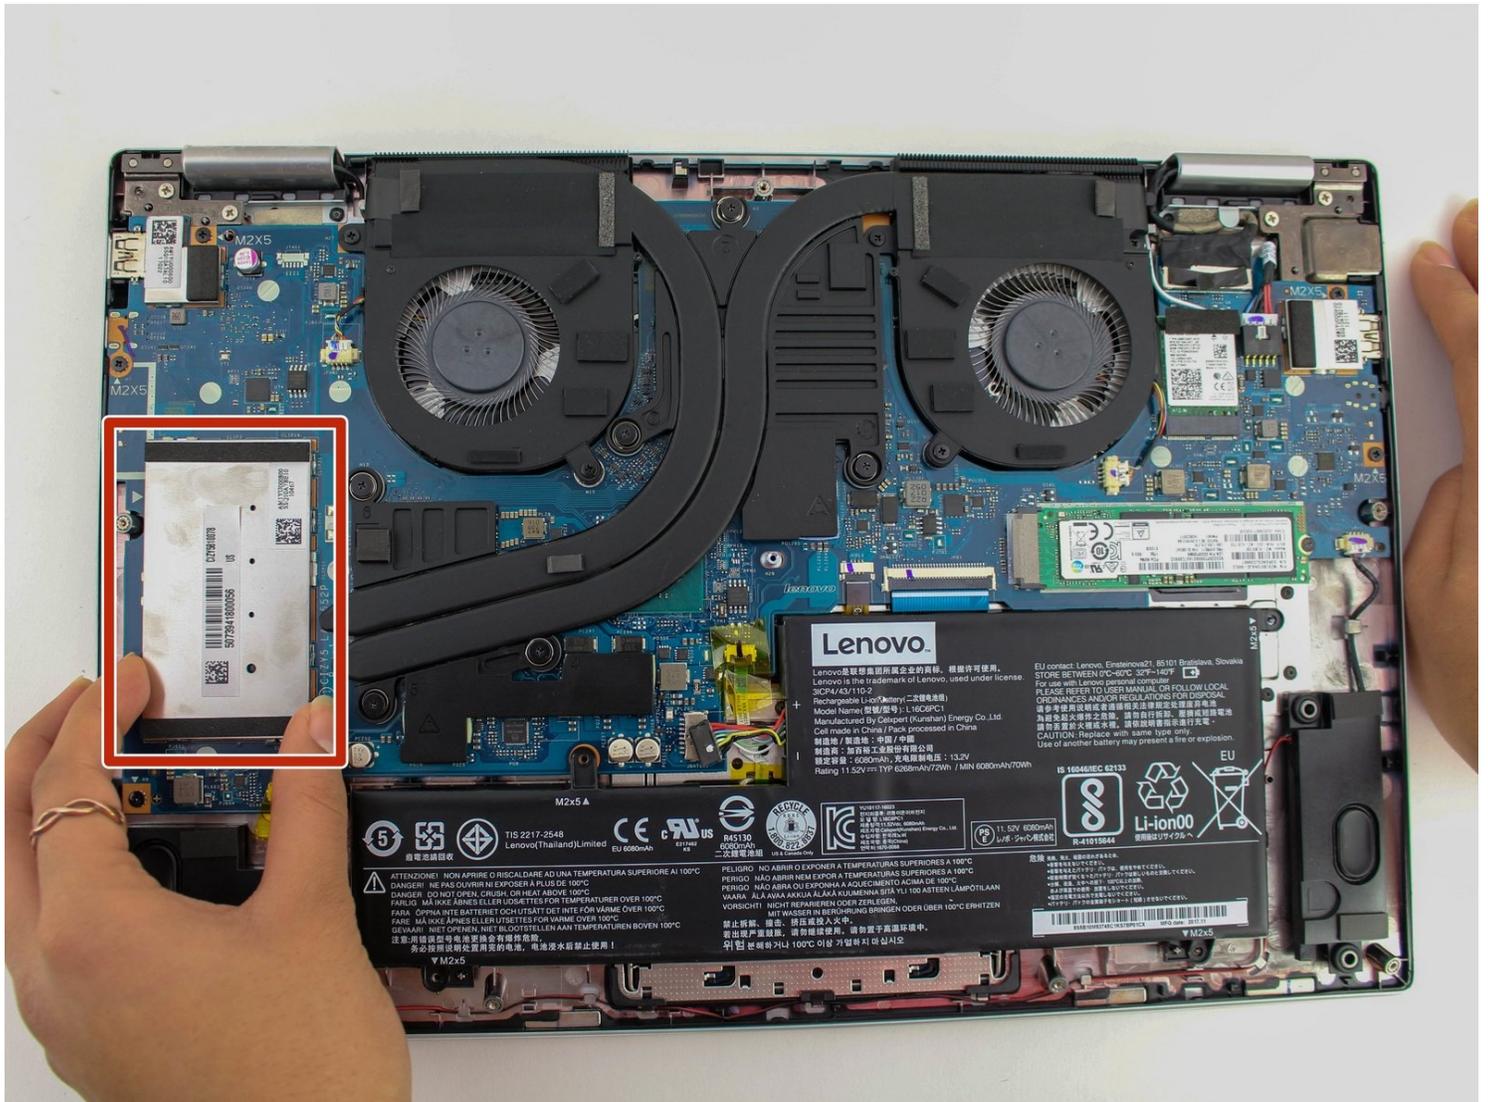

# INTRODUCTION

This guide shows you how to replace the Lenovo Yoga 720 15-IKB (88YG7000828) RAM. This laptop is very similar to the Lenovo Yoga 720 13-inch , the Yoga 710, and the Yoga 730. The RAM replacement for all of these models will be similar. The RAM stands for Random Access Memory, and is the computer's short-term digital storage. The RAM is usually durable and rarely needs to be replaced.

## 🔧 TOOLS:

[T5 Torx Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)  
[iFixit Opening Picks \(Set of 6\)](#) (1)

## ⚙️ PARTS:


[01AG843 - Lenovo Laptop Memory - Genuine](#) (1)

## Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.

## Step 2

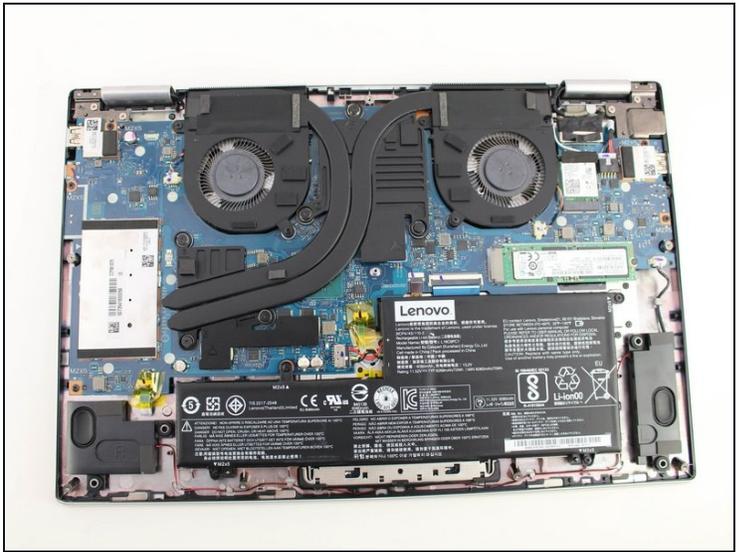

- Pry around the edges from one side to another with a plastic opening tool.


⚠ Do not pry on the side with the hinges because this can break the cover.

- Lift the case from the front until you feel resistance.

⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.


- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.

## Step 3 — RAM

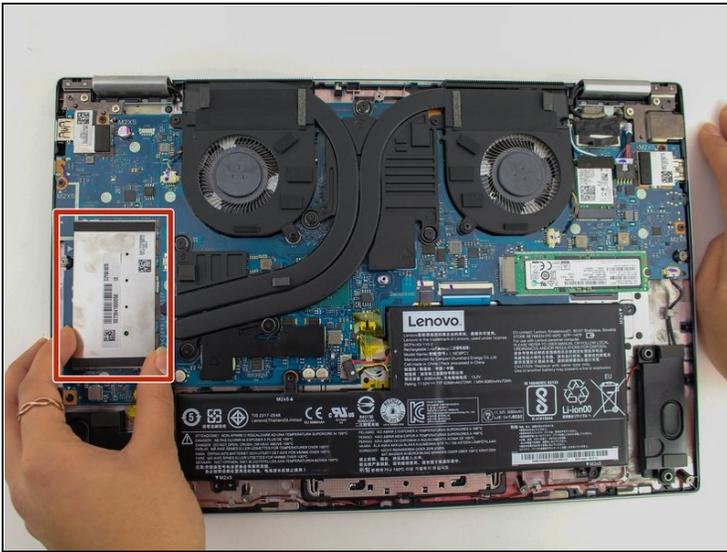

- Use your fingers to pry the RAM cover loose and remove it.
  - ⓘ If you are having trouble prying the cover loose with your fingers, use a plastic opening tool.
  - ☑ When refitting the RAM cover, make sure that the cover maintains the same orientation and lines up with the tabs surrounding the RAM.

## Step 4

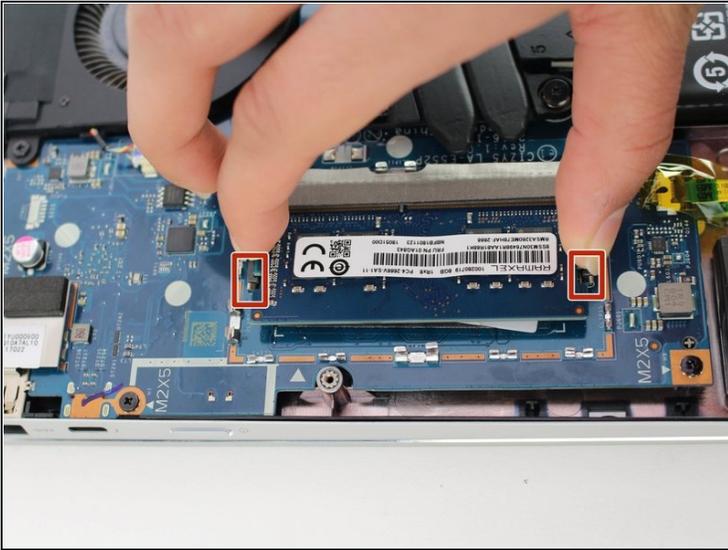

- Push outwards on the levers holding the short edges of the RAM in place. This will release the RAM.
- Gently pull the RAM out, diagonally up and away from the socket.

---

To reassemble your device, follow these instructions in reverse order. Make sure to align the RAM cover with the tabs when popping it back on.