




Casio fx-580VNX Battery Replacement

Written By: Nazomi

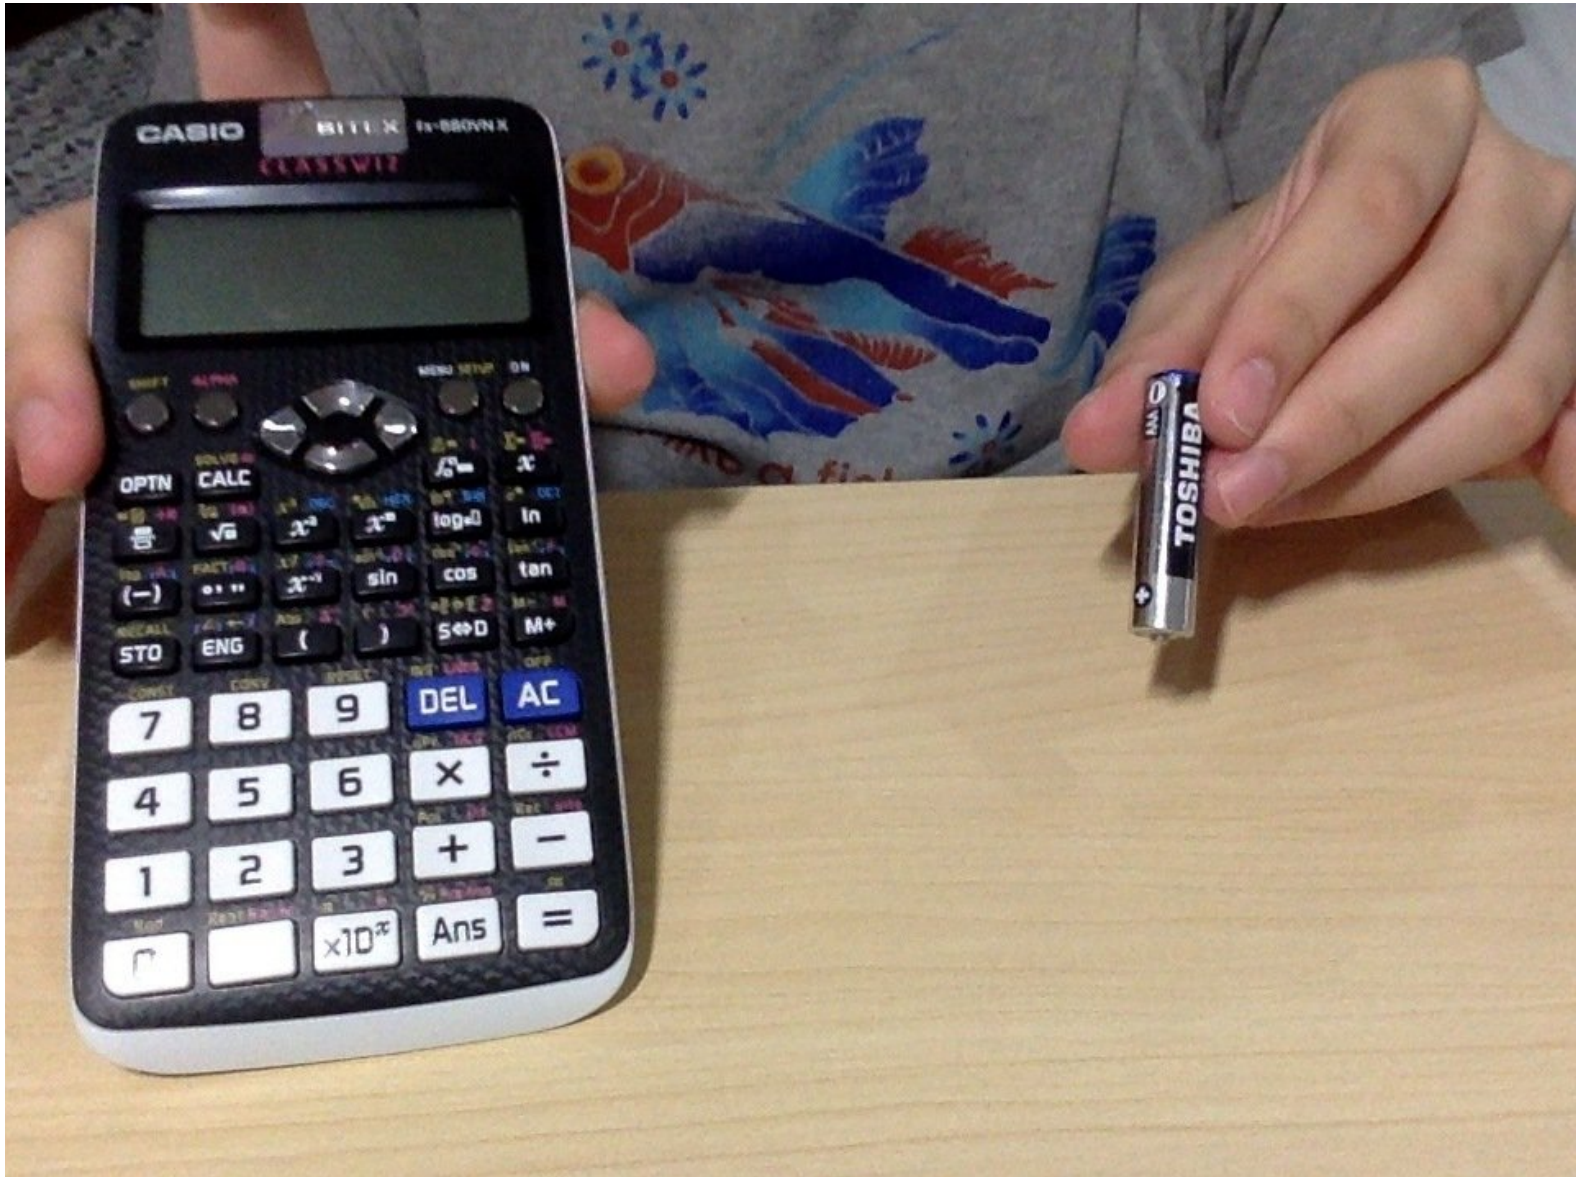

INTRODUCTION

In the process of using Casio calculator, if you see the figures appear blurred, the battery is weak. Now you need to replace the battery for the computer, because otherwise it will give incorrect calculation results. How to replace the Casio computer battery is very simple, you refer to the following article to learn how to replace the Casio computer battery at home.



TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
-

Step 1 — Operate Shift+OFF key



- The safest way to replace battery. Turn off is simple.
- ⚠ Do not replace the battery when it is on. If you do it, it maybe have a battery risk.

Step 2 — Remove 6 Philips Screw




- Remove 6 Philips screw to take the cover off.

Step 3 — Open the case




- Carefully remove the case or the cover. Don't remove too much power.

Step 4 — Remove a Old Battery

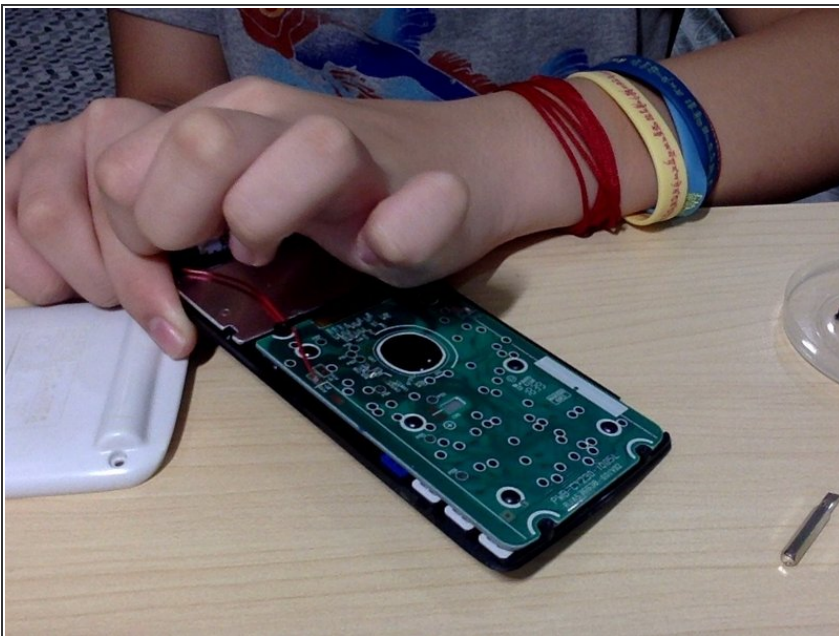

- Removing the battery is the way to replace a new battery. You can remove our old battery to new battery.

Step 5 — Battery removed

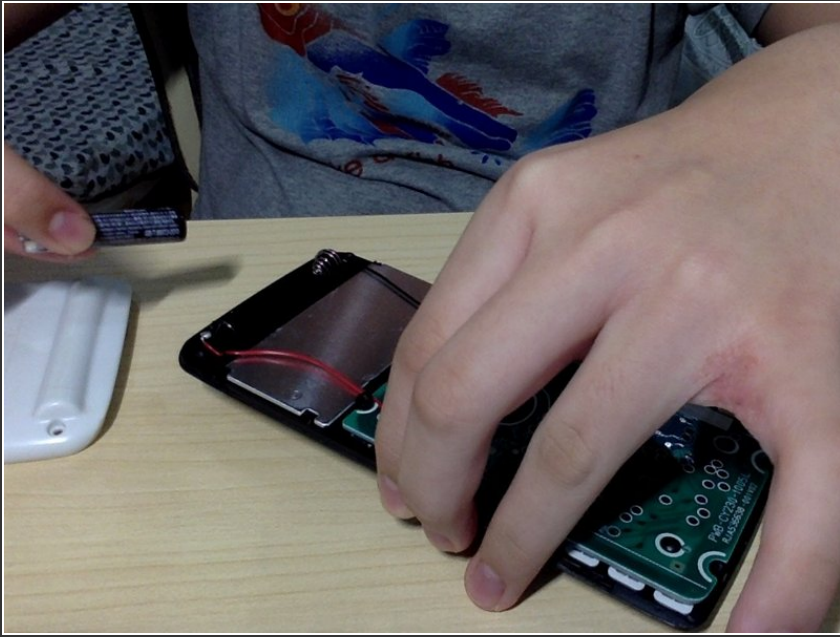

- The old battery have removed. You can replace with the new battery.

Before you use the calculator after replacing, operate the key: Shift+9(Reset), press 3 then press =.

To reassemble your device, follow these instructions in reverse order.