



Water Filtration System Filter Replacement

How to change a filter in a water filtration system.

Written By: Tahj Ramirez



INTRODUCTION

Need to know how to replace the filter for a water filtration system? I am going to show you how to do this so that you can drink clean, filtered water. There is no risk during this procedure and it is simple; no background experience is needed. This is a helpful guide to show you how to replace a used water filter.

Note: Filters need to be changed every three months, otherwise the water will be undrinkable and can pose health risks.



TOOLS:

- [Canister Wrench](#) (1)



PARTS:

- [Unused Water Filter](#) (1)

Step 1 — Filter



- Turn off water supply.

Step 2




- Press the button on the top of the filtration device to release water pressure and let excess water drain.

Step 3



- Unscrew the filter canister using the canister wrench.

Step 4

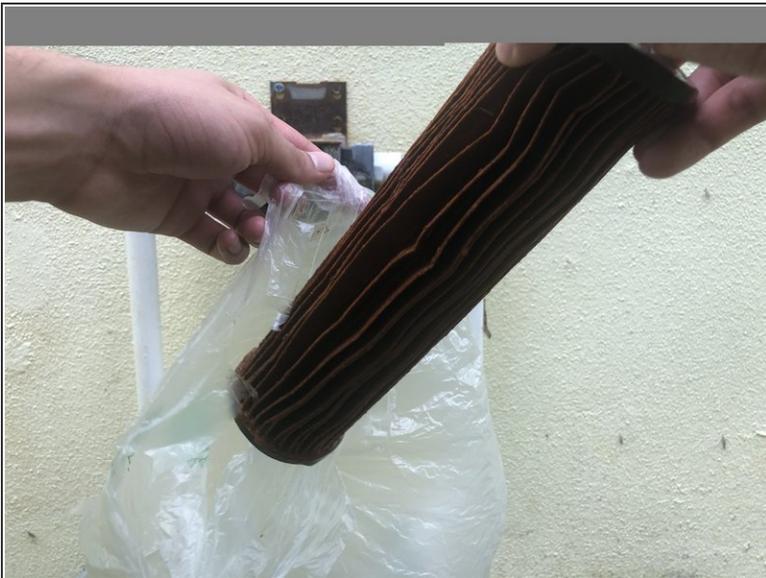

- Take out the old filter and discard it.

Step 5



- Clean out the inside of the filter canister with soap and water.

Step 6



- Put the new filter inside the filter canister, making sure it goes in properly.

Step 7



- Screw the filter canister back into place using the canister wrench, making sure it's tightly screwed in.

Step 8



- Turn the water supply back on.

Step 9



- Press the button on the top of the device to release any air trapped inside.

You have now successfully replaced your water filter.