



Motorola i560 Keypad Replacement

This guide will provide a step by step removal of the keypad on the Motorola i560

Written By: Haley S



INTRODUCTION

Keypad installation can be used to replace a worn keypad or a keypad that is misaligned.



TOOLS:

- [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Place thumb on the rubber tab on the lower back of the phone.
- Push away from the phone to release back panel.

Step 2




- Lift the back panel of the phone to expose battery (not shown here).

Step 3 — Motherboard

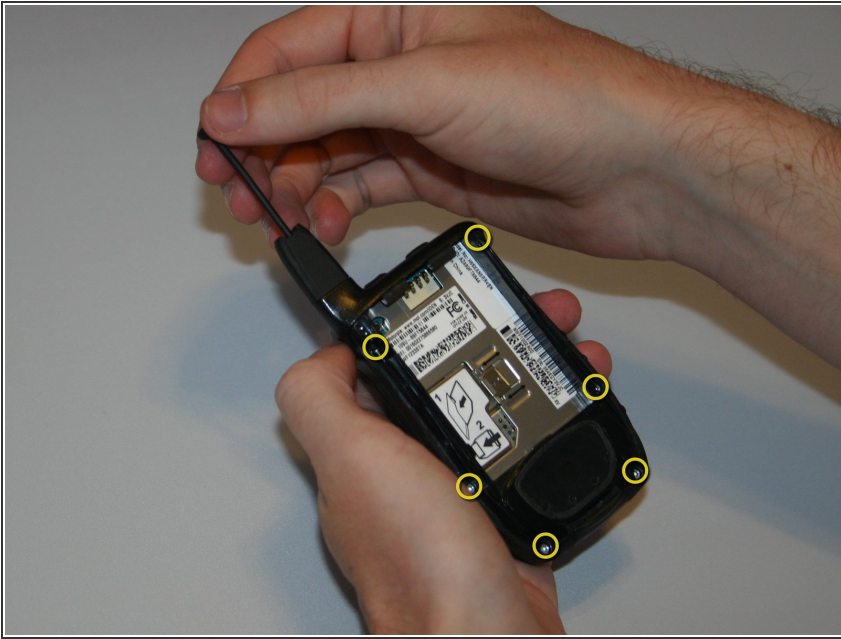

- Pull the antenna up to reveal two of the six screws.

Step 4

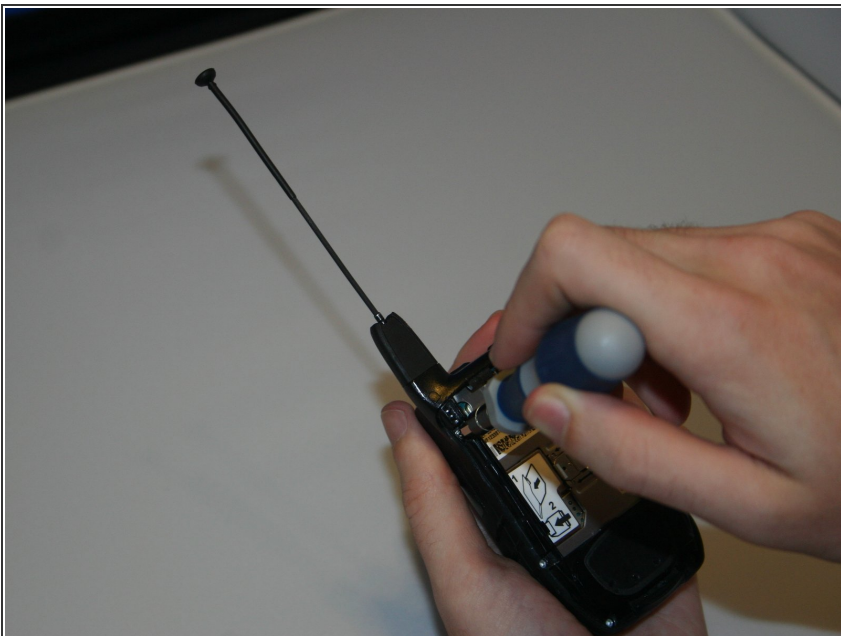

- Unscrew all six screws on the back side of the phone using a T-6 bit.

Step 5



- Gently separate the front and back sides of the phone, as shown in the picture.



⚠ Be careful not to break or bend the ribbon cables.

Step 6



- Detach the first ribbon cable by unplugging it from the motherboard.

Step 7

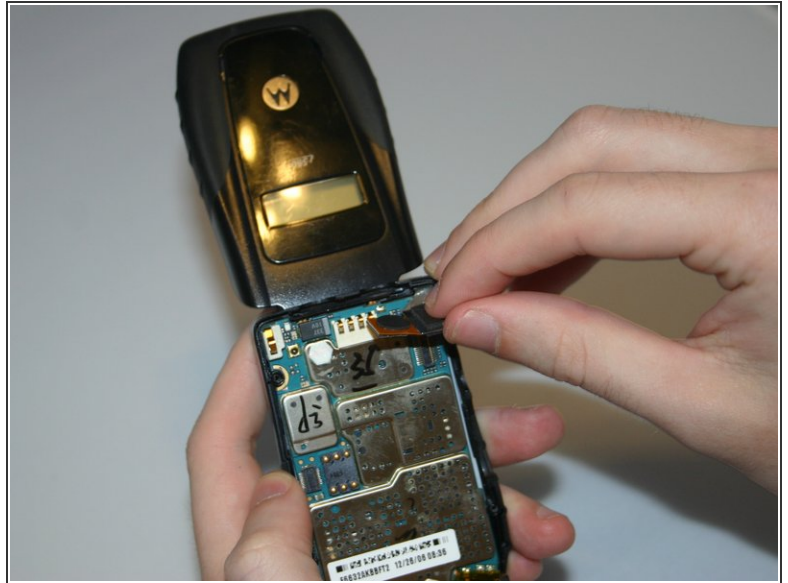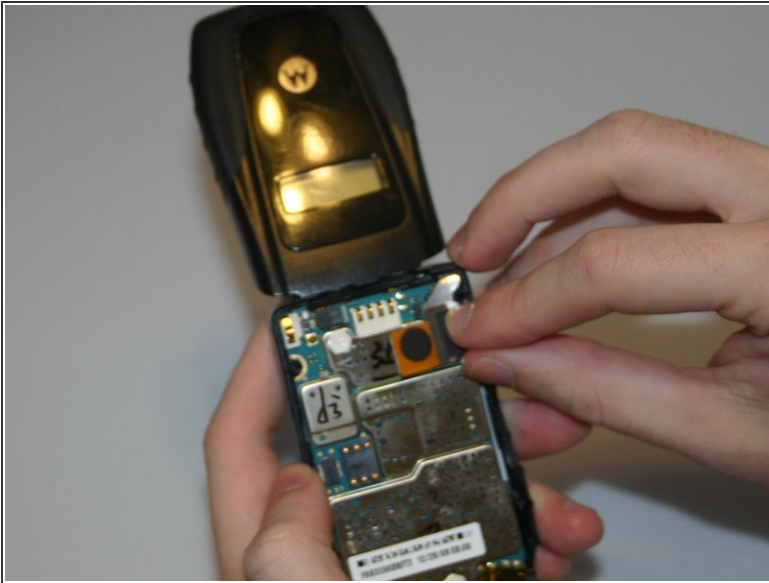

- Detach the speaker ribbon cable from the motherboard.

Step 8



- Remove the motherboard from the front half of the phone by gently shaking it loose. It should come out with little to no trouble.

Step 9 — Keypad



- Push lightly from the front of the keypad to remove it.

To reassemble your device, follow these instructions in reverse order.