




Sanyo Katana Screen Replacement

This guide will instruct on how to replace the LCD screen for the Sanyo Katana.

Written By: Aliceann

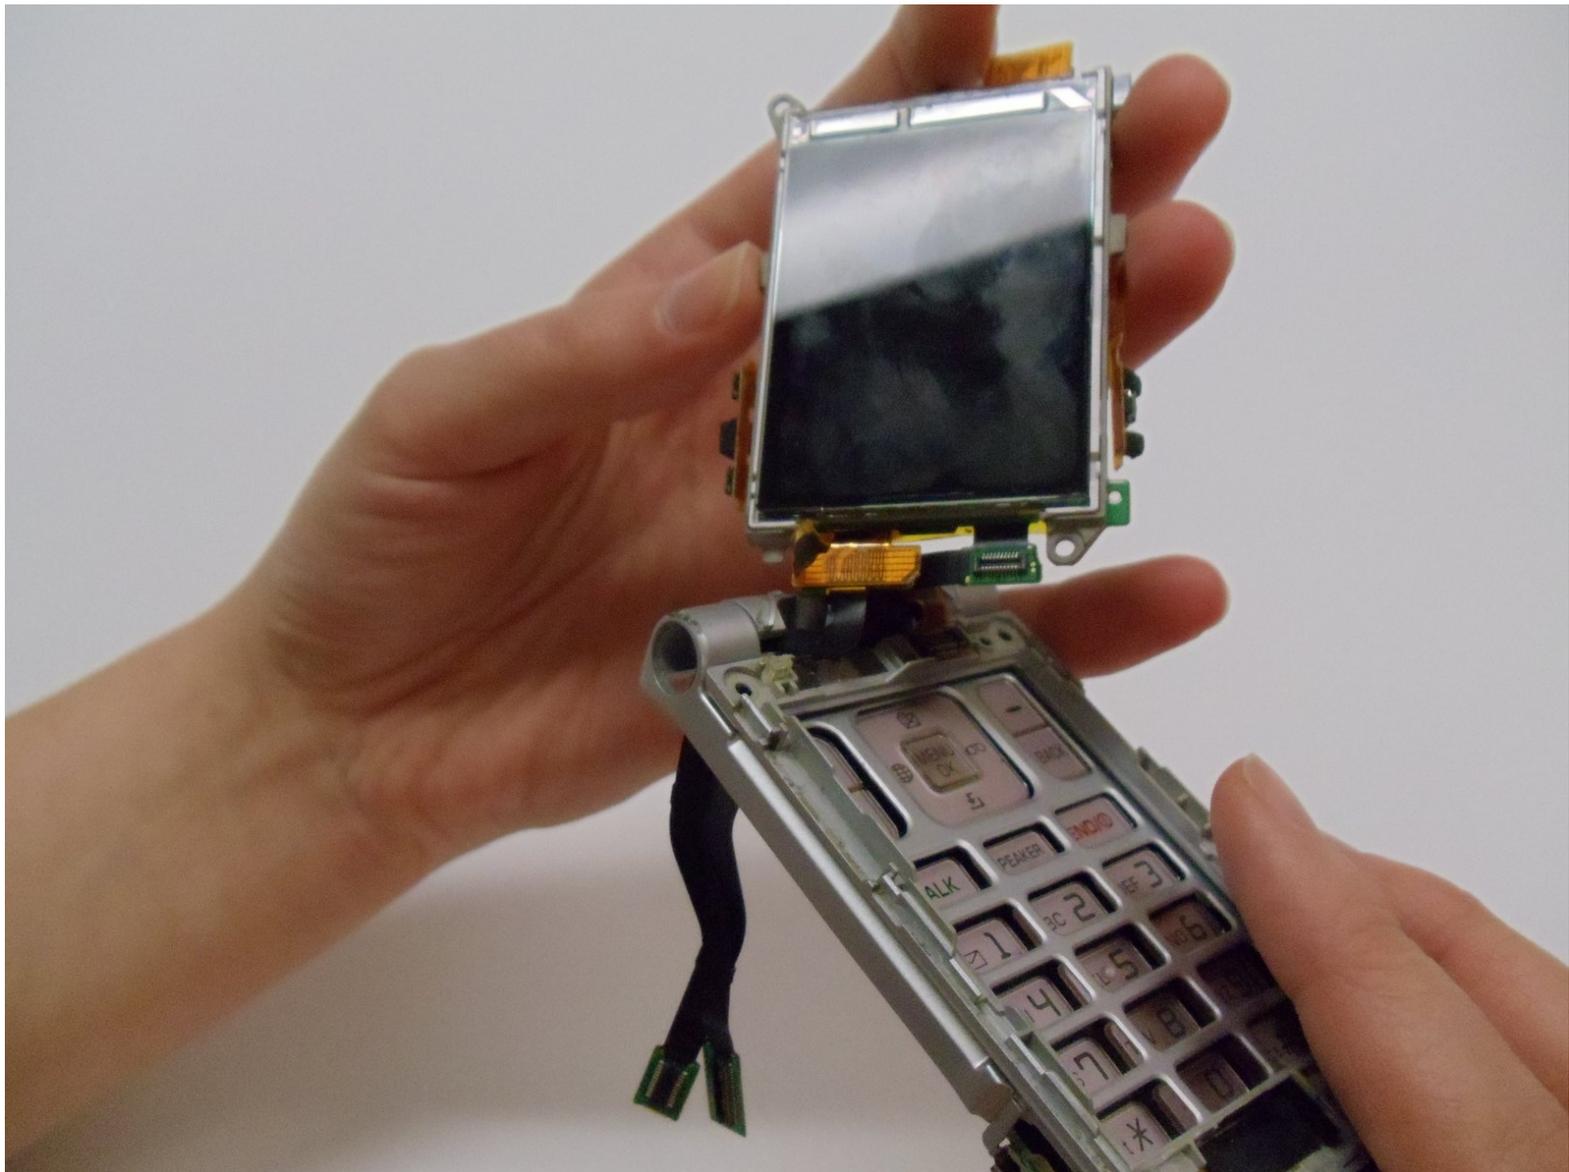


INTRODUCTION

After removing the screen protector, the actual LCD screen of the device can now be removed. This will involve disconnecting various ribbons and cables from the device.

TOOLS:

- [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Screen Protector

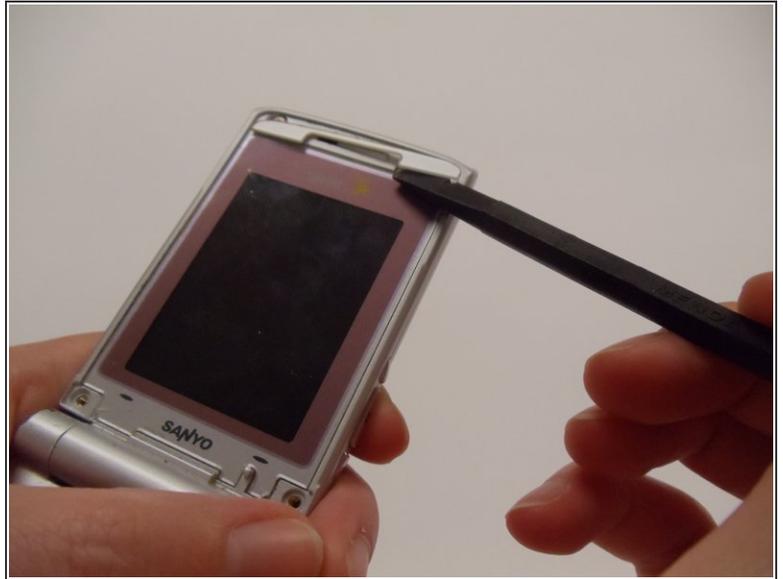


- With the flat end of a spudger, remove the plastic covers located on the corners of the display near the hinge and above the screen, revealing four screws underneath.

Step 2




- Remove the 4.4mm screw in each corner using the Tri-wing Y0 screwdriver.

Step 3

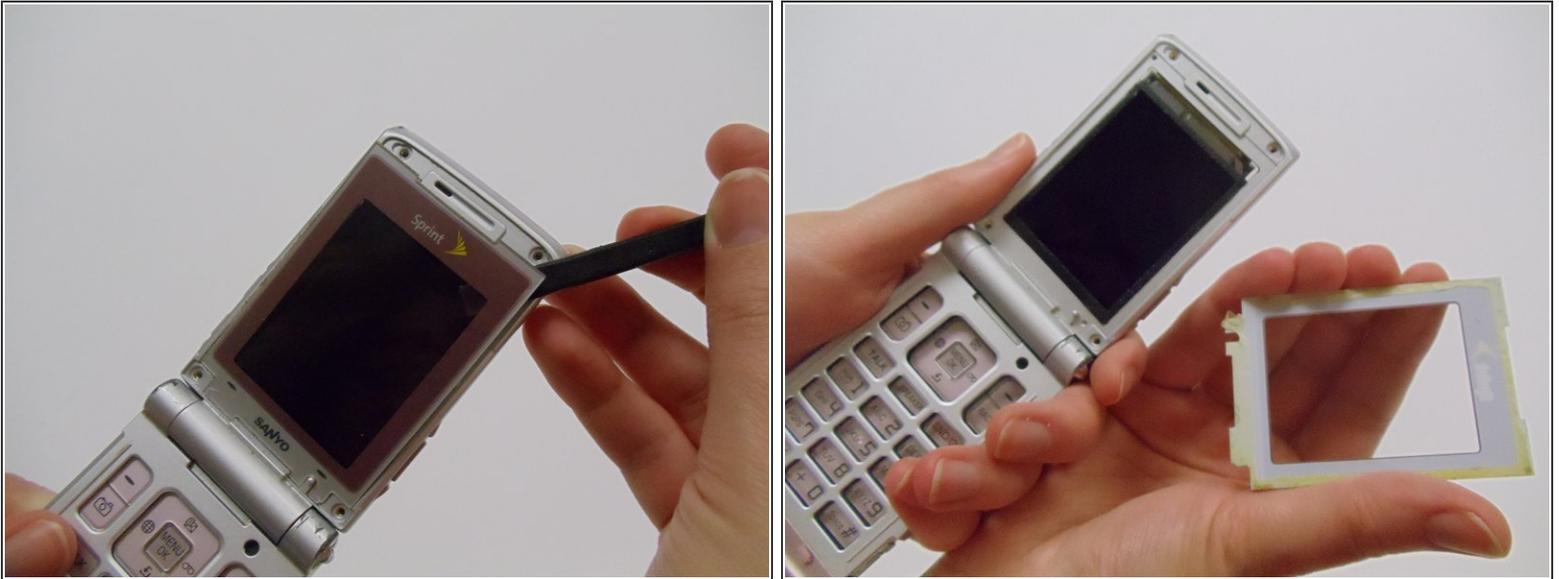



- Carefully pry the screen protector off the phone using the flat end of the spudger.
 - ⚠ This will require a bit of force as the back of the screen protector is lined with an adhesive material.
- Once free from the adhesive, pull the screen protector away from the phone.

Step 4 — Front Case

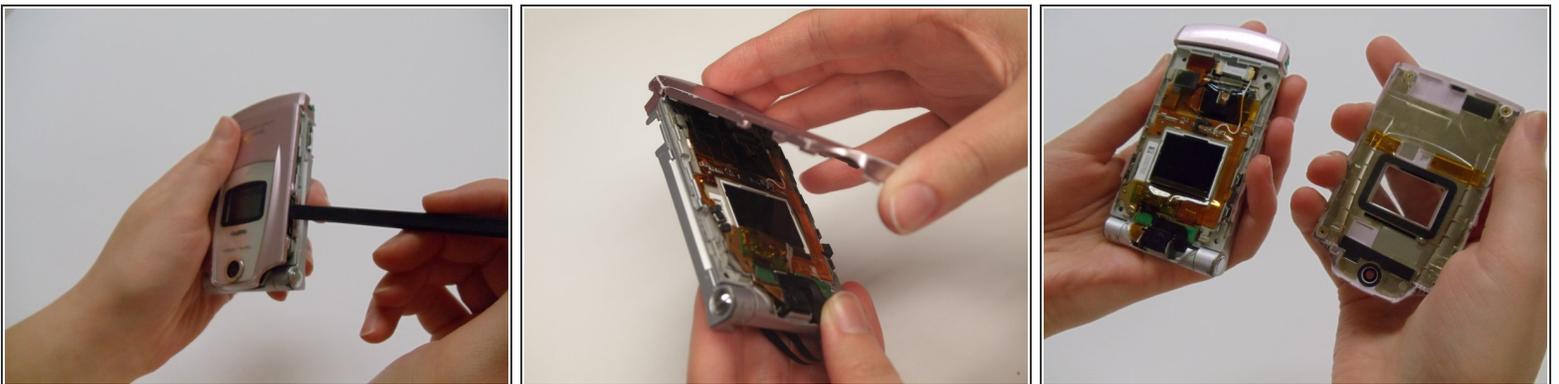




- Use the spudger to pry off the front case from the left and right sides of the device.
- Once it has popped off, pull the casing apart with fingers.

Step 5 — Screen

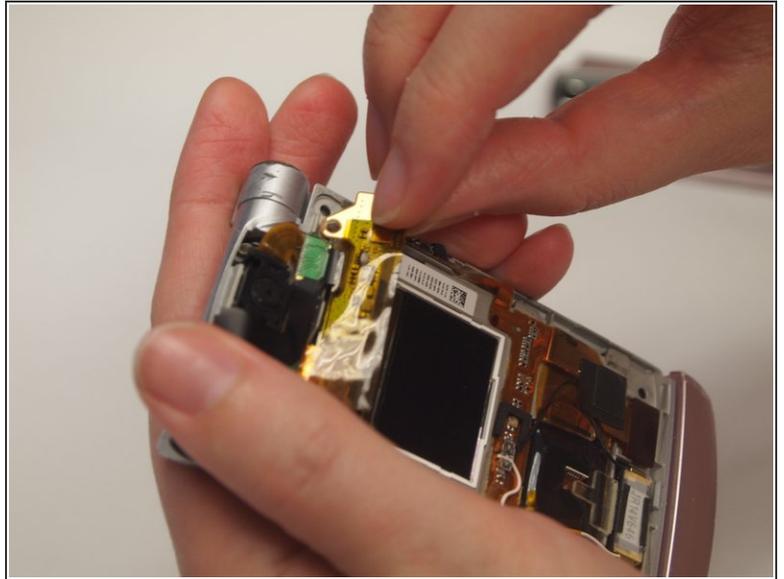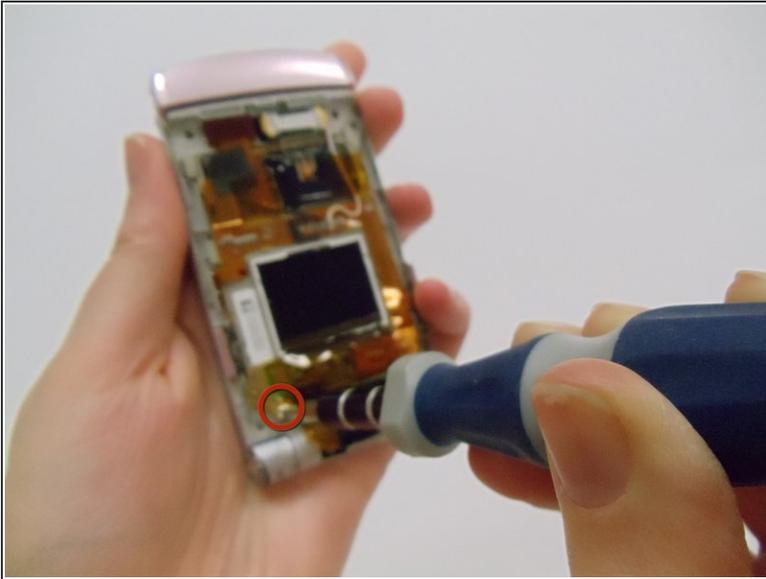



- Using a Tri-wing Y0 screwdriver, remove the 4.4mm screw.
- Use fingers to remove the strip from the device.

Step 6

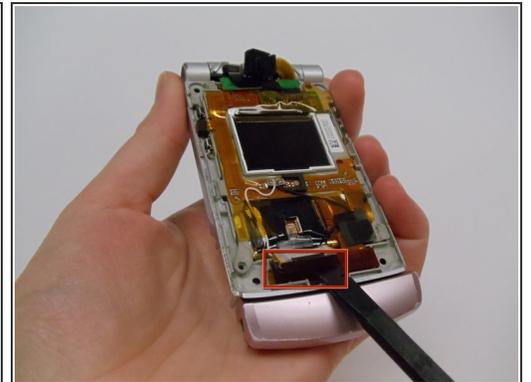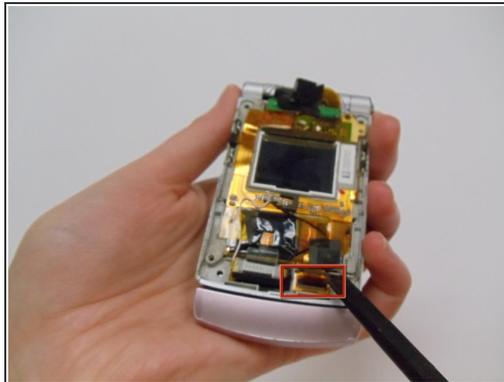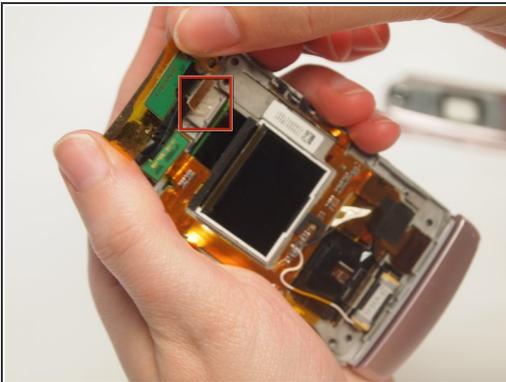

- Use a spudger to detach all of the connections to the motherboard in the back of the phone by the screen.

Step 7

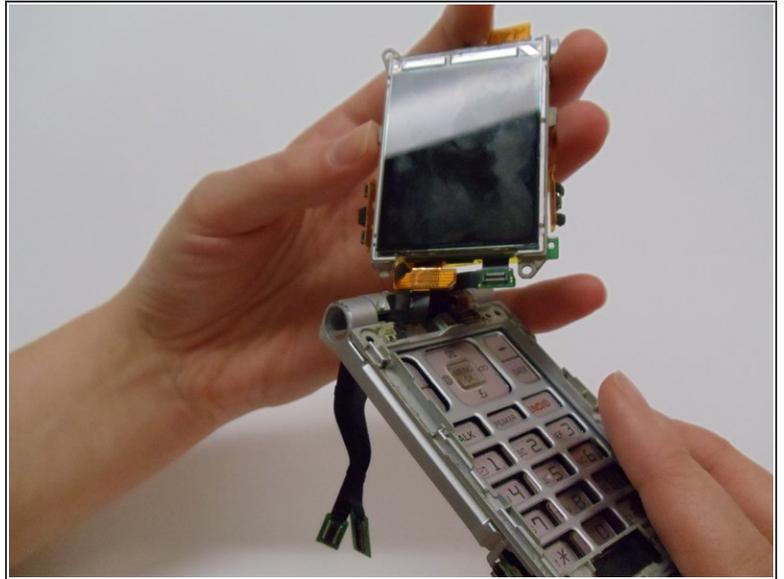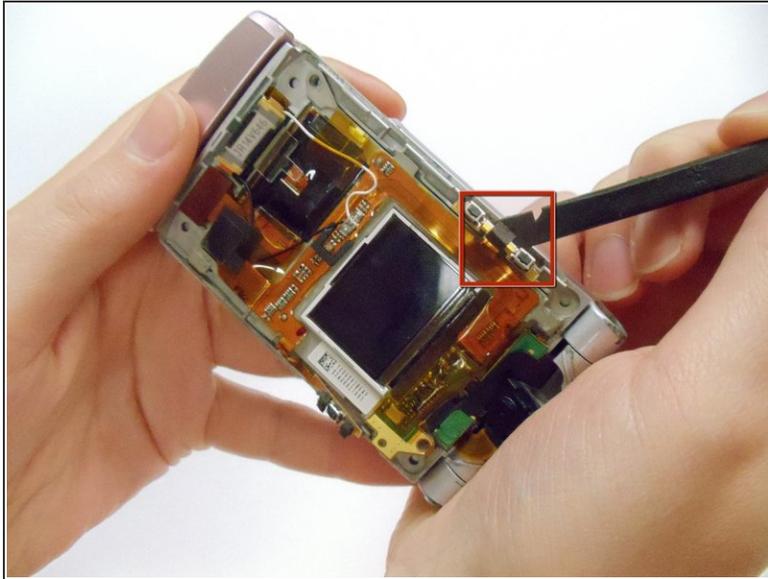

- Use the flat edge of the spudger to detach the screen from the phone casing.
- Pull the screen up and away from the case.

To reassemble your device, follow these instructions in reverse order.