



# Toshiba Satellite A205-S4577 Speaker Cover Replacement

This guide explains how to remove the speaker cover.

Written By: Daniel Johnson



---

## INTRODUCTION


The speaker cover, located above the keyboard, can be removed by following these simple steps.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

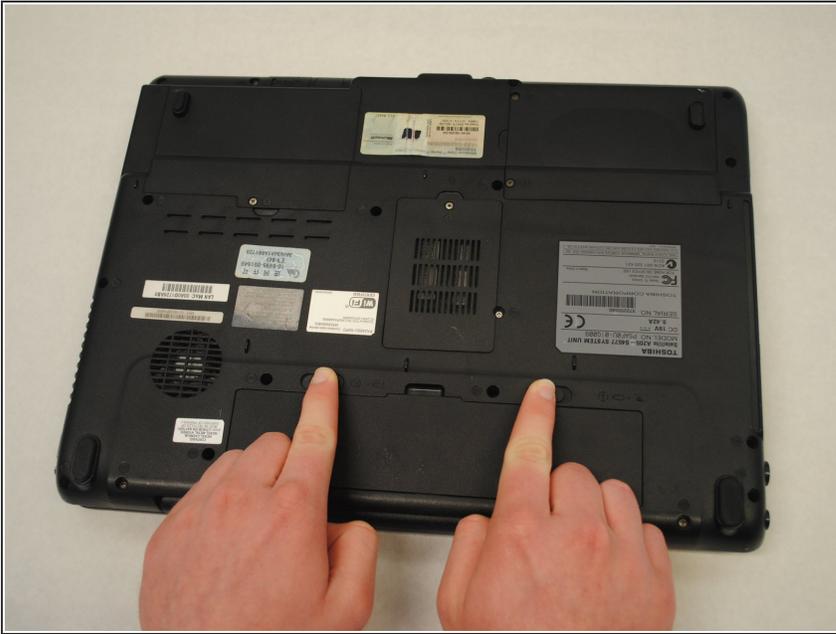

- Locate the two sliding locks indicated in the photo.
- Slide the right lock (labeled "1") to the right. It will remain in the unlocked position.
- Slide the left lock (labeled "2") to the left and hold it in place.

## Step 2




- While holding the left lock, place your finger in the indentation next to the battery and lift the battery out.

### Step 3 — Speaker Cover




- Remove the four screws indicated in the photos using a Phillips 00 Screwdriver. Left to right: 6mm button-head, 3mm flat-head, 6mm button-head, 6mm button-head.

### Step 4

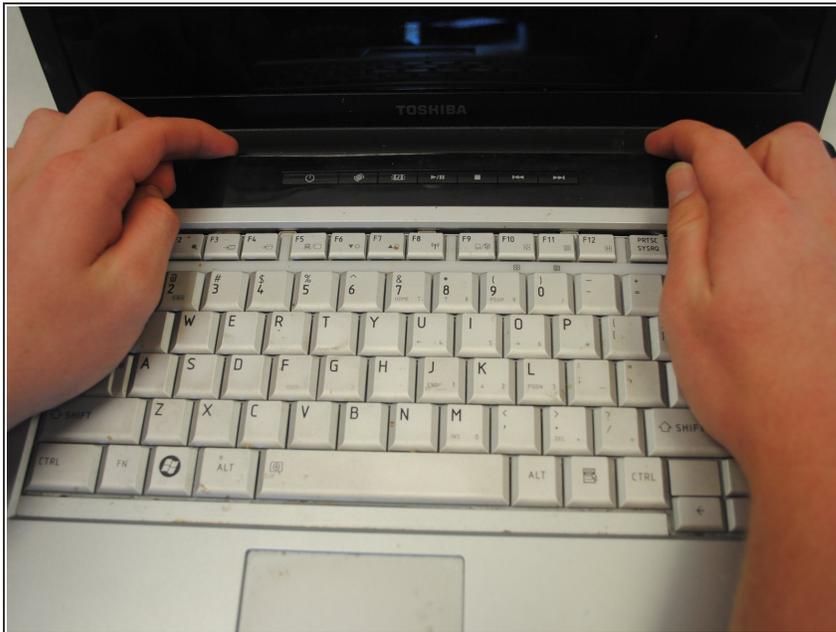

- With your hands, grasp the speaker cover on the edge nearest to the screen.
- Pry the speaker cover upward.

## Step 5

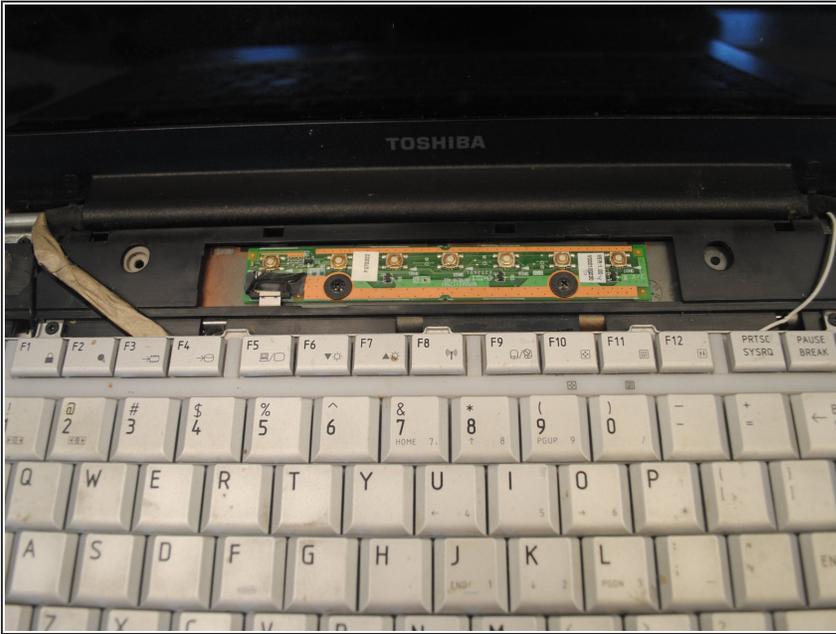

- Remove the speaker cover. Your laptop will look like this photo when the speaker cover has been removed.

To reassemble your device, follow these instructions in reverse order.