



Safety Precautions

Prereq-only guide to prepare the MiTM Air Compressors AM1PH6508HD 2012 for service.

Written By: Kyle Smith



INTRODUCTION

Prereq-only guide to prepare the MiTM Air Compressors AM1PH6508HD 2012 for service.



Step 1 — Turn off the engine



 Before you begin, make sure the device is powered down and cool to the touch.


- Flip the engine switch into the **OFF** position.

Step 2 — Disconnect the spark plug

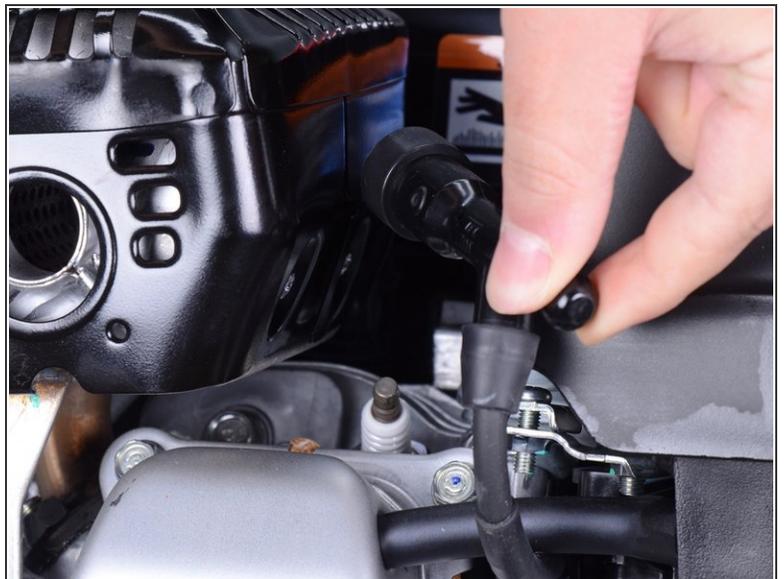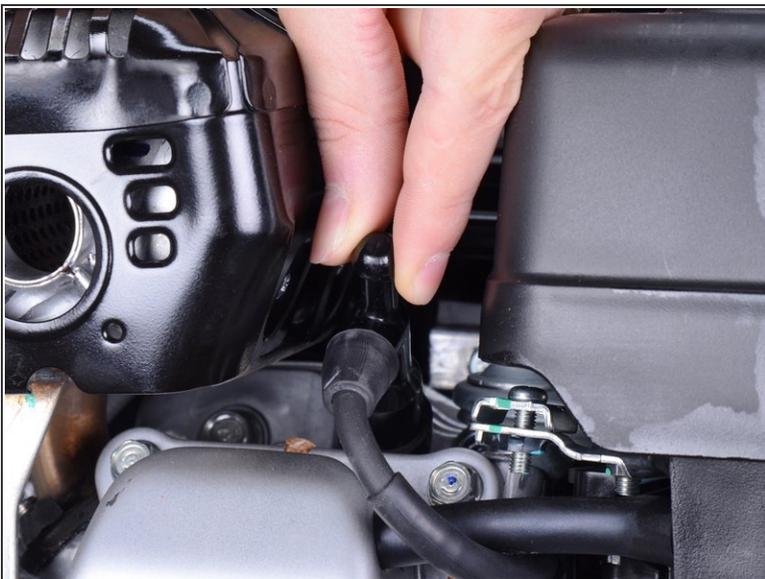

- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

Step 3 — Drain the compressor tank

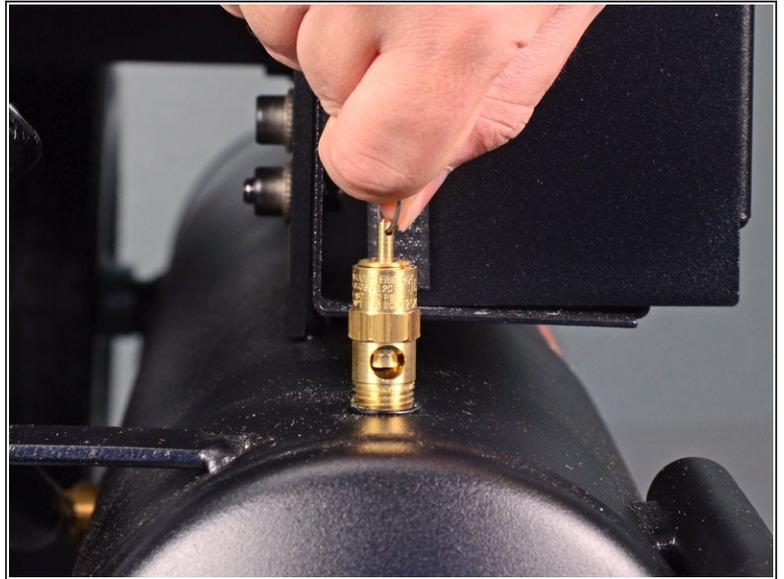

- Pull the ring on the safety relief valve away from the compressor tank to drain the air from the compressor.
- ⓘ Ensure the tank is completely depressurized before starting repairs.

To reassemble your device, follow these instructions in reverse order.