




# Samsung Mythic SGH-a897 Daughterboard Replacement

This guide will give instructions on removing...

Written By: Collin Gordon

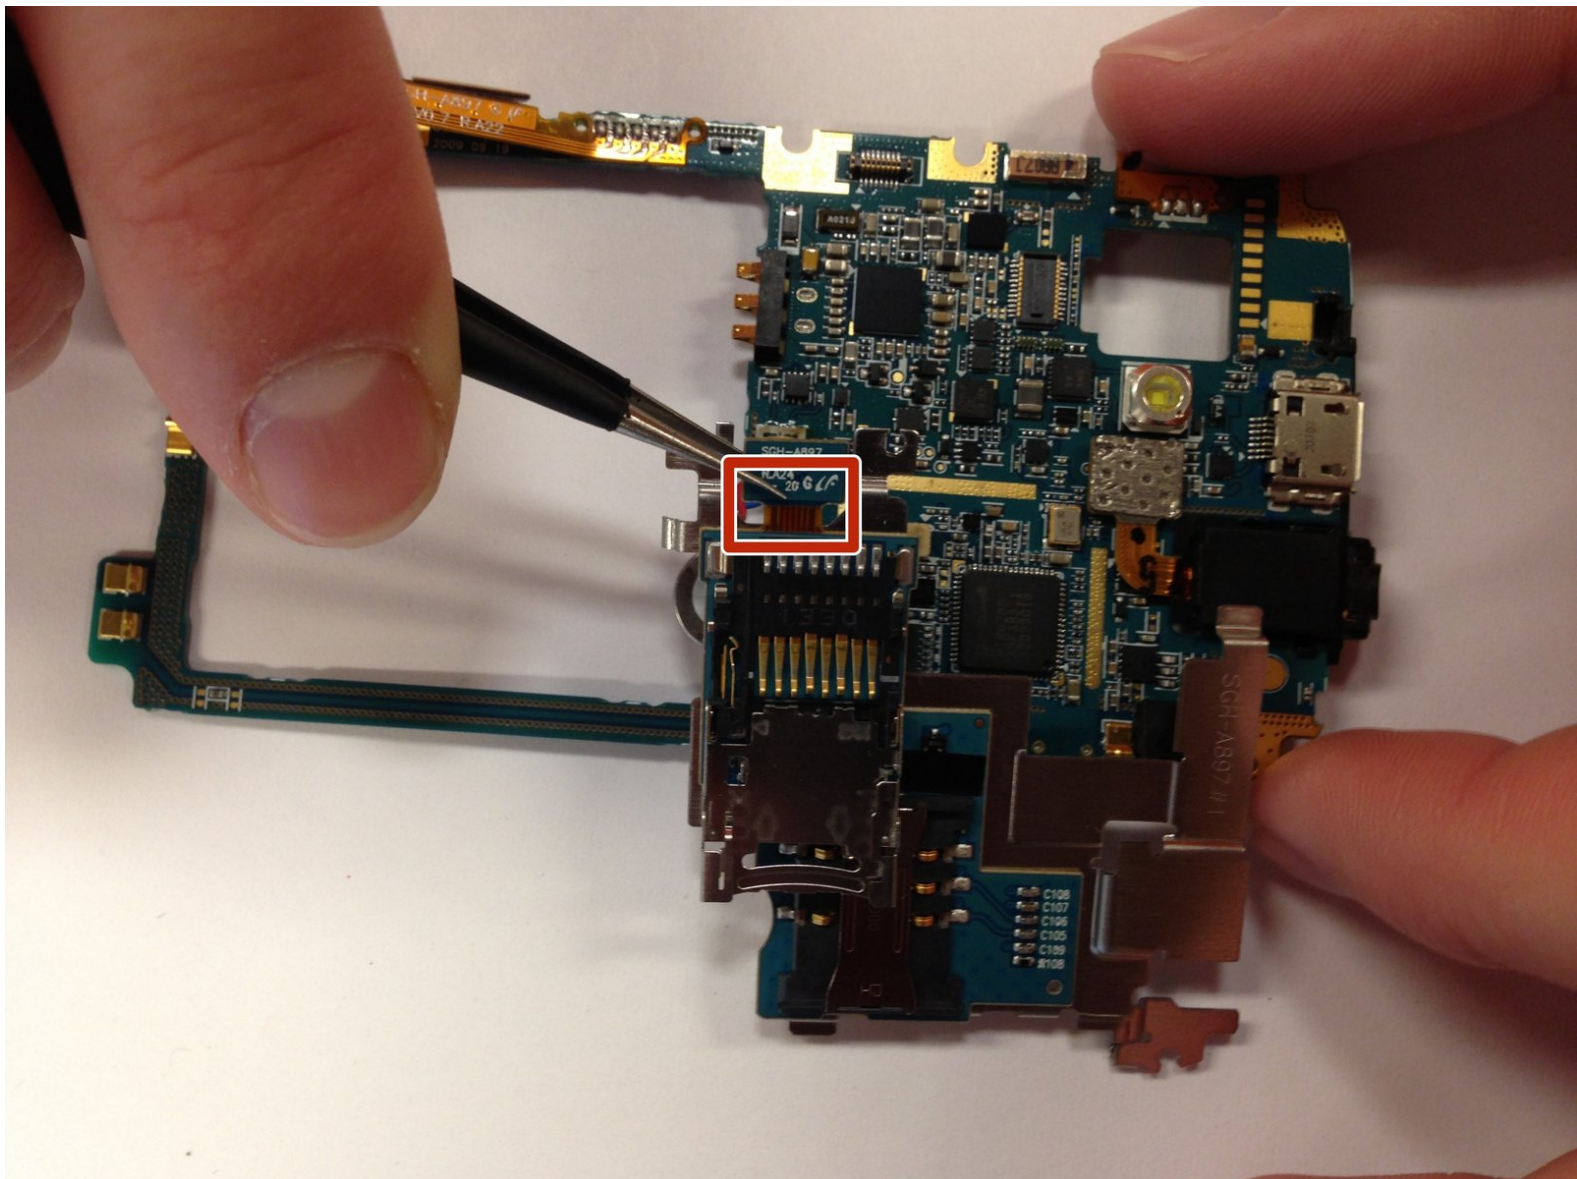

---

## INTRODUCTION

This guide will give instructions on removing the daughterboard from the motherboard in the Samsung Mythic SGH-a897. Tweezers are used to successfully remove the daughterboard from the motherboard by unclipping a connector.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- To remove the phone's back cover, slide your fingernail into the slit at the bottom of your phone.

## Step 2



- Place your finger on either bottom corner of the battery slot and lift to remove the battery.

### Step 3 — Rear Case



- Using a Phillips #00 Screwdriver, remove the six 5 mm screws from the back casing of the phone.

### Step 4



- Using the iFixit Opening Tool, insert the tool into the seam between the back case and the rest of the phone.
- Working along the seam, pry the back casing from the phone.

## Step 5 — Camera



- Carefully remove the camera by using the iFixit Tool to pry the camera cable from the motherboard.
- Carefully remove the camera from the phone's motherboard.

## Step 6 — Motherboard



- Using a Phillips #00 screwdriver, remove the two 3.8mm screws.

## Step 7





- Using tweezers, firmly grip the black lever at the bottom of the motherboard.
- Use the tweezers to flip the black lever up so that it is upright from the motherboard.

## Step 8



- Remove the ZIF cable by carefully using the tweezers to pull the cable straight out.

## Step 9

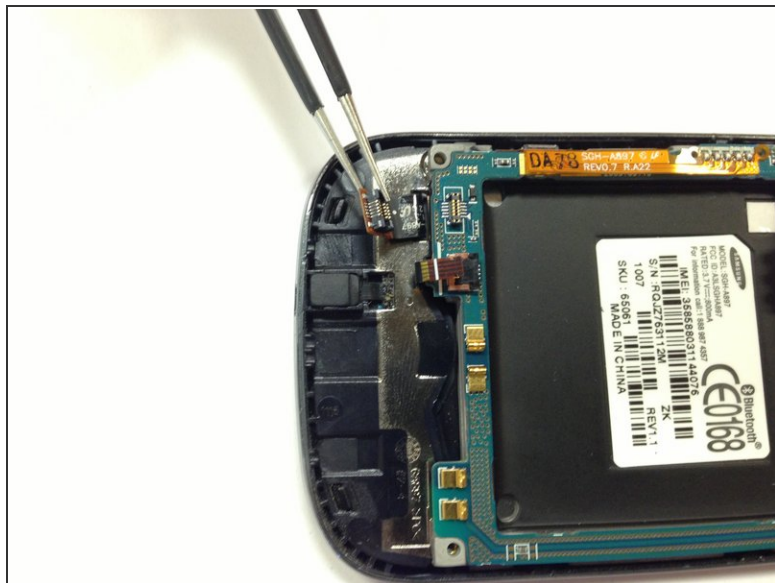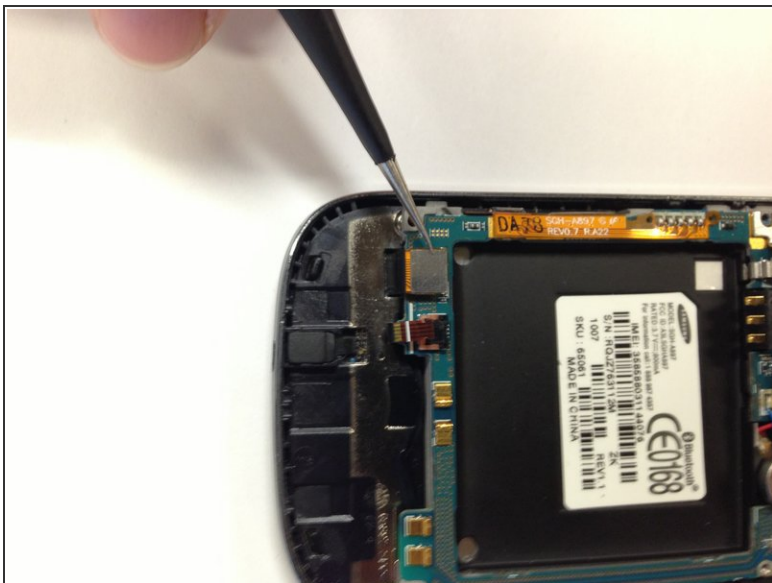


- On the right from the lever, use the tweezers to unclip the black connector.

## Step 10



- Use the tweezers to unclip the orange ribbon cable from the left side of the phone.

## Step 11

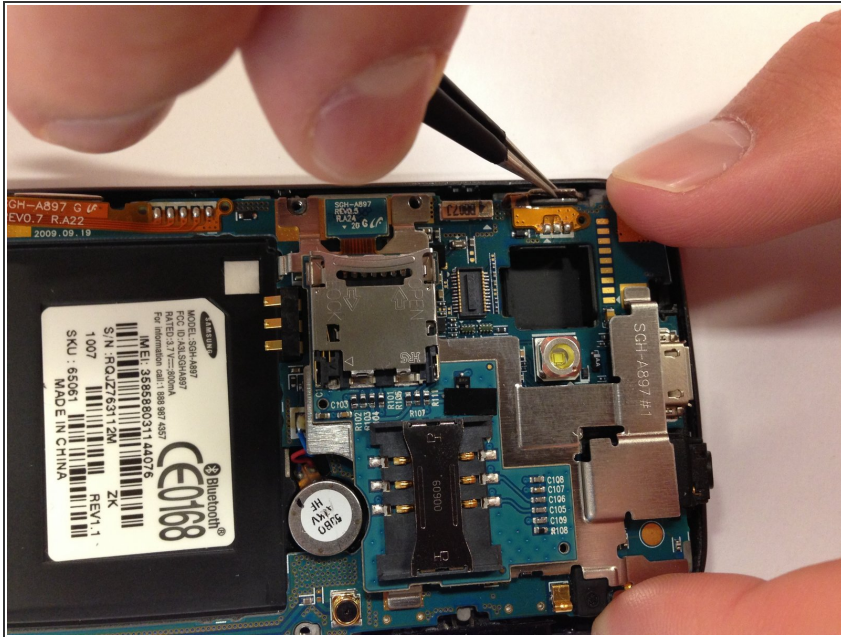

- Use the tweezers to unclip the other orange ribbon cable along the left side of the phone.



⚠ Work carefully, as this is a very delicate part of the phone's motherboard that can easily be broken.

## Step 12



- Using either side of the tweezers, slide a side of the tweezers underneath the red and blue wires and the capacitor.
- Carefully lift the capacitor away from the phone.



## Step 13

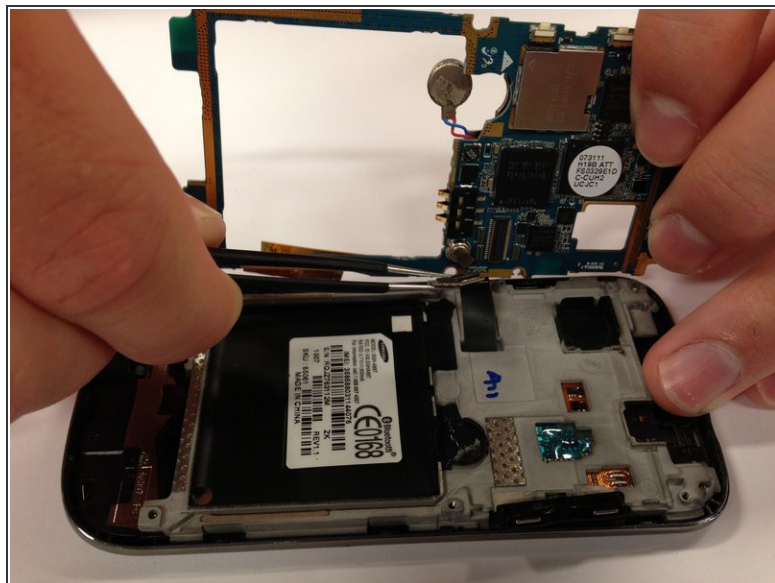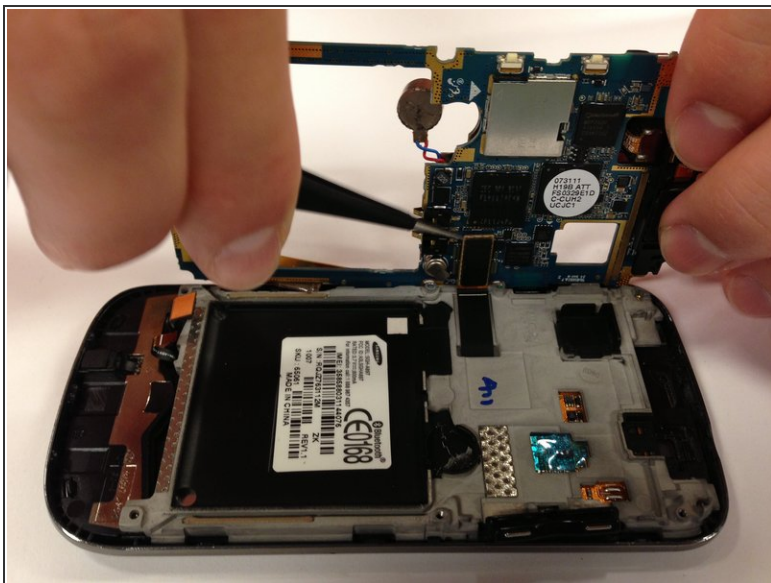

**⚠ DO NOT remove the motherboard completely. One more clip on the motherboard's backside needs to be removed.**

- Carefully tilt the motherboard up from the back of the phone.
- Use tweezers to unclip the black connector.

## Step 14 — Daughterboard

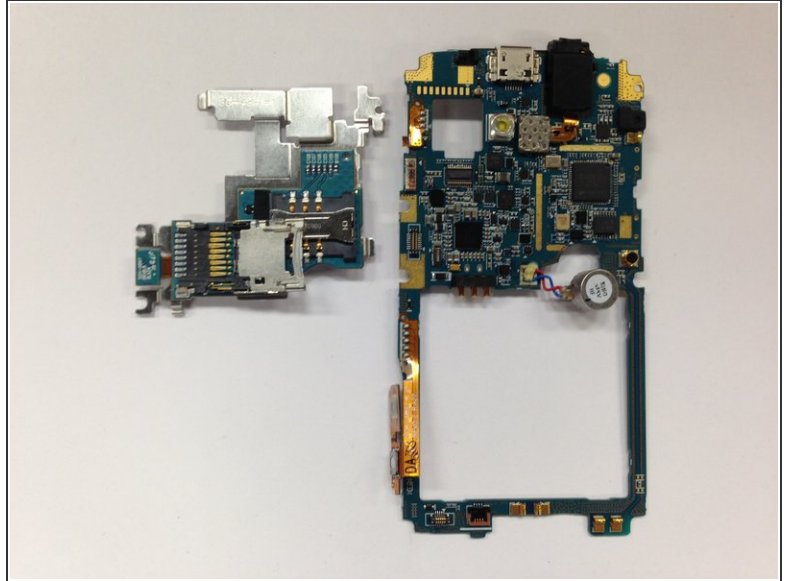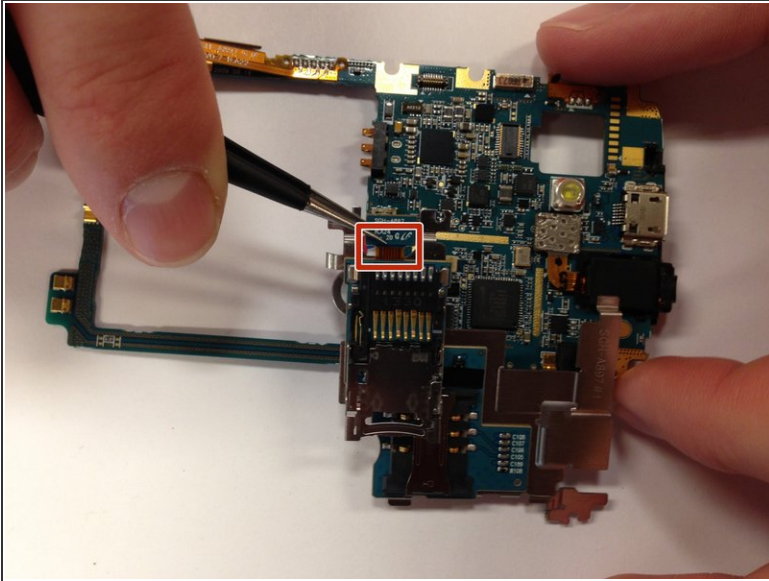

- Use the tweezers to unclip the connector.
- Remove the daughterboard.

To reassemble your device, follow these instructions in reverse order.