



# Asus X53BR HDD Replacement

Written By: fogalit





## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — HDD



- Locate the HDD compartment bottom of the laptop

## Step 2

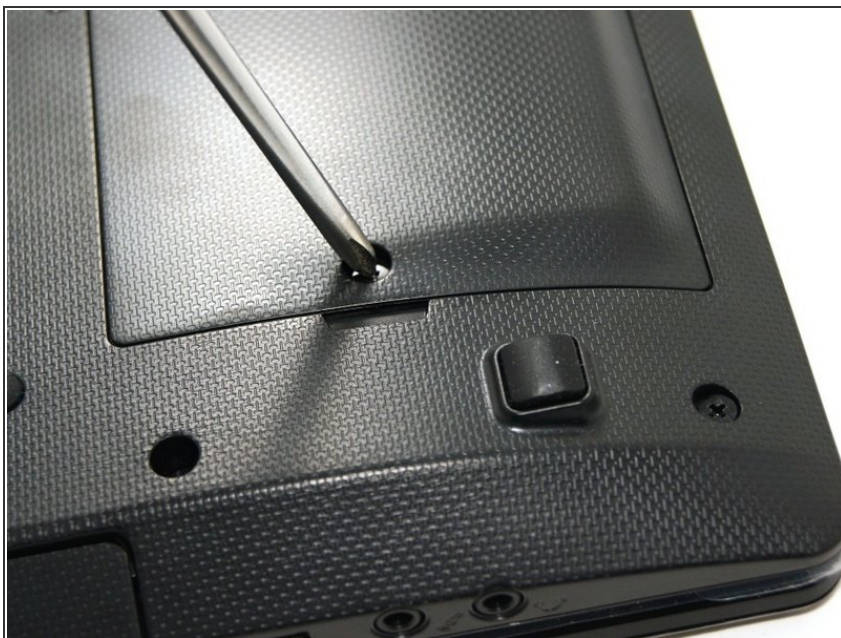

- Remove the screw.

### Step 3



- Open cover HDD.

### Step 4



- Pull the label.
- Remove HDD.

To reassemble your device, follow these instructions in reverse order.