


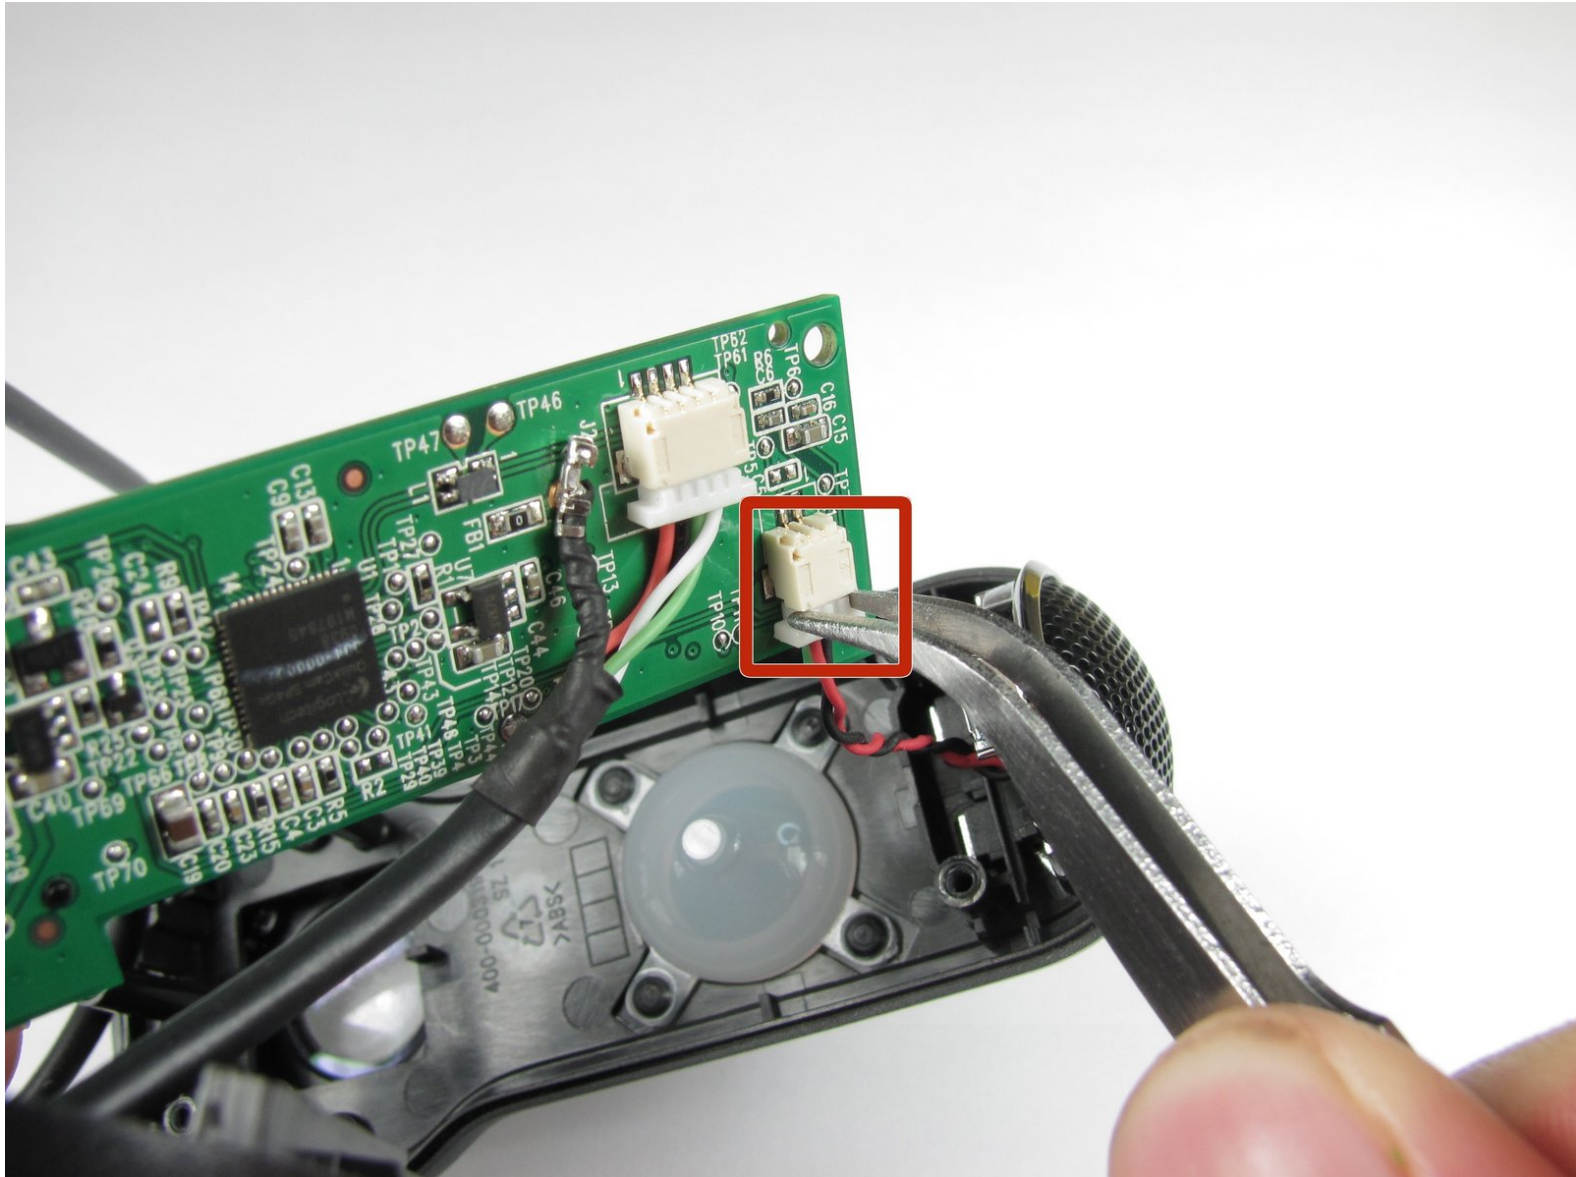

Disconnecting Microphone from Motherboard

Written By: Timothy Forrest





TOOLS:

- [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Back Cover





- Remove the two 8 mm Phillips #0 screws on the back cover.

⚠ The motherboard connects the two covers together. DO NOT separate the two yet.

i There is a button that loosens as the Phillips screws are removed. Don't be alarmed if it falls out.



Step 2

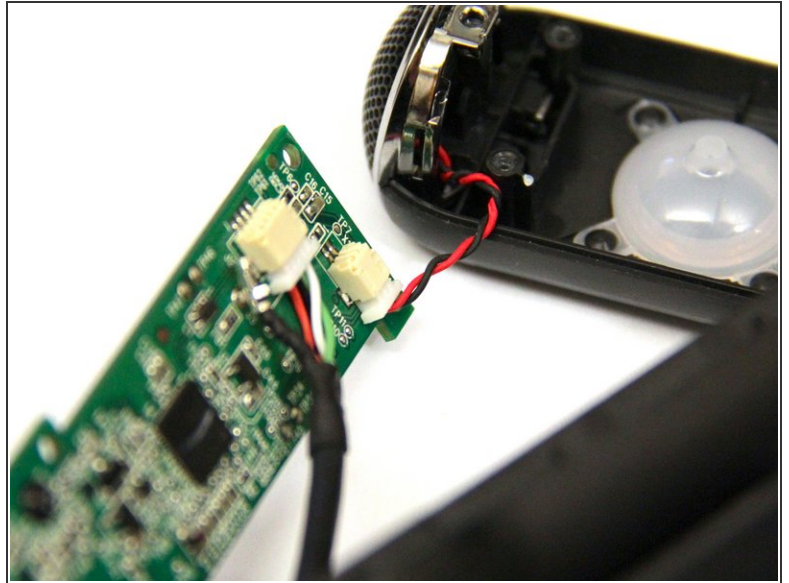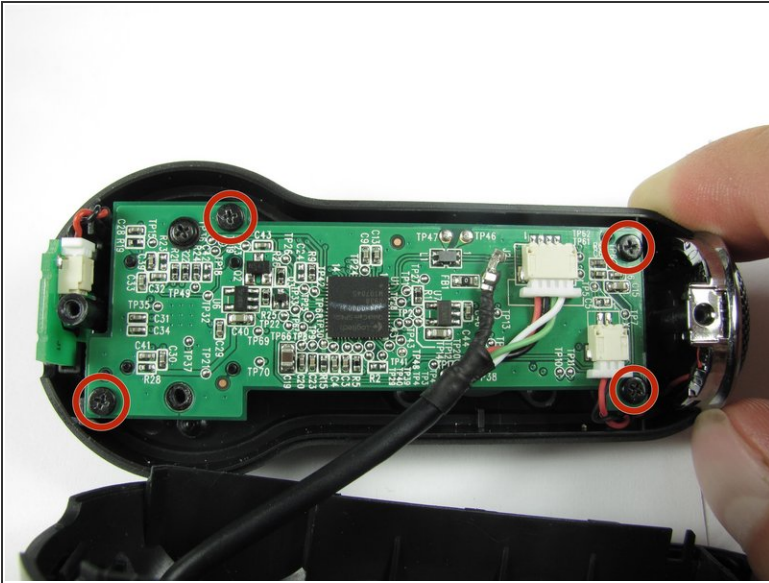

- Remove the four 6mm Phillips #0 screws connecting the motherboard and front cover.

⚠ DO NOT detach the wire connecting the motherboard to the front cover.

Step 3 — Microphone Connection

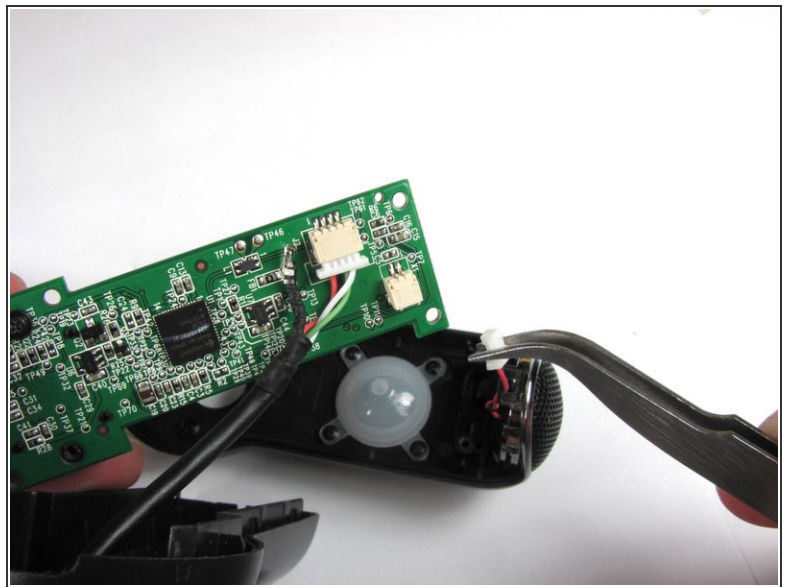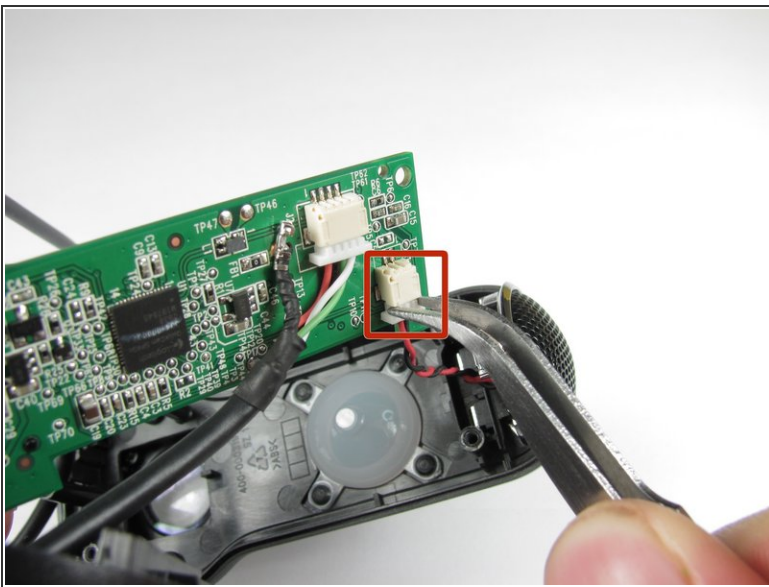

- Grasp the white wire connector between the tabs and the socket.
- Wiggle the connector back and forth to remove the front cover from the motherboard.

To reassemble your device, follow these instructions in reverse order.