



Lenovo 500e Chromebook 2nd Gen Battery Replacement

This guide will show you how to replace the...

Written By: Nicolas Lidinsky



INTRODUCTION

This guide will show you how to replace the battery in the Lenovo 500e 2nd Gen Chromebook, model number: 81MC005AUS. The battery is an essential component because it provides power to the device. A faulty battery can lead to problems outlined in our [troubleshooting page](#). Always remember to take proper precautions as batteries may be dangerous if handled improperly. Here's some info on one of the dangers of a [bad battery](#).



TOOLS:


Phillips #0 Screwdriver (1)
iFixit Opening Tool (1)
Phillips #00 Screwdriver (1)



PARTS:

Lenovo L17L3PB0 Chromebook Battery (1)

Step 1 — Back Panel

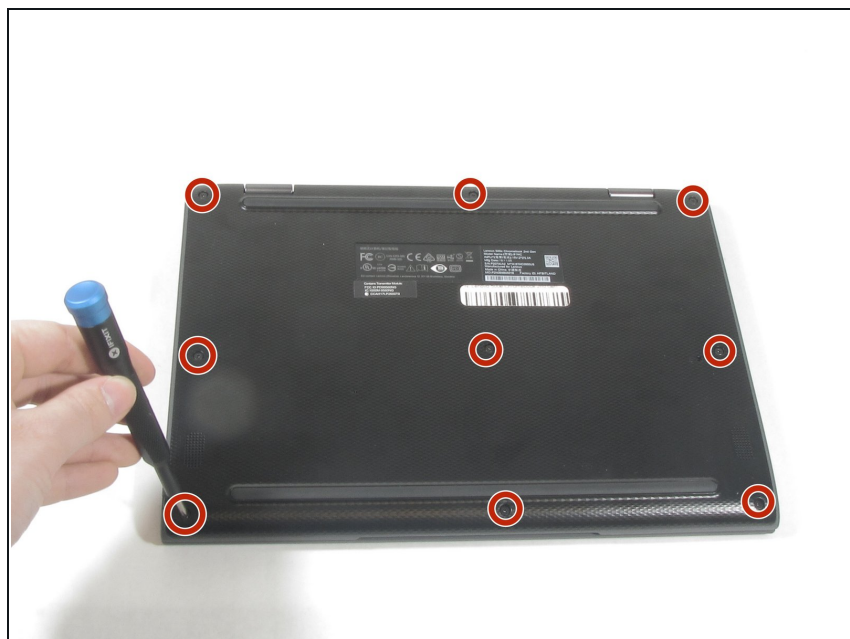

- Remove nine 6 mm screws from the bottom cover of the laptop using a Phillips #0 screwdriver.

Step 2




- Remove stylus from the lower left corner of the back panel.

Step 3



- Go along the edge of the back panel with an iFixit opening tool until it pops loose.
- Remove the back panel from the laptop.

Step 4 — Battery

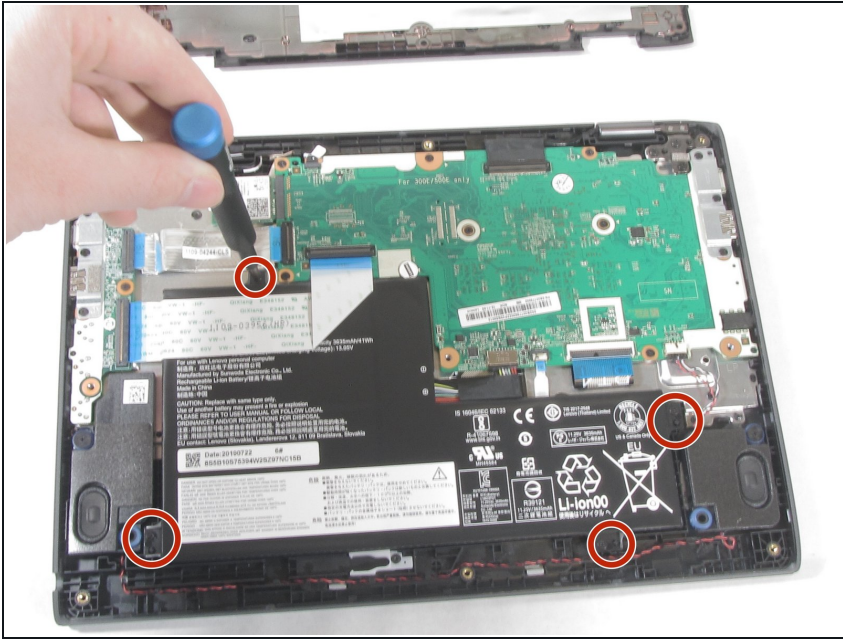

- Remove the four 4 mm Phillips #00 screws holding the battery in.

Step 5



- Use the iFixit opening tool to unplug the battery from the motherboard.

⚠ Potential for device damage: Make sure to be gentle while removing the wire.

Step 6



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.