


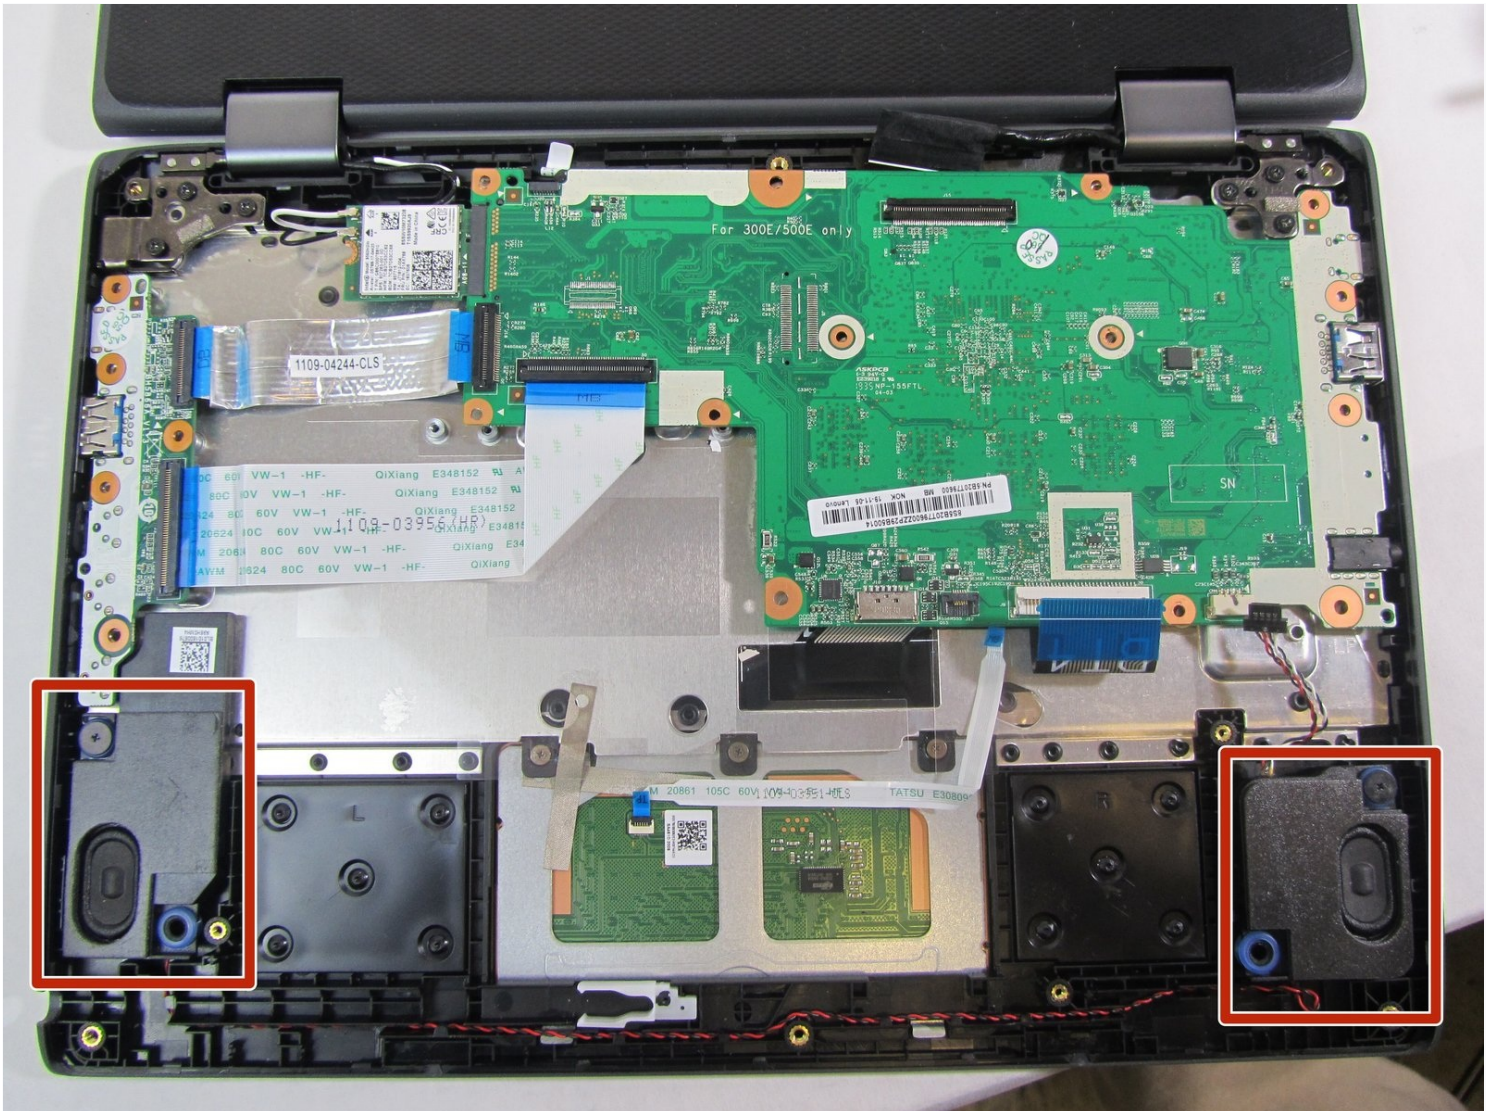

Lenovo 500e Chromebook 2nd Gen Speakers Replacement

This guide will show you how to replace the...

Written By: Nicolas Lidinsky



INTRODUCTION

This guide will show you how to replace the speakers in the Lenovo 500e 2nd Gen Chromebook, model number: 81MC005AUS. The speaker allows the user to hear the sounds played from the device. If the sound is not working or the sound quality is poor, check out our [troubleshooting page](#).

TOOLS:

Phillips #00 Screwdriver (1)
iFixit Opening Tool (1)
Phillips #0 Screwdriver (1)

PARTS:

5SB0T45109 - Lenovo Laptop Speaker - Genuine (1)

Step 1 — Back Panel



- Remove nine 6 mm screws from the bottom cover of the laptop using a Phillips #0 screwdriver.

Step 2




- Remove stylus from the lower left corner of the back panel.

Step 3



- Go along the edge of the back panel with an iFixit opening tool until it pops loose.
- Remove the back panel from the laptop.

Step 4 — Battery

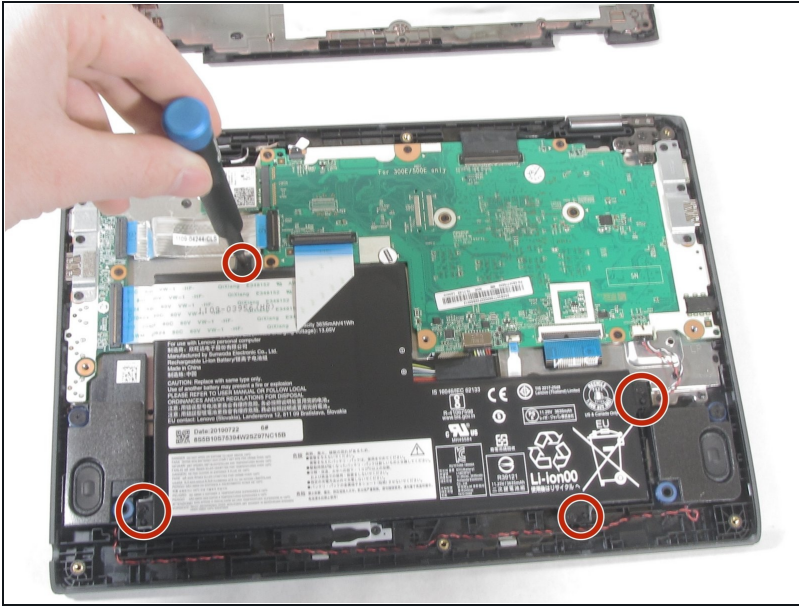

- Remove the four 4 mm Phillips #00 screws holding the battery in.

Step 5



- Use the iFixit opening tool to unplug the battery from the motherboard.


⚠ Potential for device damage: Make sure to be gentle while removing the wire.

Step 6




- Remove the battery from the laptop.

Step 7 — Speakers

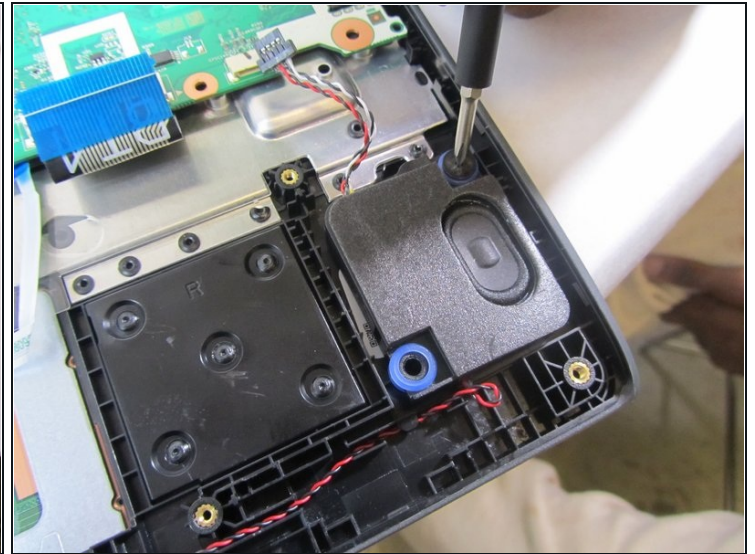


- Remove the two 4 mm screws (one on each speaker) using a Phillips #00 screwdriver.

Step 8

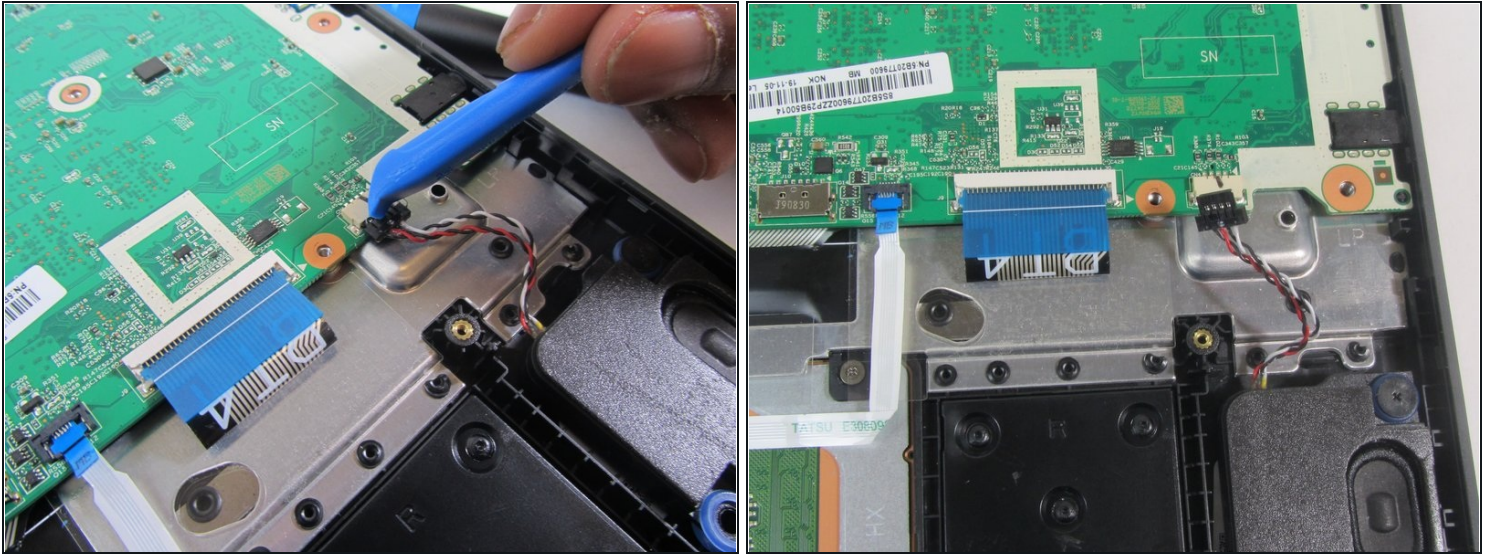

- Use the iFixit opening tool to detach the right speaker cable from the motherboard.

Step 9

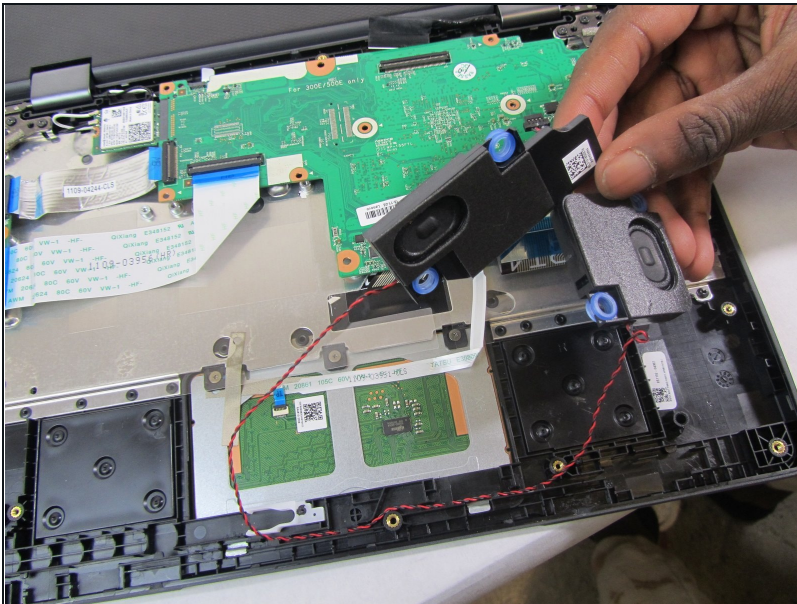

- Remove both speakers by gently pulling them out.

To reassemble your device, follow these instructions in reverse order.