



Disassembling Creative Ziio 7" Back Panel

This guide will show how to remove the back panel of the Creative Ziio 7"

Written By: Benedict Samoy




INTRODUCTION

This guide is simple and will be a prerequisite for every installation guide for the Creative Ziiio 7" device.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel

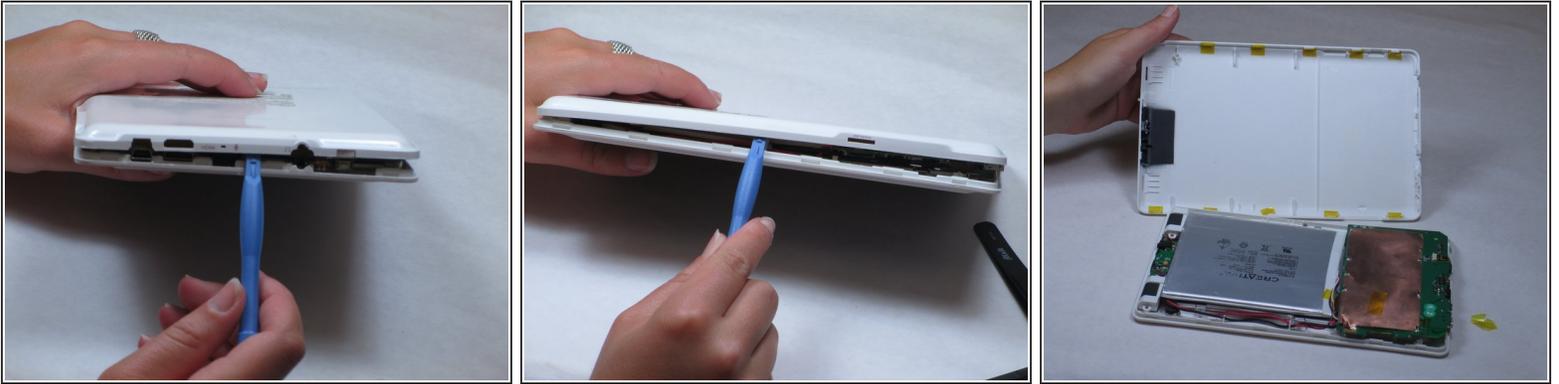

- Remove the back panel by using the plastic opening tool to carefully pry around the panel's edges.
⚠ The volume control button and the top power button may fall out during this step.

To reassemble your device, follow these instructions in reverse order.