




iBook G4 12" 800 MHz-1.2 GHz Battery Replacement

Written By: iRobot

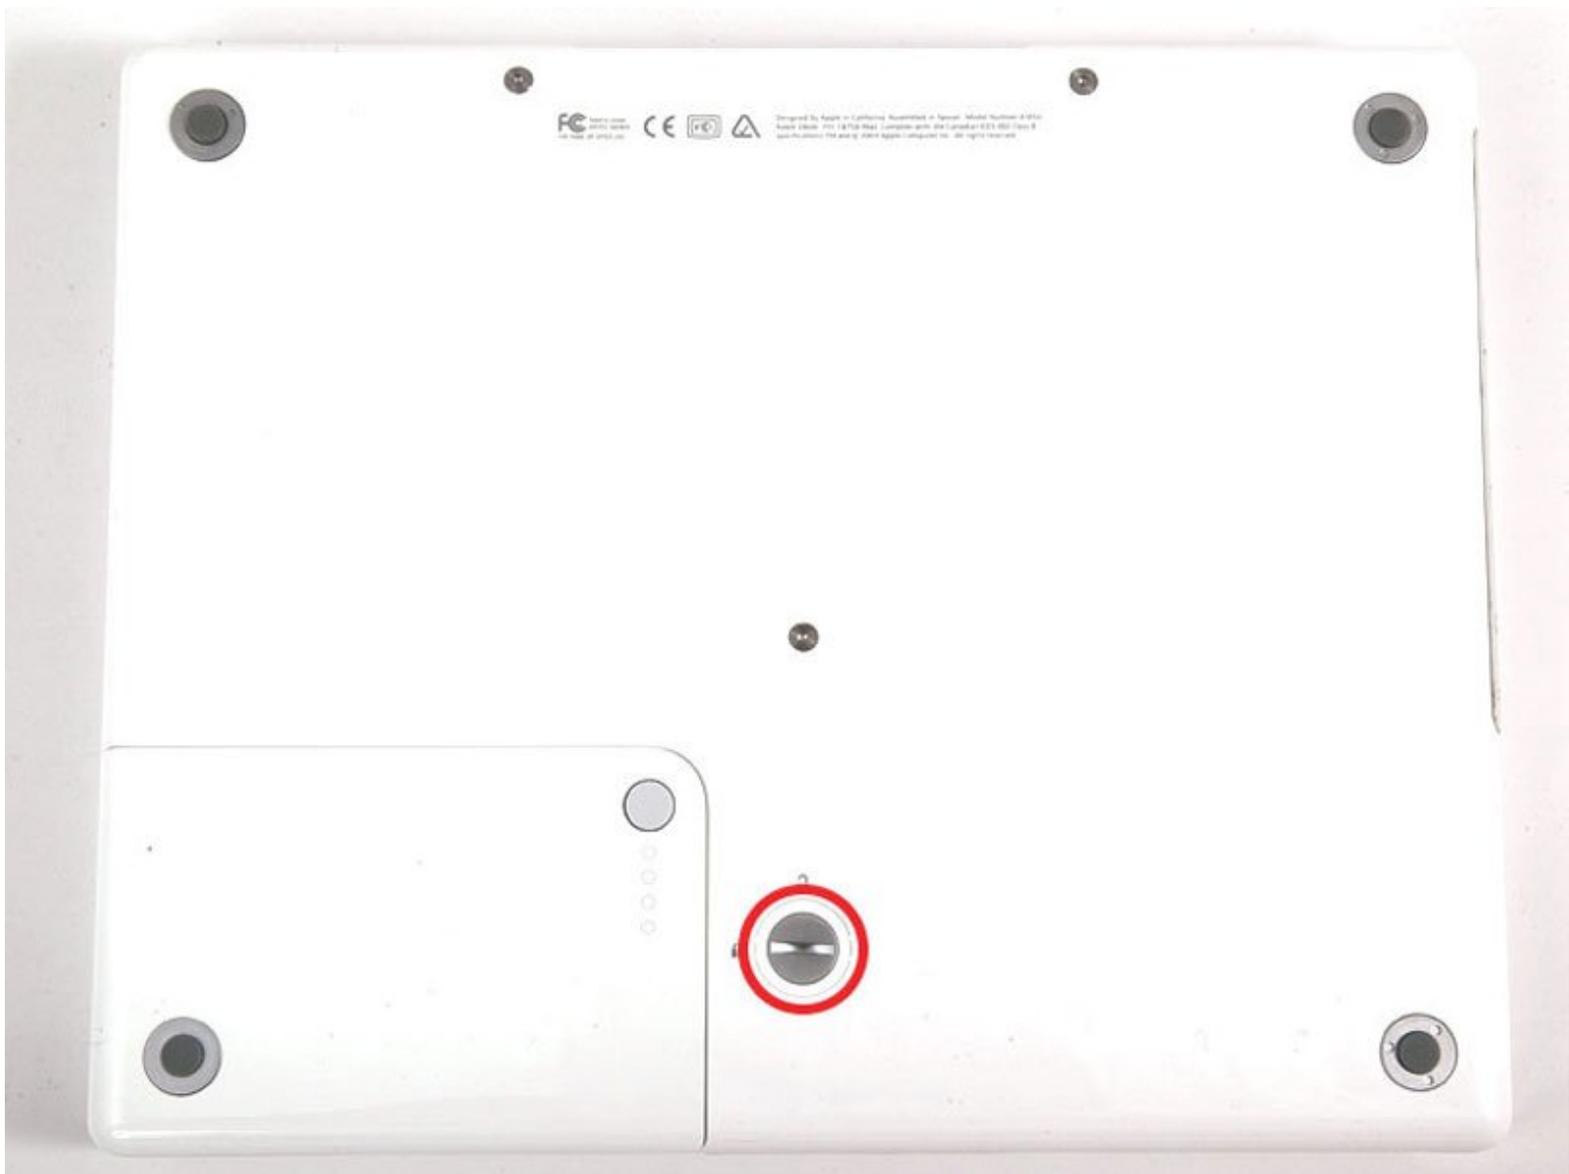

INTRODUCTION

Changing the battery is easy -- all you need is a coin.


TOOLS:

- [Coin](#) (1)

PARTS:


- [iBook G3 or G4 12" Replacement Battery \(New\)](#) (1)
-

Step 1 — Battery

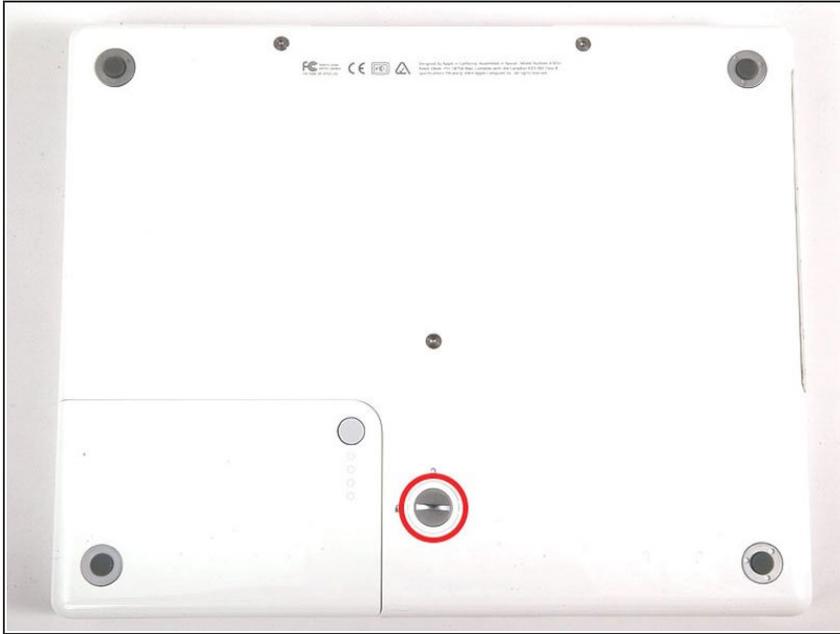

- Use a coin to rotate the battery locking screw 90 degrees clockwise.

Step 2

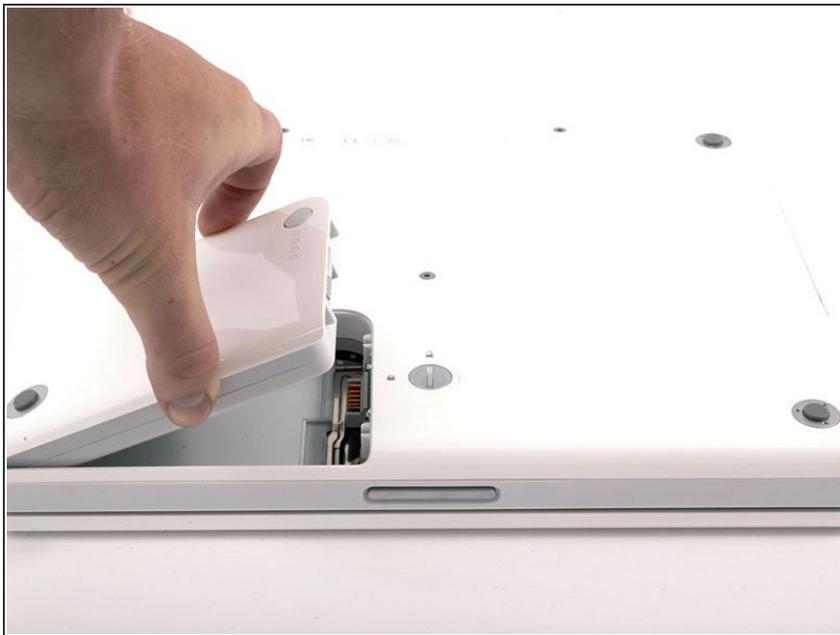

- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.