



Gateway KAV60 LT2016U RAM Replacement

Gateway KAV60 LT2016U RAM replacement.

Written By: Lydia Benjock



INTRODUCTION

The RAM can be replaced if you have a Phillips #0 screwdriver.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Unlock the tab located in the top left corner of the netbook.
 - The red tab indicated that the battery has been properly unlocked.
 - Remove the battery.
- i** When working with electronics, it is always wise to remove the power source before taking the device apart.

Step 2 — RAM




- The RAM is located under this cover.

Step 3



- Using a Phillips #0 screwdriver, remove one (1) 5mm screw holding the cover in place.
- Use a plastic opening tool to remove the cover.

Step 4

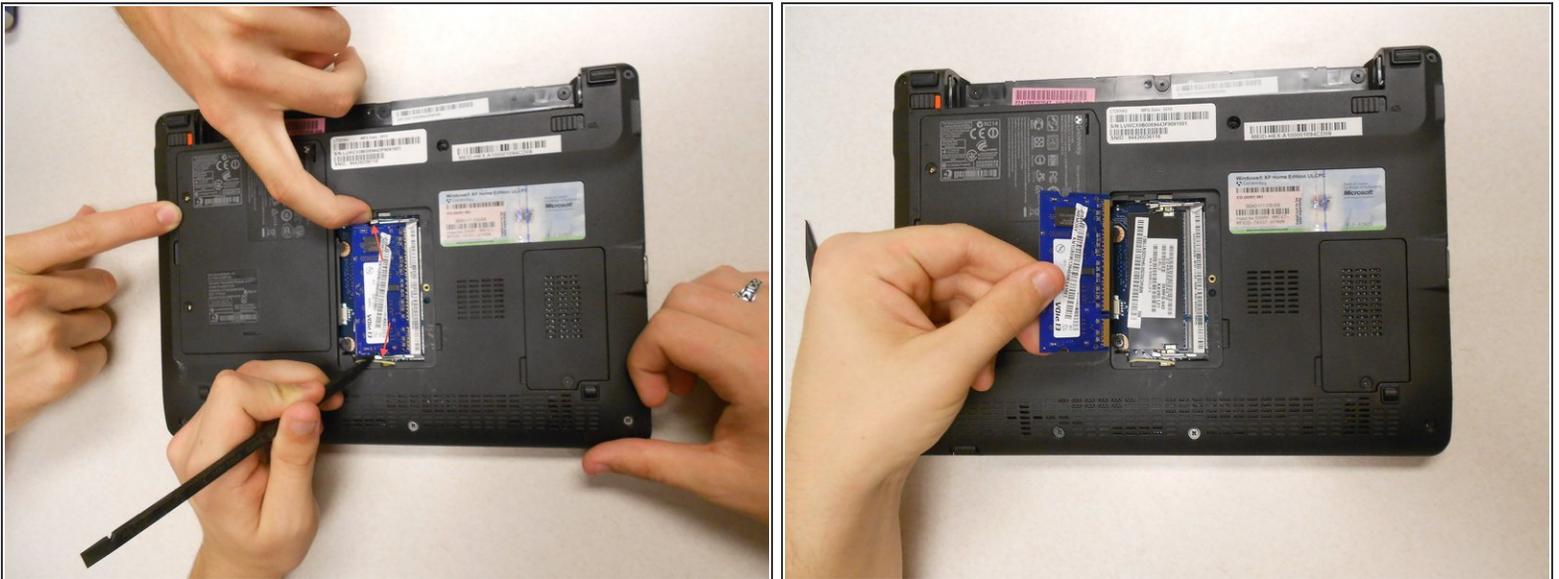

- Unlock the RAM by pinching the metal clamps that keep the RAM in place.
- Remove the RAM while the metal clamps are disengaged.

To reassemble your device, follow these instructions in reverse order.