




# Samsung Series 5 3G Chromebook WWAN board Replacement

Removing the WWAN board.

Written By: Helder Avelino

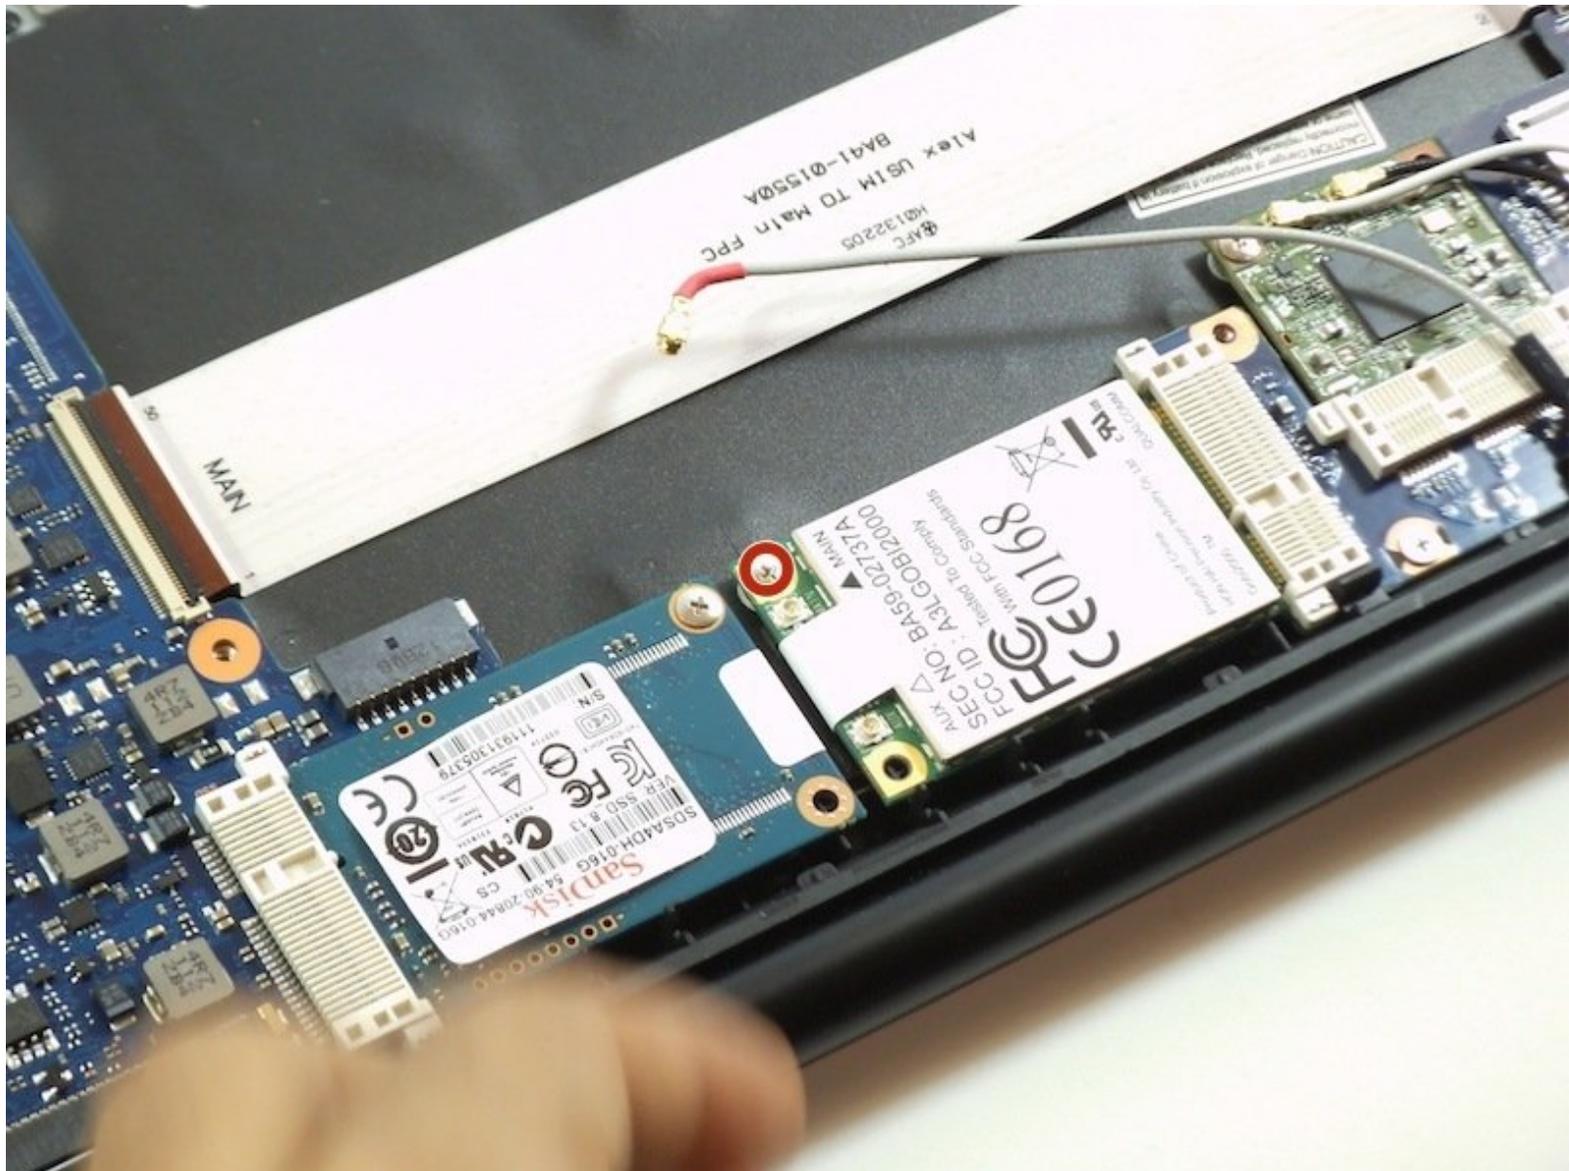

---

## INTRODUCTION

Outline what you are going to teach someone how to do.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover




- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel using your fingernails.
- Remove all the seven screws from the bottom panel.

## Step 2



- Loosen the back cover panel using a spudger.

## Step 3

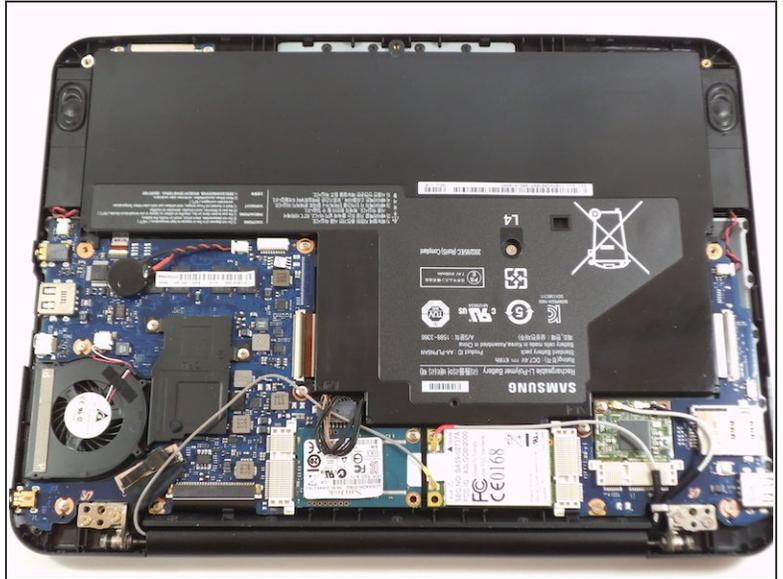

- Once you work your way around, you can remove the panel.

## Step 4 — WWAN board



- Remove the single Phillip screw
- Disconnect the WWAN antennas from the I/O board
- Remove the WWAN board from the motherboard.

To reassemble your device, follow these instructions in reverse order.