


Nokia 6560 Display Replacement

Written By: Nathan Whitacre

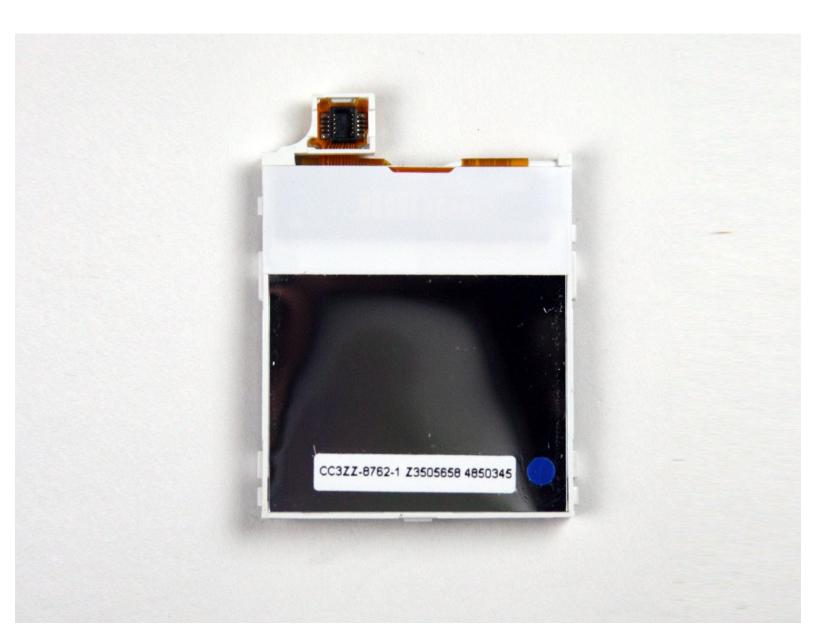

INTRODUCTION

This guide gives instructions on replacing the Nokia 6560 display.



TOOLS:

- iFixit Opening Tools (1)
- T6 Torx Screwdriver (1)

Step 1 — Battery





- Remove the back cover of your cell phone by pushing the small slider with your fingernail towards the top of the phone.
- Lift off your cell phone's back cover.





- Use your index finger to first push down and then lift up the battery as shown.
- Remove the battery from your cell phone.

Step 3 — Keypad





- Open the front cover of your cell phone with the plastic opening tool or finger nail.
- Lift the cover upwards, starting from the bottom below the keypad.






- Lift the keypad off of the keyboard as it is not attached to the phone anymore.
- it may be tricky to get the keypad in the right position while closing the front cover for the reassembly. Ensure they are aligned properly before closing the front cover!

Step 5 — Keyboard



- Unscrew the six T6 torx screws which attach the frame to the cell phone case.
- ⚠ Be careful not to scratch your display with the screw driver.

Step 6

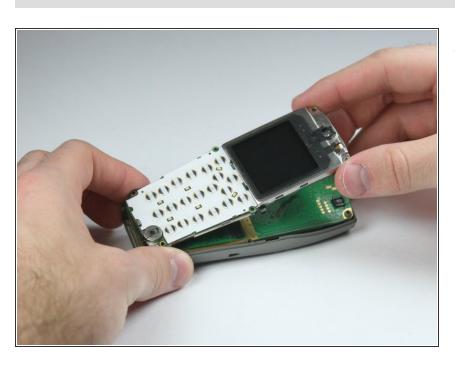


Lift the frame off of your cell phone.



 Lift the keyboard out of the plastic frame.

Step 8 — Display




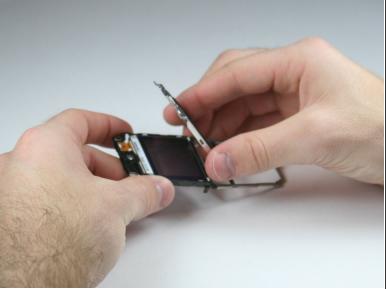

- Use the plastic opening tool to unmount the thin metal frame at the tab connections. You must do
 this on both sides.
- Lift the thin metal frame off of the plastic frame.
- Pay attention while lifting the frame off because it can easily be bent.

This document was generated on 2020-11-28 01:42:20 AM (MST).



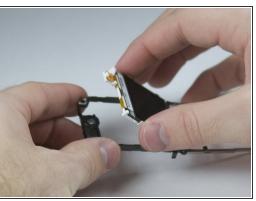



- Pull the sides of the plastic frame apart in order to loosen the display.
- Take the display out of the plastic frame.

To reassemble your device, follow these instructions in reverse order.