



Mr. Coffee TF6 Bottom Cover Replacement

This guide provides step by step instructions on how to replace the bottom cover on the Mr. Coffee TF6.

Written By: Johnny Romeka



INTRODUCTION

The bottom cover must be removed prior to replacing or repairing any internal parts of the Mr. Coffee TF6 (hot plate, power cord, and water tubes). In the event that the bottom cover breaks or must be replaced, a replacement cover must be obtained from the manufacturer.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Bottom Cover



- Facing the bottom of the TF6, carefully pull the two rubber feet out with your hands.

Step 2

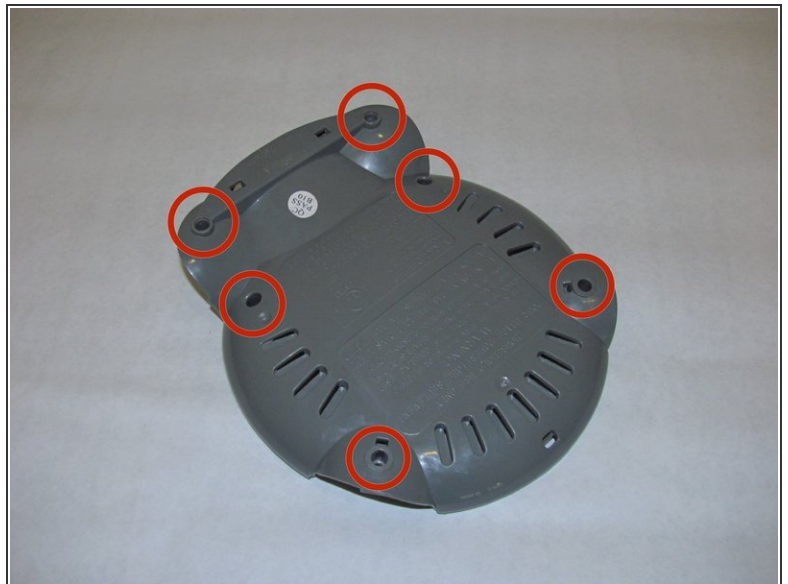

- Using a Phillips #1 screwdriver, remove the six 11mm Phillips screws that are holding the bottom cover in place.

Step 3



- Gently lift the bottom cover, detaching it from the main body of the TF6.

To reassemble your device, follow these instructions in reverse order.