




# Sony VAIO PCG-F360 Speaker Replacement

This guide will explain how to replace the speaker.

Written By: Hannah Millea

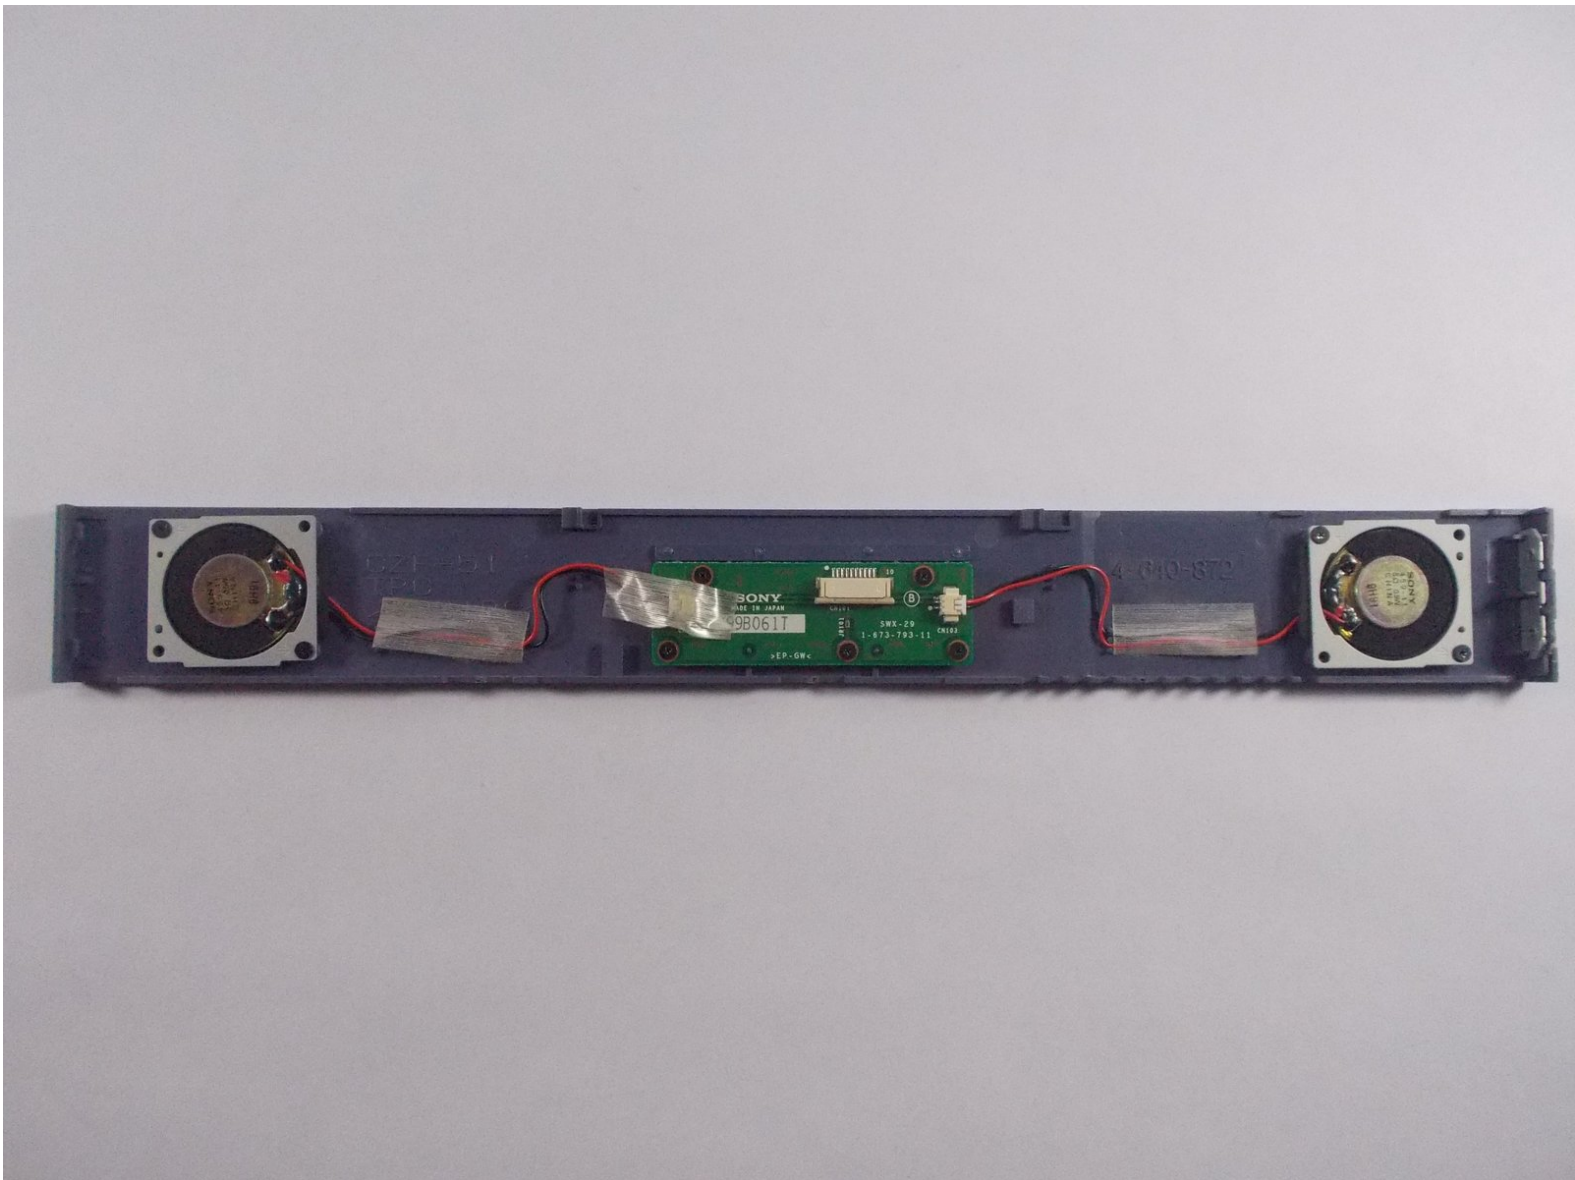



## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Position the laptop screen-side down as shown.
- In this position the battery housing will be located on the right hand side.

## Step 2

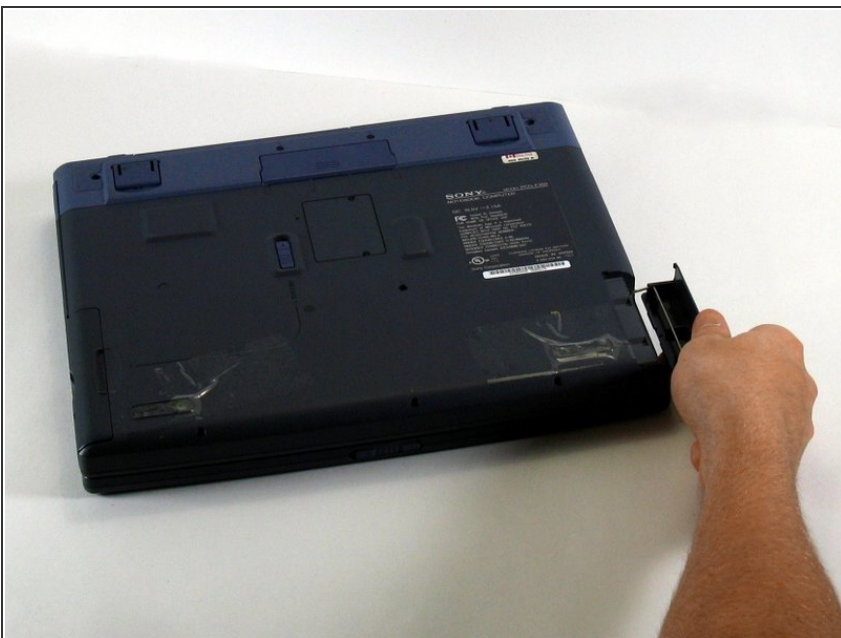

- Lift the panel up and then out to gain access to the battery.

## Step 3



- Use the indentations to pull the old battery out.

## Step 4



- The battery is now removed and it is safe to move on to uninstalling other components.



## Step 5 — Speaker Panel





- There are two screws on the left hand side of the laptop near the IR receiver. remove them using a #00 Philips head screwdriver.
- Slide the speaker panel towards the left, then carefully flip it over onto the keyboard.
- Make sure not to pull the speaker panel away from the computer just yet - it is still connected!

## Step 6




- Push the beige tab in the direction of the ribbon. it should only move a small amount
- Remove the ribbon by gently pulling on it, there should be little or no resistance.
- Now the speaker panel can be set aside.

## Step 7 — Speaker

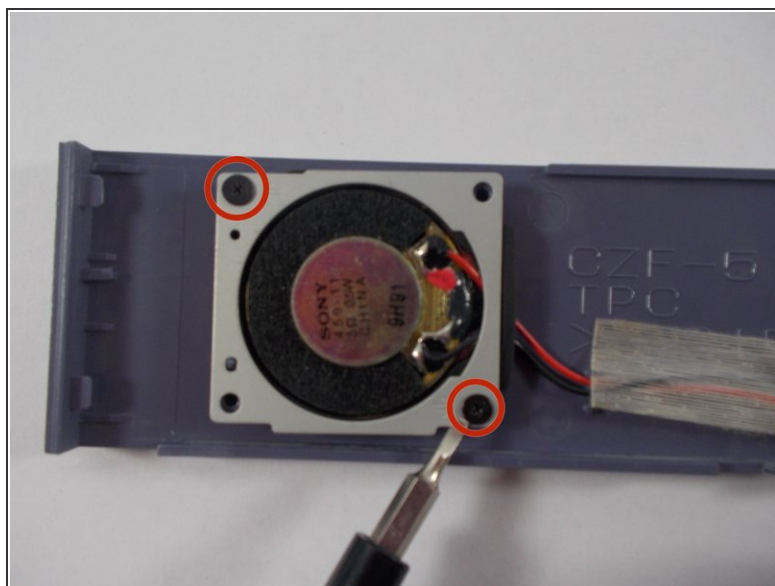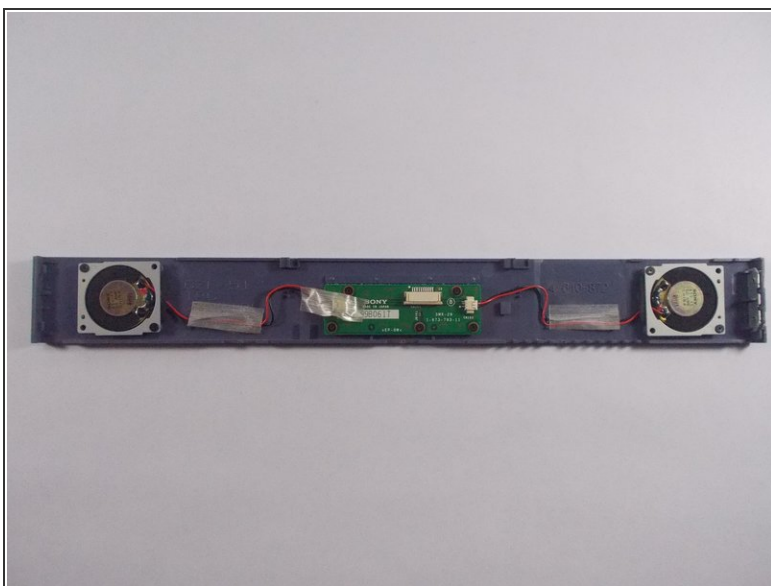

- The two speakers are located on the ends of the panel.
- There are two screws holding each speaker. Remove them using a #00 Philips head screw driver.

## Step 8

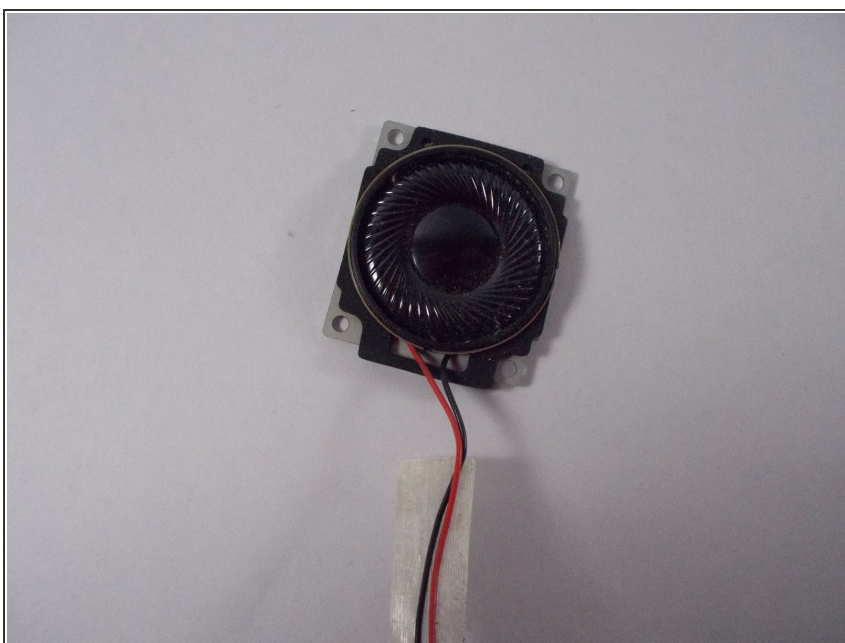

- Carefully flip the speaker over and replace or clean the needed parts.

To reassemble your device, follow these instructions in reverse order.