

Asus S500 USB, Headphone, and SD card Port board replacement

Access and remove the left side USB Ports/Headphone Jack/ SD Card Slot.

Written By: Isaac Lemus



This document was generated on 2020-11-19 08:11:22 PM (MST).

INTRODUCTION

Access and remove the left side USB Ports/Headphone Jack/ SD Card Slot.



TOOLS:

• Phillips #1 Screwdriver (1)

Step 1 — USB, Headphone, and SD card Ports




 Unscrew the 10 screws on the back cover

Step 2



 Remove back cover (pry open along the grey/black line, they are held together by clips)

Step 3

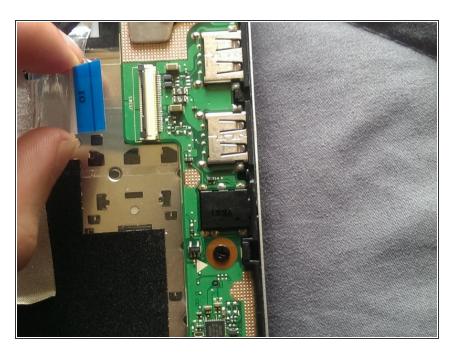

- Lift up tab and pull out the connector
- Unscrew the 4 screws
- Open up the screen (as you would to open up the laptop), and in doing so the metal piece will open up.
- Jostle the ports and remove the small board.

To reassemble your device, follow these instructions in reverse order.