



How to fix TC Electronic Level Pilot static noise

After some sort of time, (it depends the use - environment) the level pilot makes some static noise. It's just a knob that needs some multi purpose oil. I opened mine and did fix it. It's very simple!

Written By: Alpha Dimension



INTRODUCTION

Nothing special, just to open the level pilot and repair it.

TOOLS:


- [Multi-Purpose Oil](#) (1)
-

Step 1 — How to fix TC Electronic Level Pilot static noise



- The bottom rubber base can be removed

Step 2

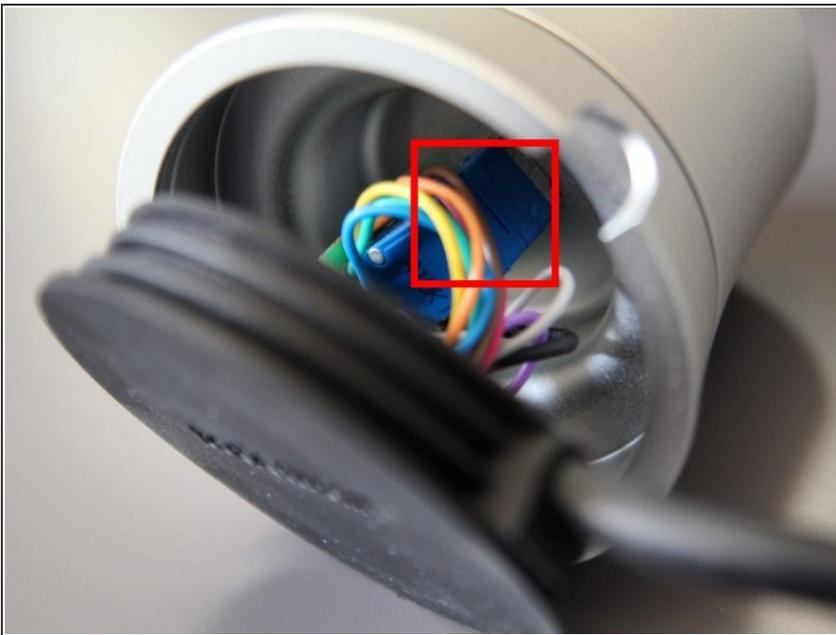

- Spray the small opening there with some multi-purpose oil.

To reassemble your device, follow these instructions in reverse order.