



Compaq Presario CQ58 Keyboard Replacement

Written By: ZFix



INTRODUCTION

How to change the Keyboard on a Laptop HP Compaq Presario CQ58.



[video: <http://youtu.be/QDYm7m1AfLU>]



TOOLS:



- [Pro Tech Toolkit](#) (1)
-

Step 1 — Keyboard

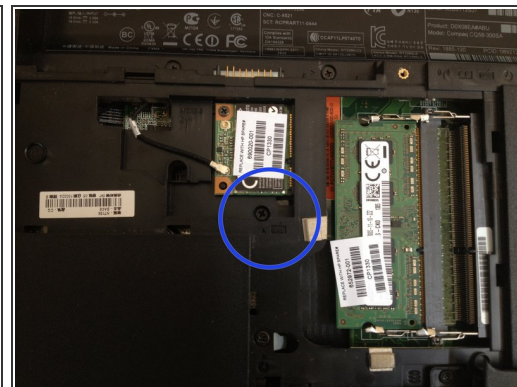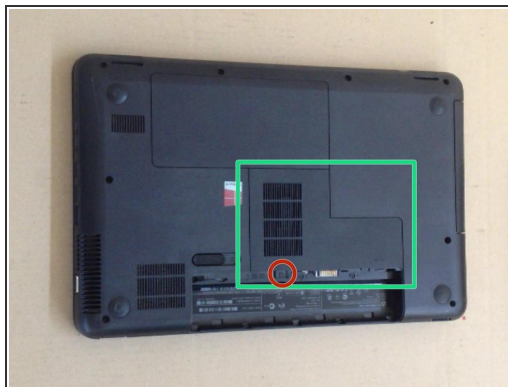



- Remove the Battery.
- Remove the RAM Memory Cover.
- Under the cover you can find one screw with keyboard symbol next to him. This screw is held the Keyboard.

Step 2

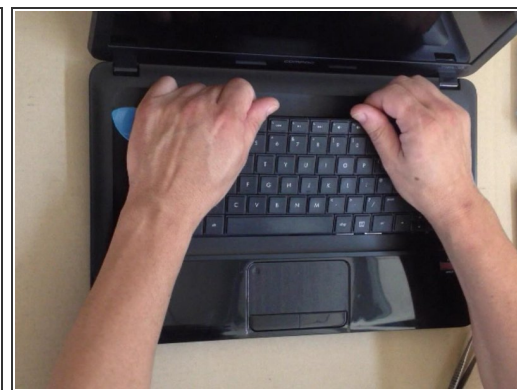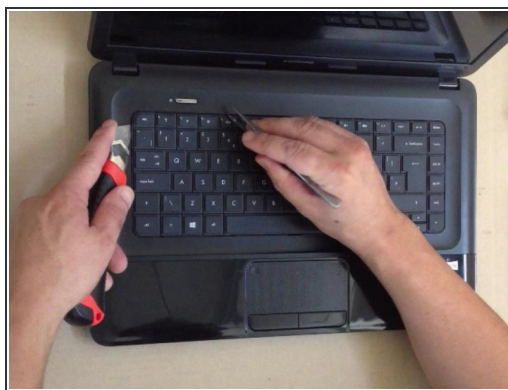

- The Keyboard is held by 5X locking clips.

Step 3

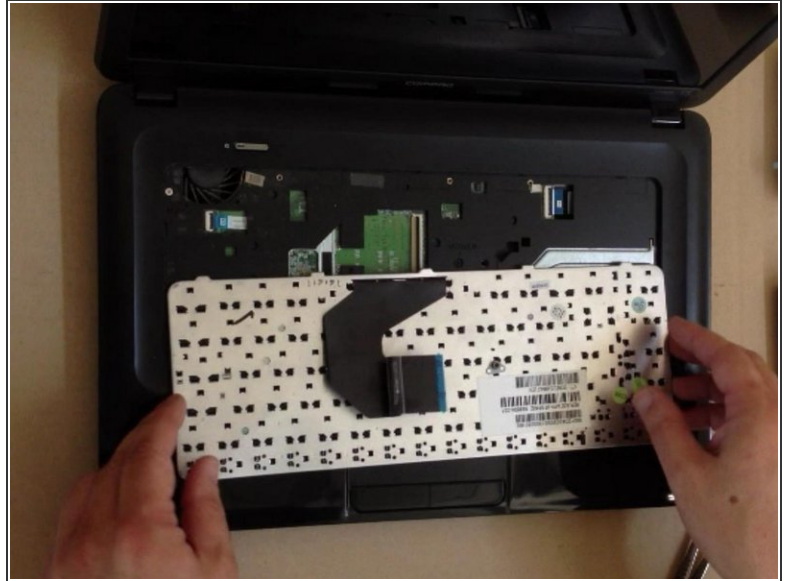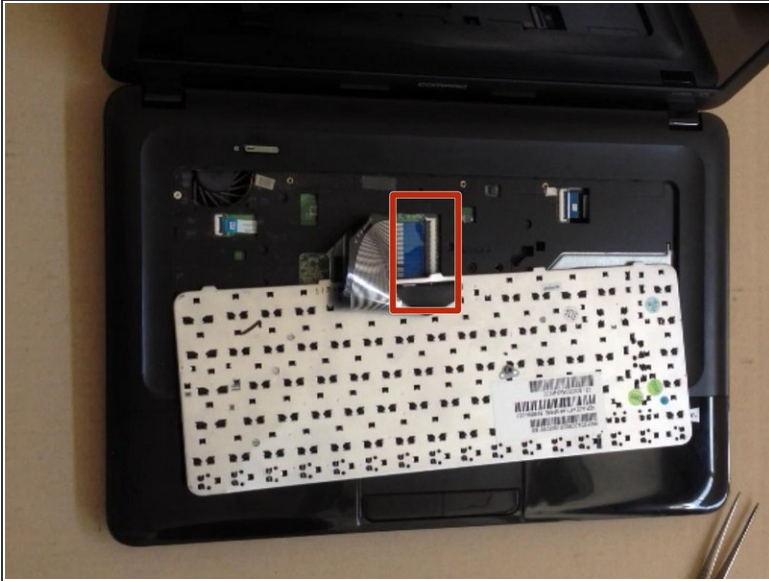

- Disconnect the Keyboard Flex cable and install the new Keyboard.
- **Did you do it successfully?**

To reassemble your device, follow these instructions in reverse order.