



# Palm Zire 21 Keypad Replacement

How to replace the Keypad on a Zire 21

Written By: Jeremy Craft



---

## INTRODUCTION


Use this guide to replace the keypad on a Palm Zire 21.

---

### TOOLS:



- [Pro Tech Toolkit](#) (1)
-

## Step 1 — Keypad

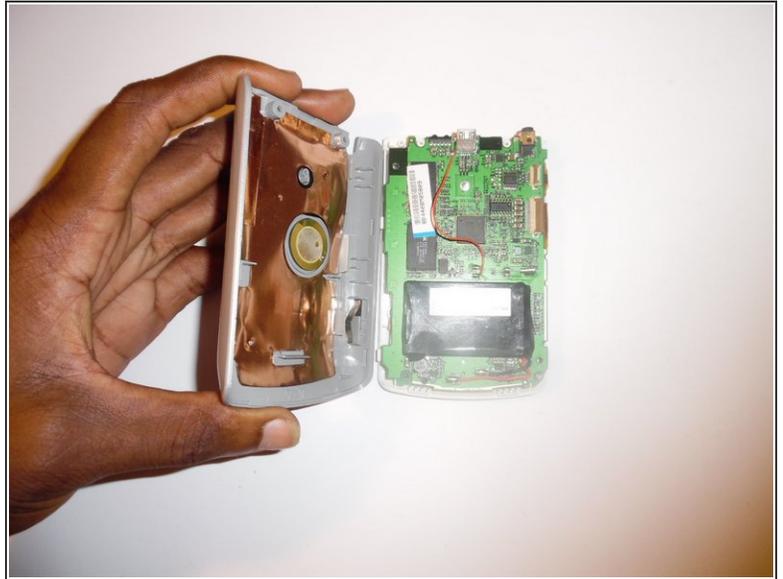


- Remove the two 0.8 mm screws located on the back of the device.

## Step 2

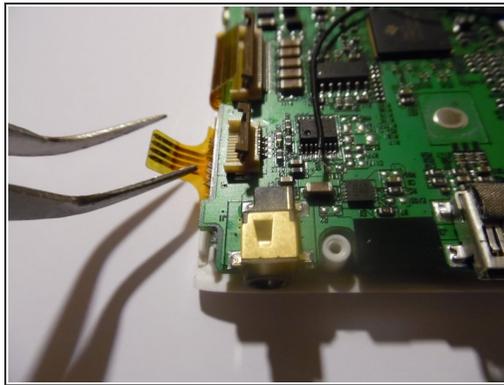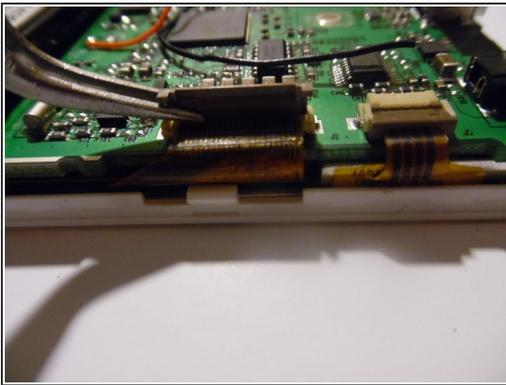

- Using tweezers, or something similar flip up the tab, releasing the wires located under the flap.

### Step 3

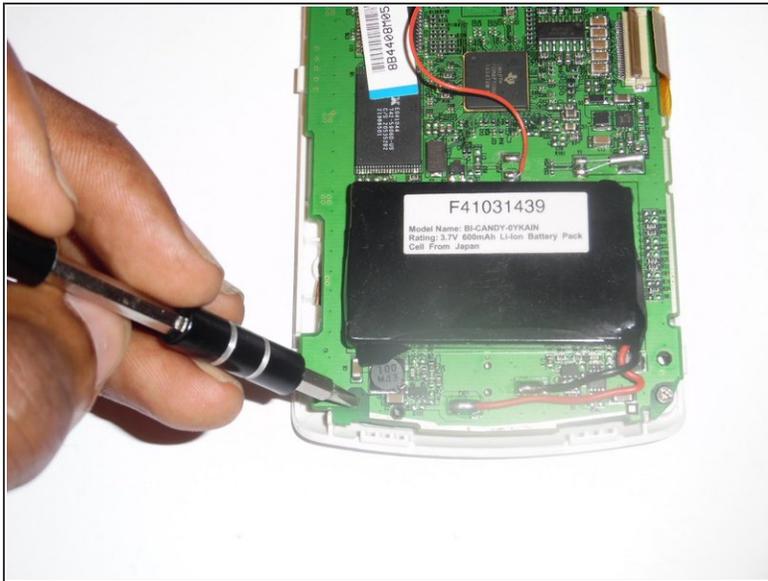

- Remove the two screws located at the bottom of the mothership, using a Philips head screwdriver.

### Step 4



- Carefully remove the mother board by lifting up, exposing the keypad.

## Step 5



- Using tweezers, or something similar remove the keypad from the device and replace with a new one.

To reassemble your device, follow these instructions in reverse order.