




DYMO LabelPOINT 100 Label Tape Cassette Replacement

Replace an empty or malfunctioning label tape cassette.

Written By: Dustin Holifer

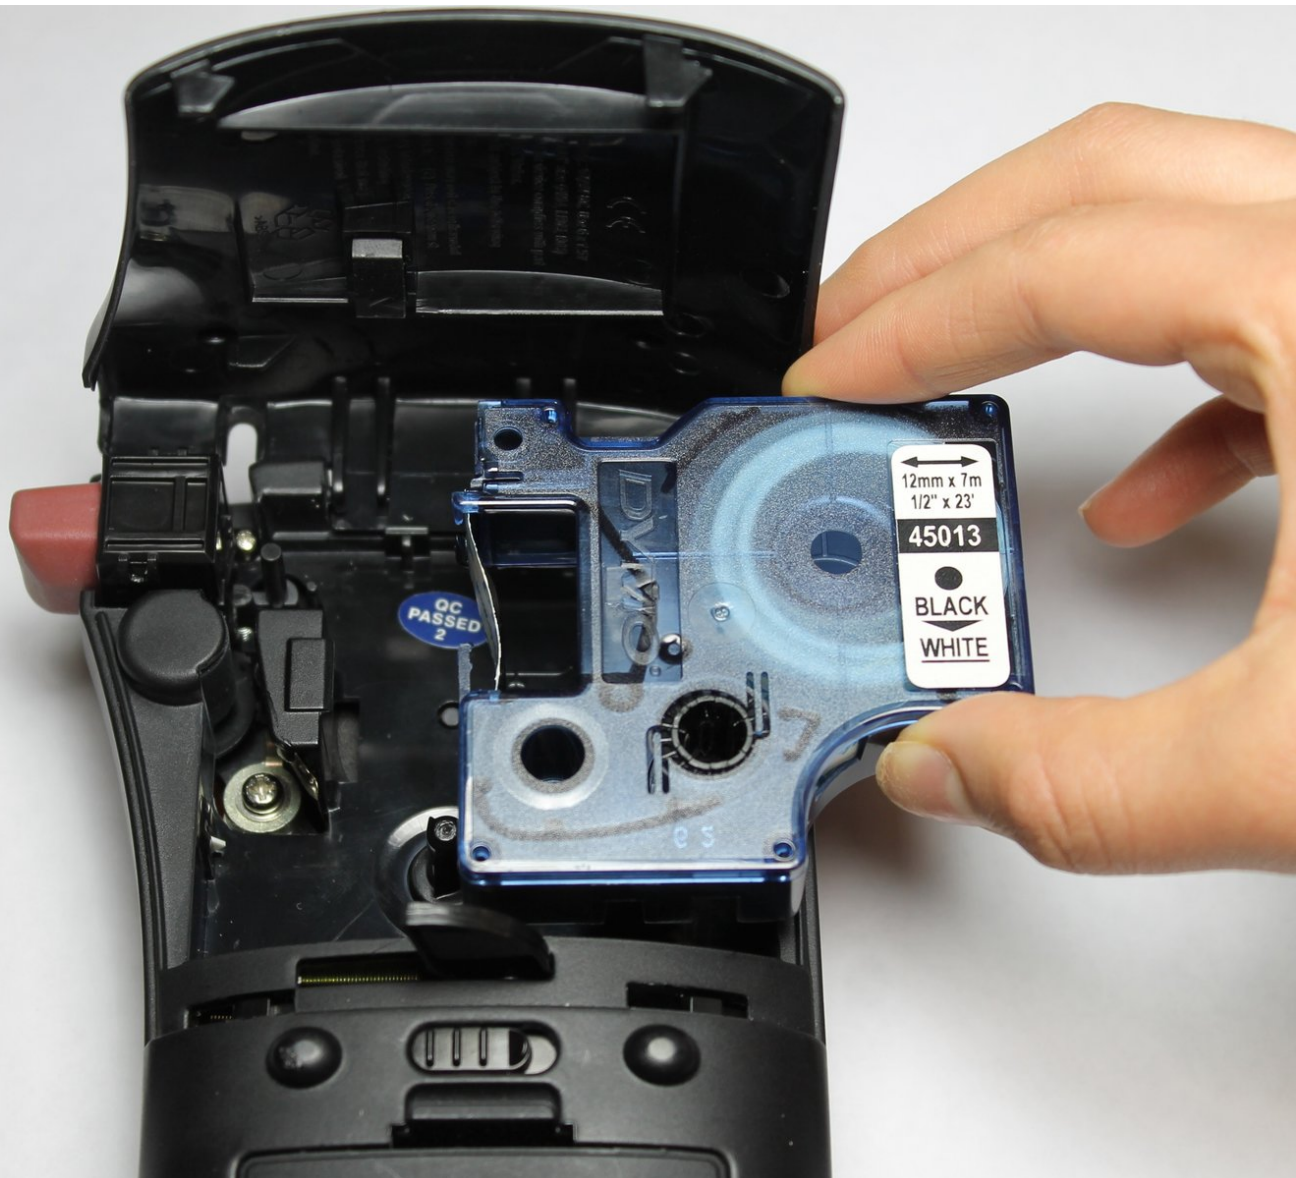



PARTS:

- [3/8" Standard Tape](#) (1)
-

Step 1 — Rear Panel



- Slide the panel release button.
- Lift the panel.

Step 2 — Remove Label Tape Cassette



- Firmly press the cartridge release button with your finger.
 - You may need to hold the cassette and/or entire device still while pressing the button.
- Lift the label tape cassette out of the device.

To reassemble your device, follow these instructions in reverse order.

