


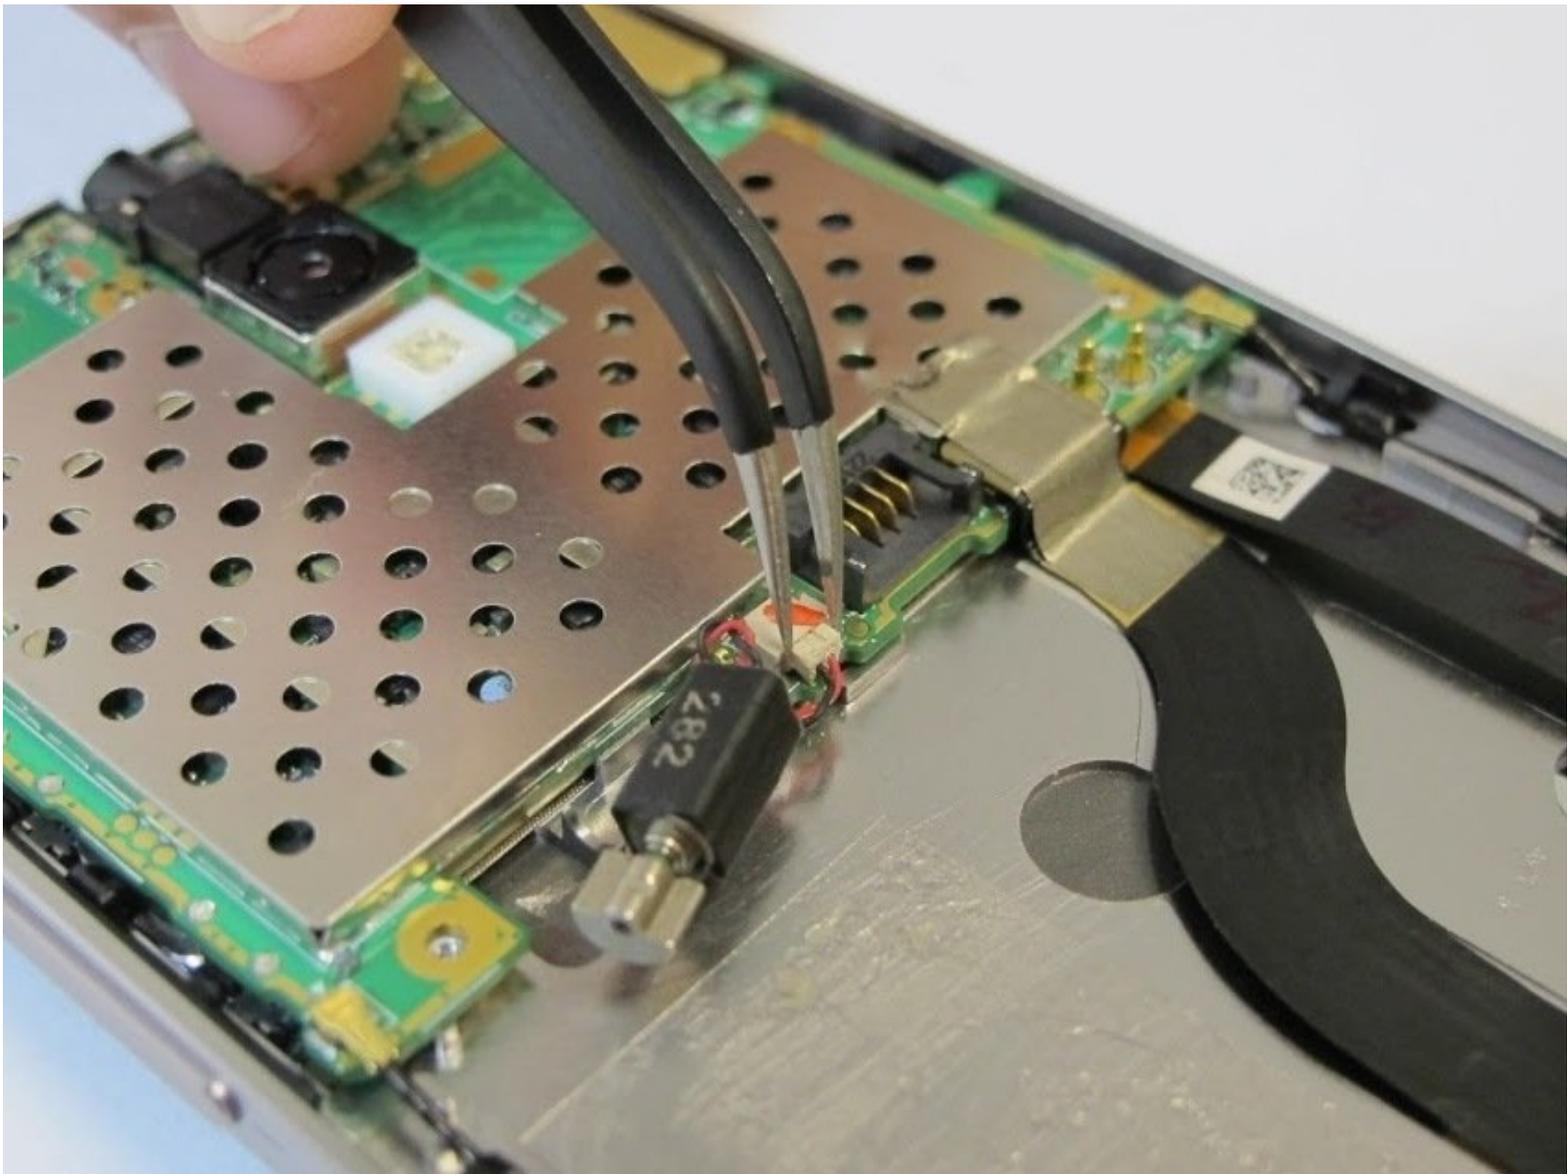

Asus Padfone 2 Vibrator Replacement

Replacing a damaged A68 Vibrator

Written By: Zach Standridge



 **TOOLS:**


- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Power Down Device




 Hold down the power button

Step 2 — Remove Back Plate

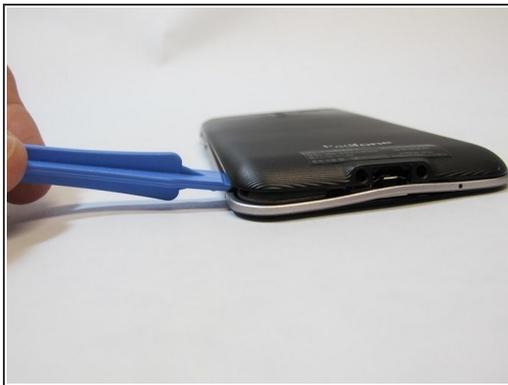

- Use plastic opening tool to pry off the back cover of the phone.

Step 3 — Battery Removal

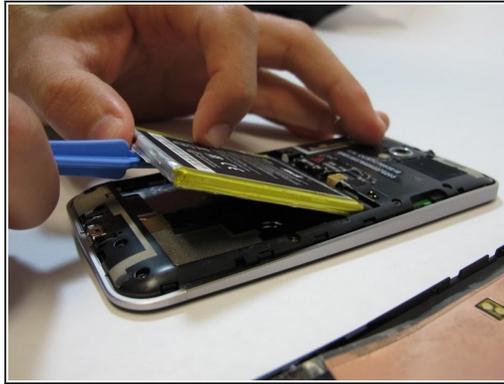


- Remove the warning sticker that covers the battery plug and connecting cord.
 - Look for the widest gap on either side of the battery. Using the plastic opening tool carefully lift battery out.
- ⚠ The battery is held down with adhesive. Be careful not to damage battery or connecting cord.
- Disconnect battery connecting cord using tweezers.

Step 4 — Remove Internal Back Plate



- Use T5 Torx screwdriver to remove 14 screws from internal back plate.
- ⓘ Use of magnetic pad will help with keeping track of screws.
- Once screws are out, remove the plate.

Step 5 — Removal of A68 Vibrator

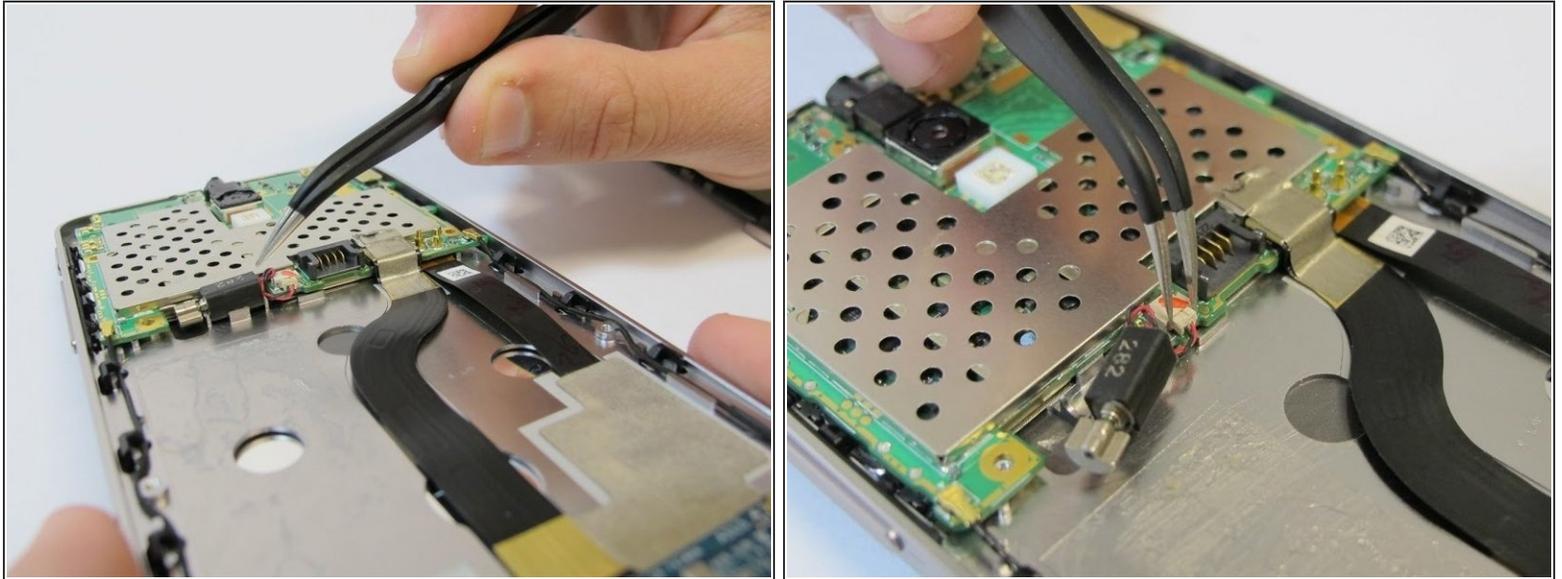

- Use tweezers to remove motor from housing, pulling the plug downward away from the phone.
- Use tweezers to unplug the device from the circuit board.

To reassemble your device, follow these instructions in reverse order.