



1999-2004 Volkswagen Golf Air Filter Replacement

Replace a dirty engine air filter to optimize fuel economy and keep your engine running smoothly.

Written By: Matthew Newsom



INTRODUCTION

Replace a dirty engine air filter to make your car happy.



TOOLS:


- [Locking Pliers](#) (1)
- [Phillips #2 Screwdriver](#) (1)



PARTS:



- [Volkswagen Golf Air Filter](#) (1)

Step 1 — Air Filter

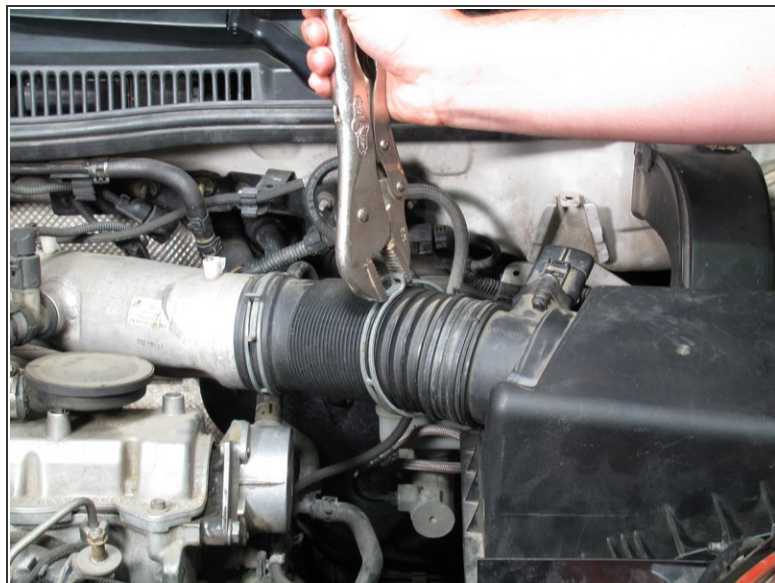

- Using a vise grip, grip the metal ring securing the intake tube to the air filter cover.
- Slide the ring up the tube.

Step 2

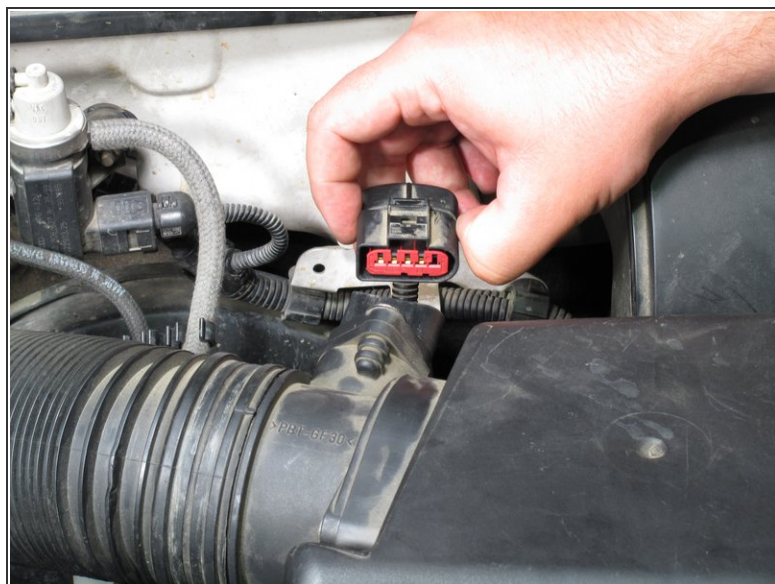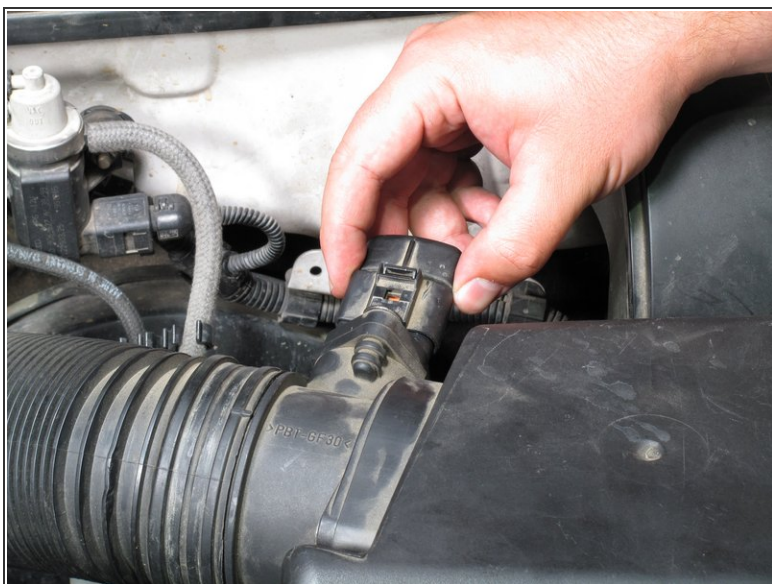


- Unplug the cable from the air filter.

Step 3




- Pull the intake tube off of the air filter cover.

Step 4

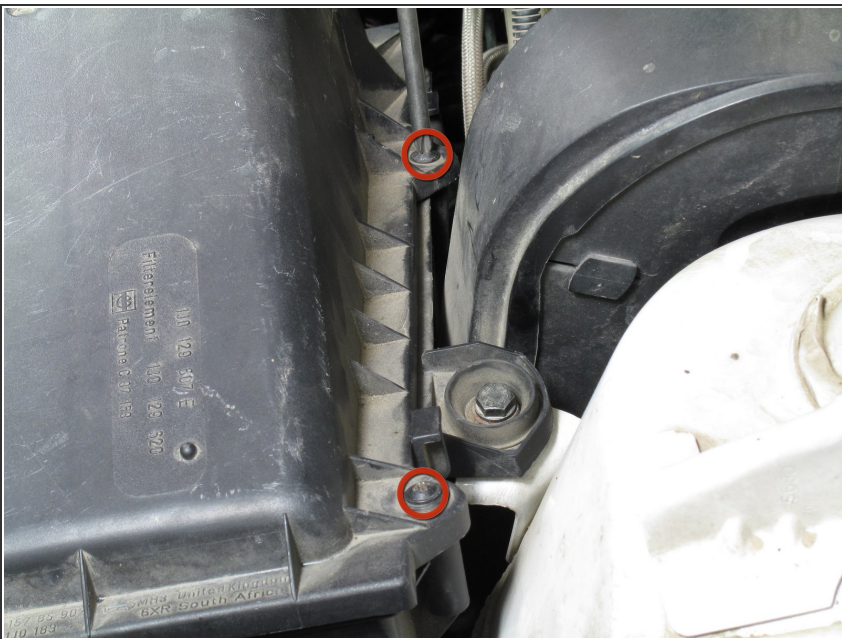

- Unscrew two Phillips screws located behind the air filter.

Step 5

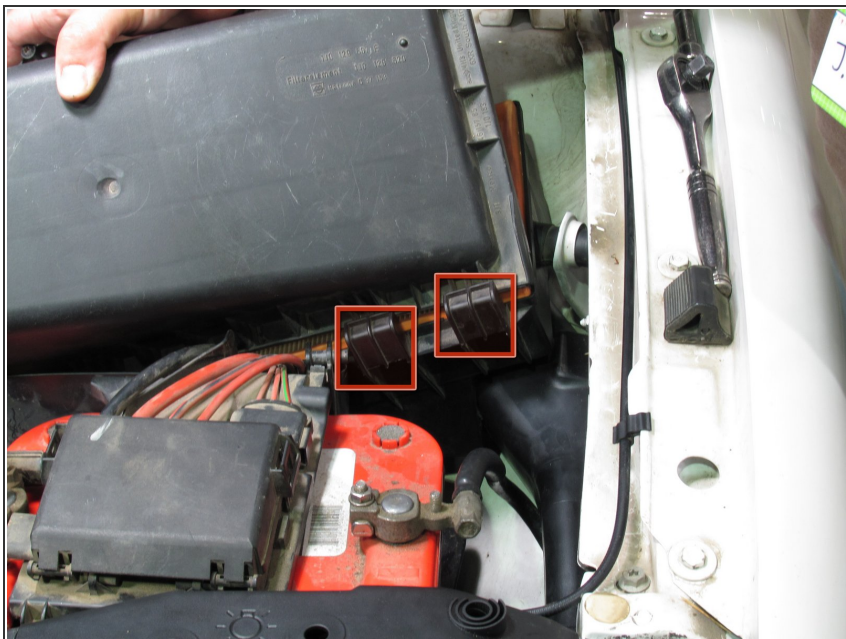

- Lift the air filter cover up, starting from the back end, making sure to release them from the hinges on the front end.

Step 6



- Remove the air filter.

To reassemble your device, follow these instructions in reverse order.