



# RCA RP3715A Battery Replacement

This guide will describe in detail the how to properly change the batteries.

Written By: Myles Waiters



---

## INTRODUCTION


This guide will cover how to change the battery. Be sure to have a 9 volt battery present in order to complete this operation. Make sure you are very careful with the electrical wires inside the battery terminals.



### PARTS:

- [9V Battery](#) (1)
-

## Step 1 — Reaching the battery terminal.

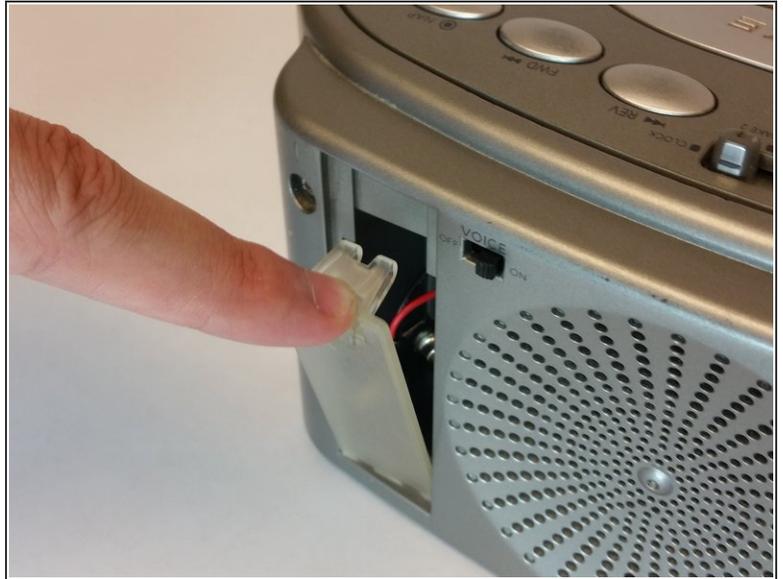

- Push down on the clip to release pressure. Then pull off the plastic cover.

## Step 2 — Replacing the battery



- Remove the 9-volt battery from the battery terminal.

To reassemble your device, follow these instructions in reverse order.