




HP Slate 8 Pro Microphone Replacement

HP Slate 8 Pro has an integrated microphone with supreme quality; however, if your microphone stopped working, follow the following steps to replace it.

Written By: Claudia

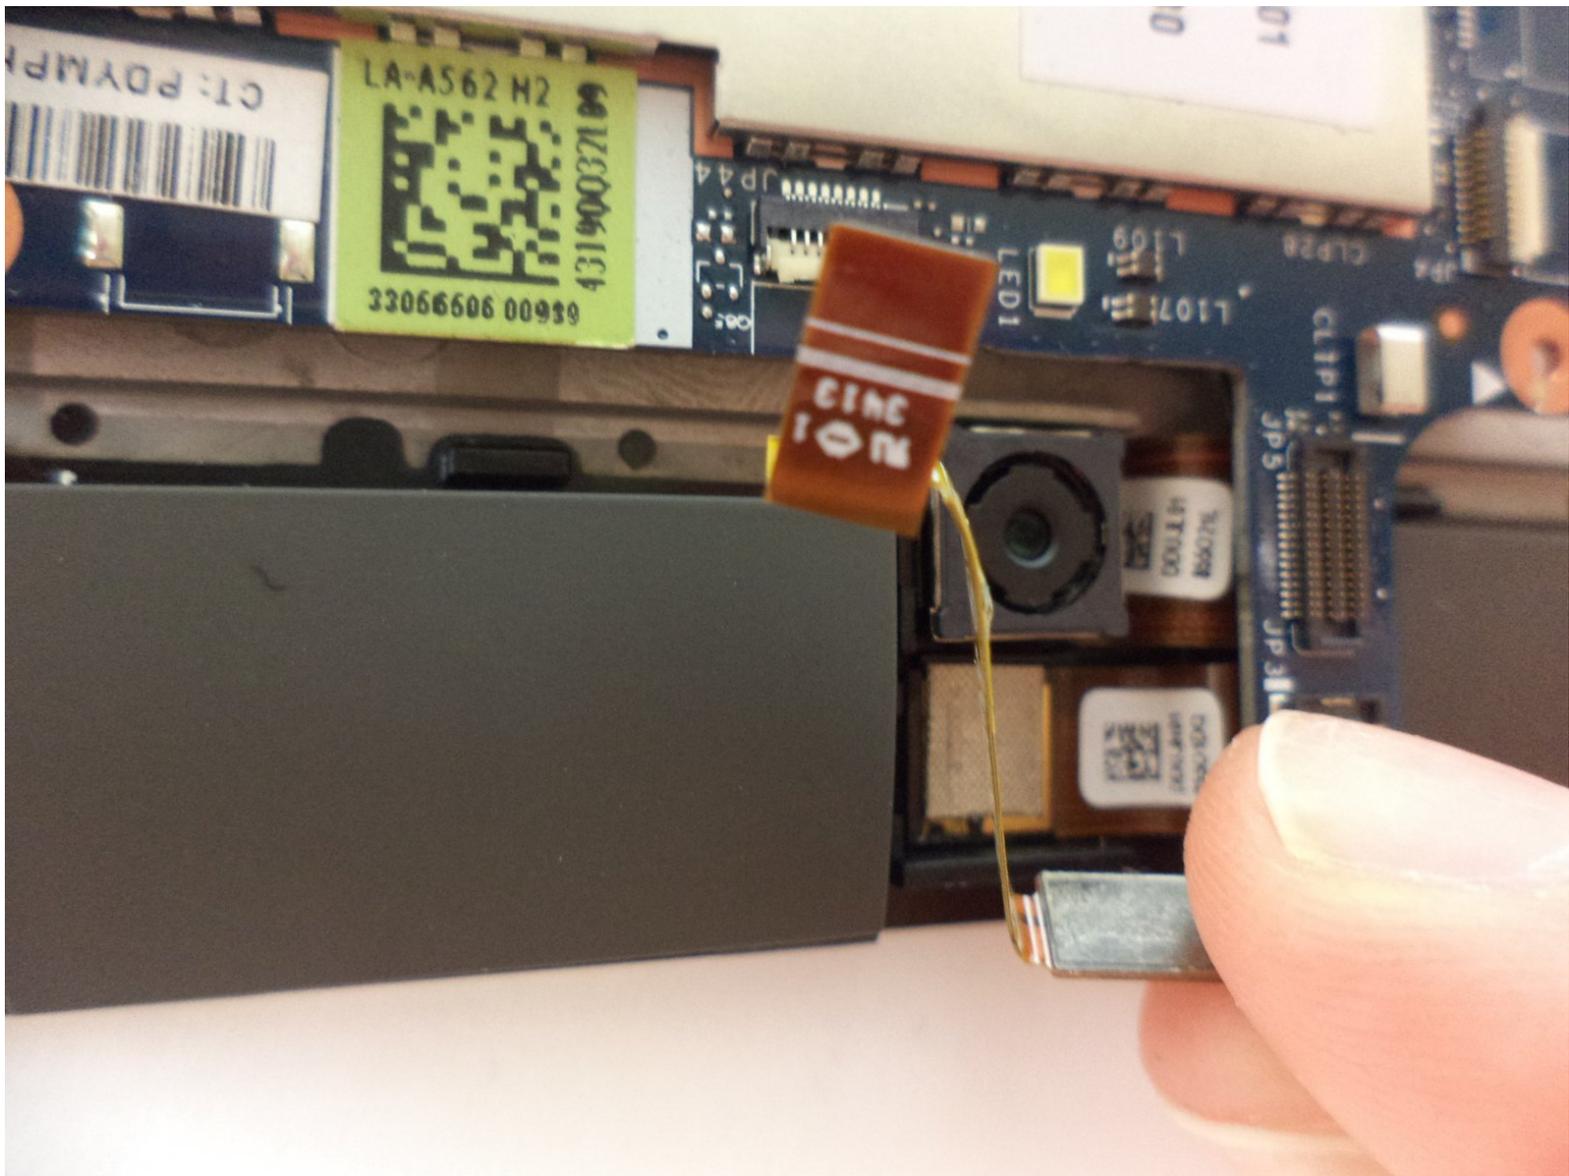

INTRODUCTION

This guide should be able to help you replace the microphone if not working properly on your HP device. By following these steps you should have it replaced or fixed in not time.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Remove the back cover




- Before opening your device, turn off the tablet. If you are unsure whether the tablet is off or in Hibernation, turn the tablet on, and then shut it down through the operating system.
- Unplug your tablet from any power supply
- Remove all external devices.
- Remove back cover with plastic tools to avoid scratching the screen.

Step 2 — Remove screws

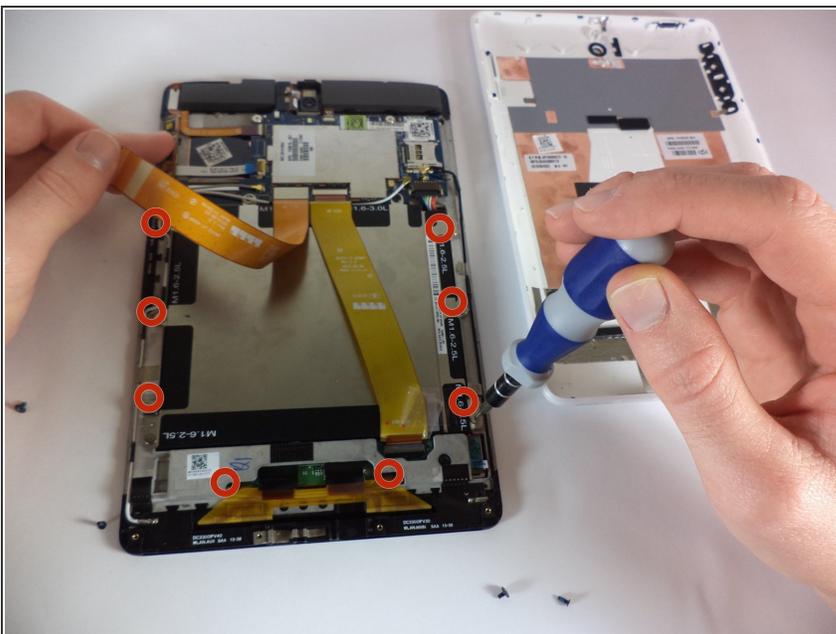


- Remove all screws from the sides of the battery

Step 3 — Disconnect the battery cable

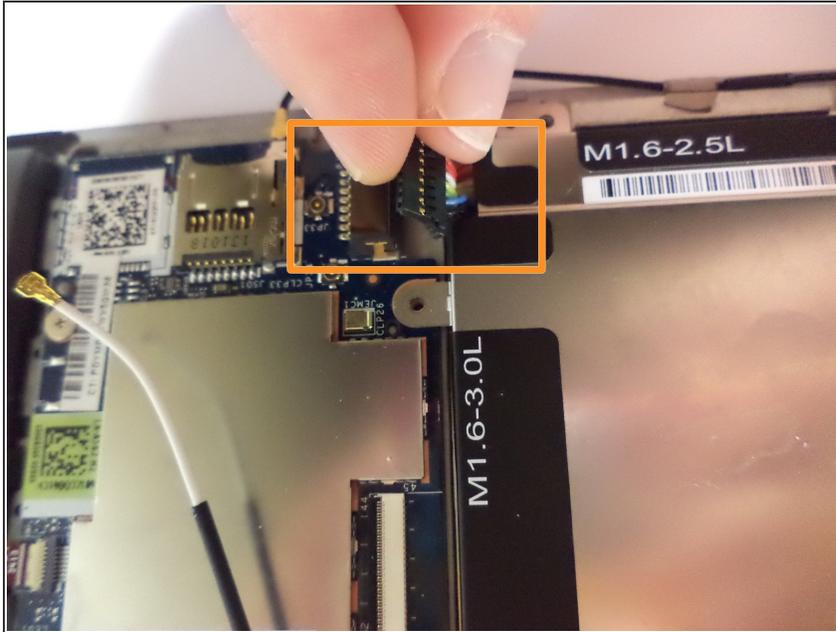


- Disconnect the battery cable from the system board.
- Use a little bit of pressure to remove the cable.

Step 4 — Remove ZIF connector

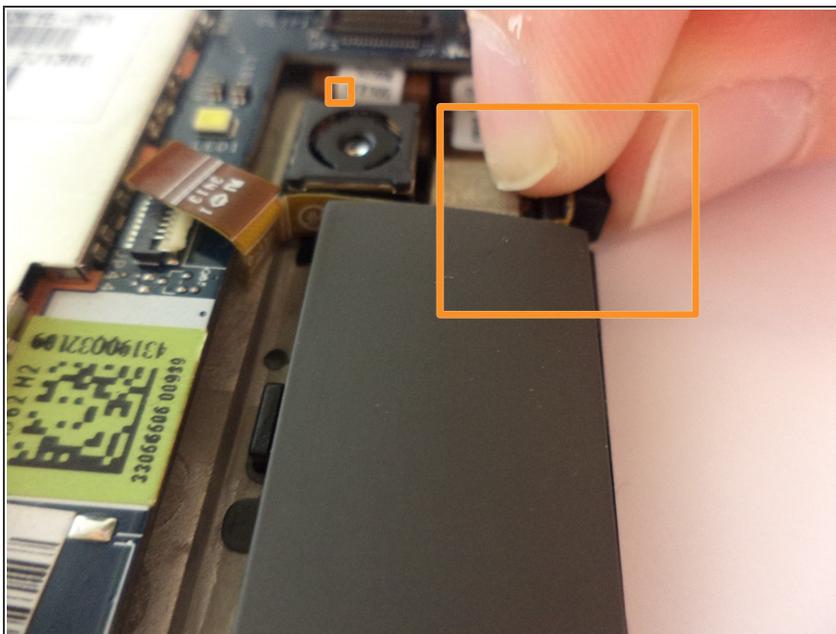

- Release the ZIF connector to which the microphone cable is attached

Step 5 — Remove the microphone

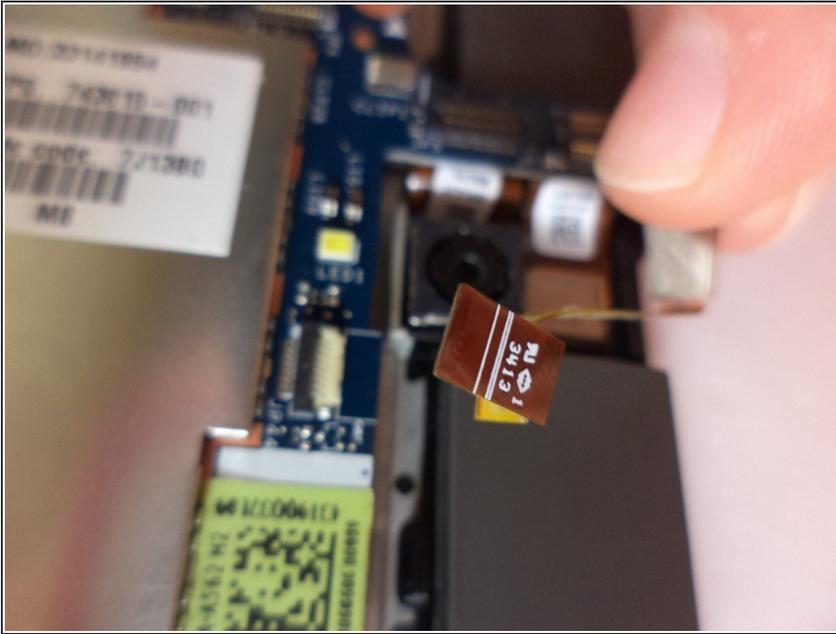

- Remove microphone from panel using tweezers
- Add your new microphone

To reassemble your device, follow these instructions in reverse order.