




Waring Pro SB30 Indicator Lights Replacement

If you need to replace the bulbs for the indicator lights which indicate when the burner is turned on and ready.

Written By: Sun Fai Lau

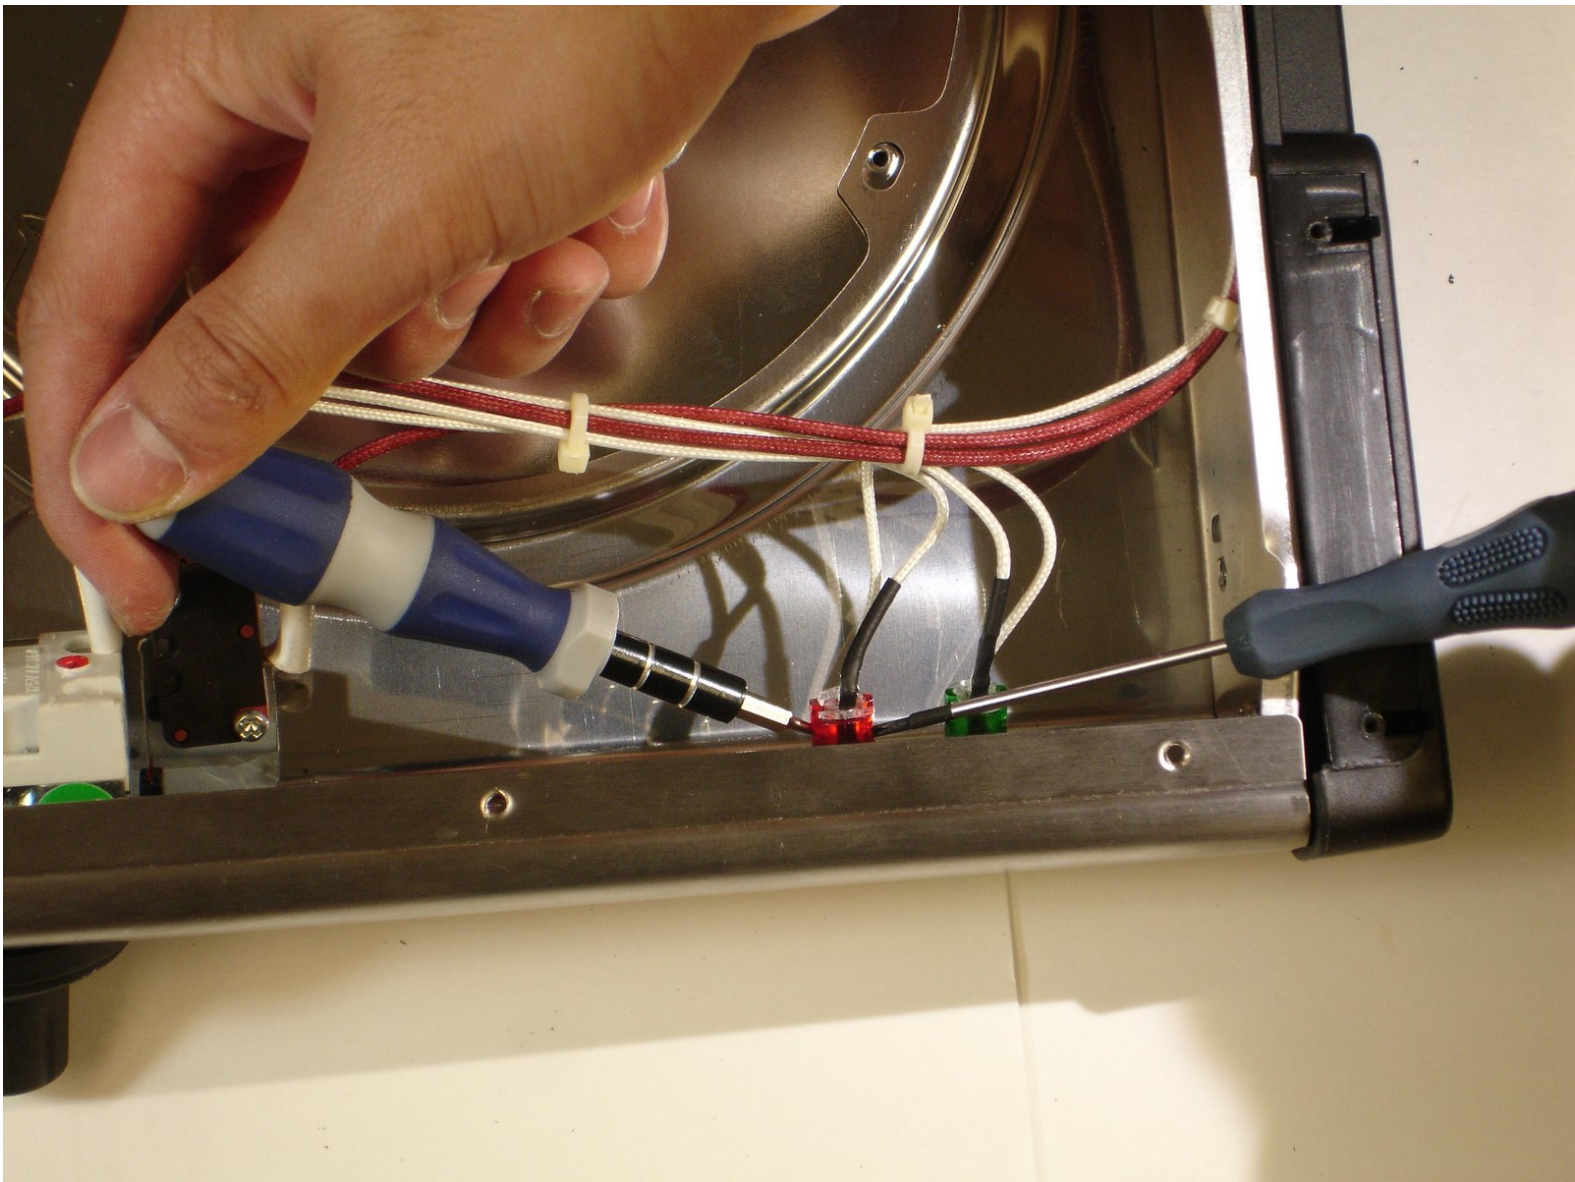

INTRODUCTION

This is a guide on removing the light bulbs from their colored-plastic shell, but not replacing the bulb. Take care not to use too much force as the bulbs or wires may get damaged while being extracted.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Smart Wrench](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Panel




- Remove the screws on the back panel with the #1 Phillips screwdriver bit.
- The screws in the rubber legs of the burner do not need to be removed.
- ⓘ If the back panel has never been opened before, the screws may be more difficult to unscrew.

Step 2




- Using a wrench, remove the bolt from the center of the back panel.

Step 3

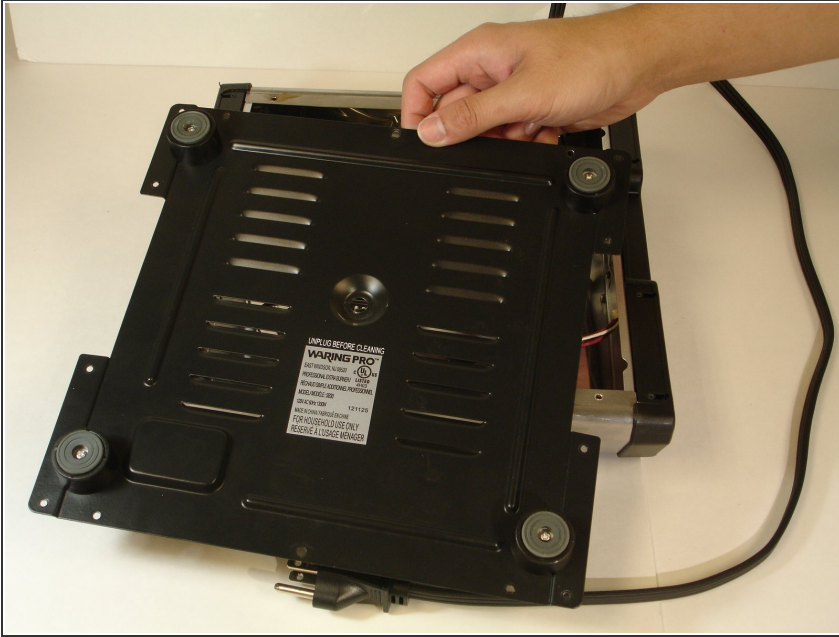



- The back panel can now be easily lifted off.

Step 4 — Indicator Lights

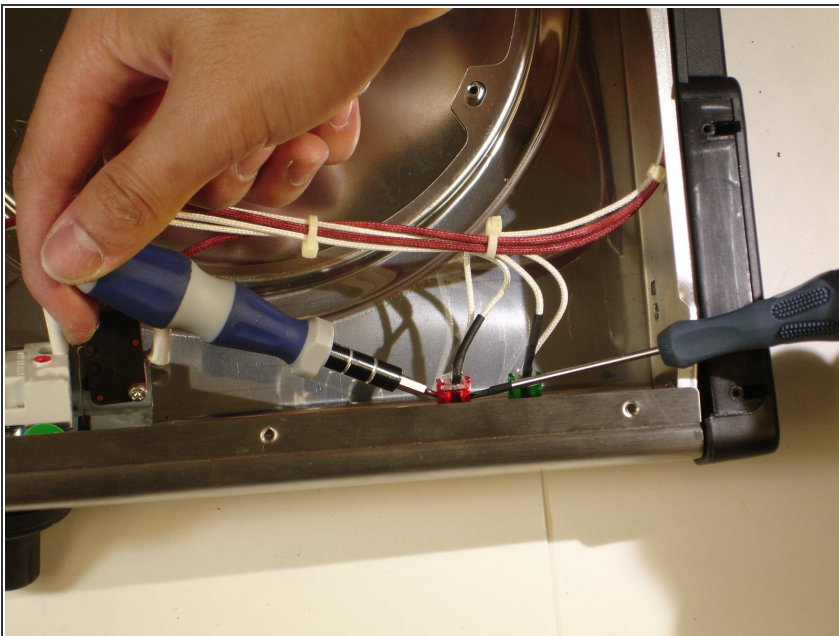

- Using two thin screwdrivers (or similar objects) wedge them into the slots of the plastic shell of the desired light.

Step 5

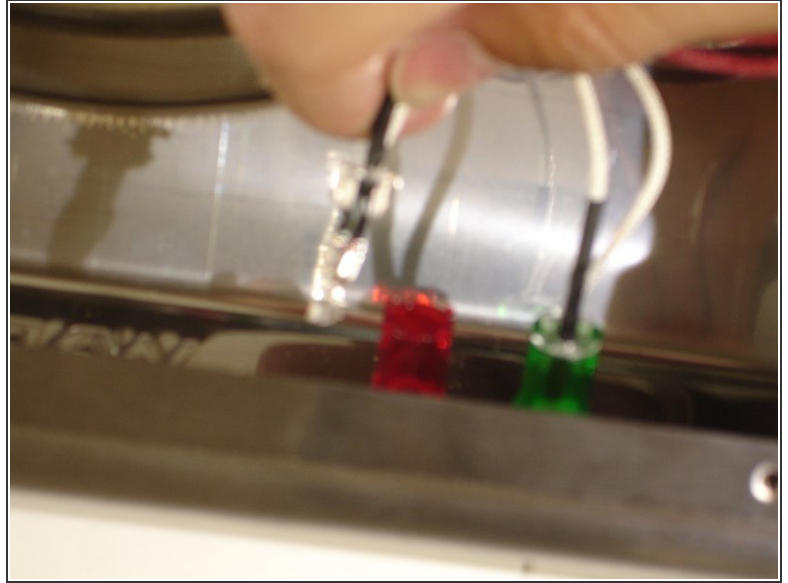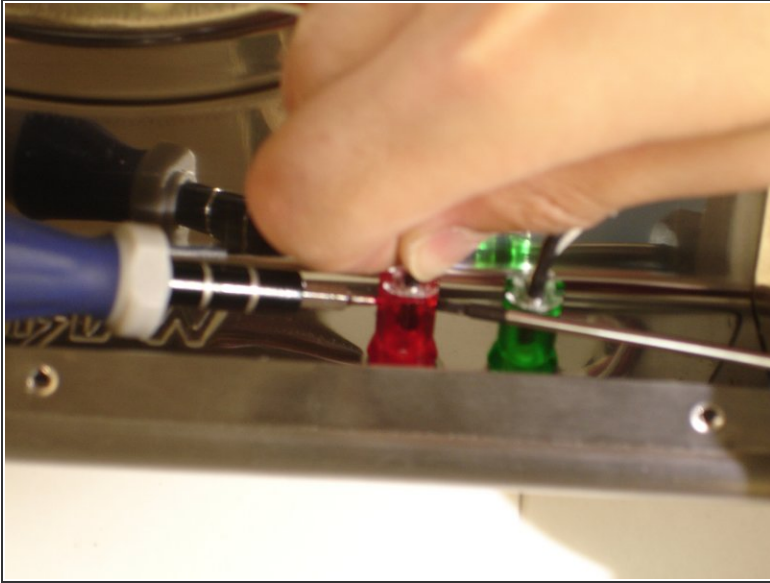

- Push the screwdrivers inward and guide the bulb outwards.
- Gently grab by the wires and remove bulb from plastic shell.

To reassemble your device, follow these instructions in reverse order.