




# Dell Optiplex 745 Small Form Factor RAM Replacement

Remove the RAM from the Optiplex 745 Small Form Factor for replacement.

Written By: Brandon Cooper

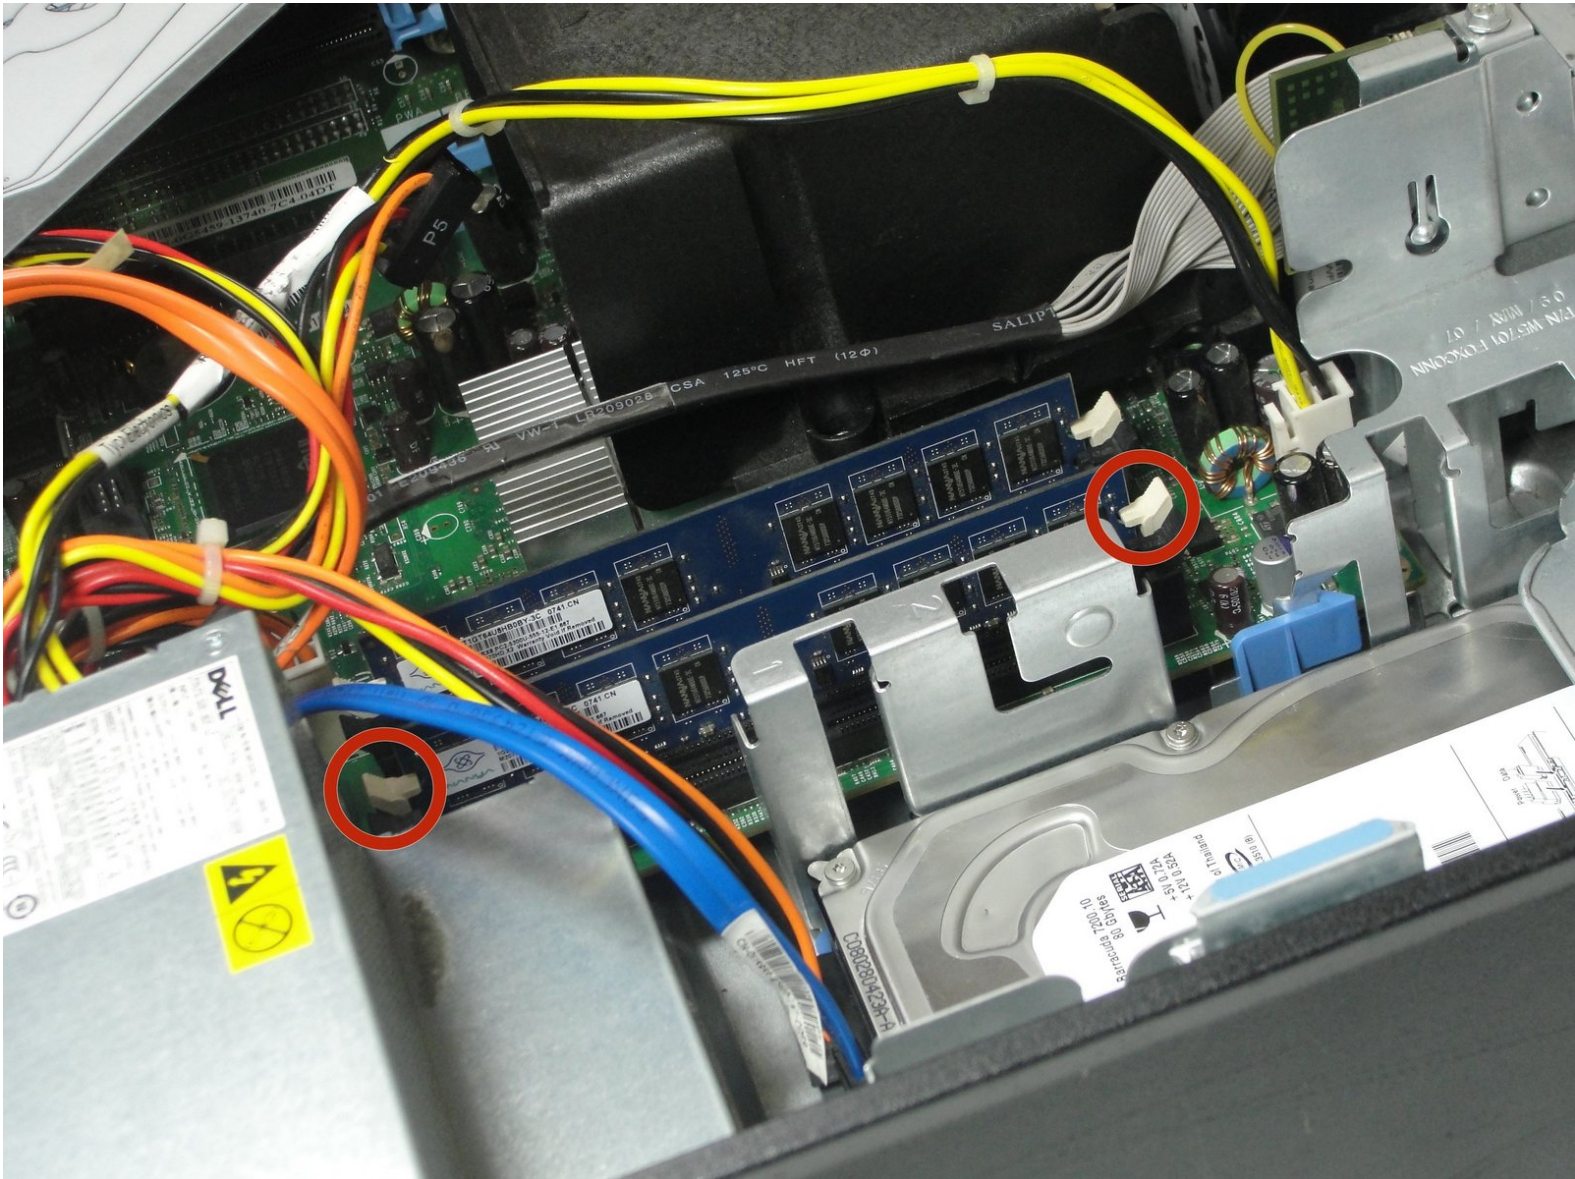

# INTRODUCTION

This guide will teach you how to replace the RAM within your computer.

## Step 1 — Opening the case



- Pull the tab and the lid will pop up.



## Step 2



- Grab the lid and pull it up and off.




### Step 3 — Disconnecting the cables

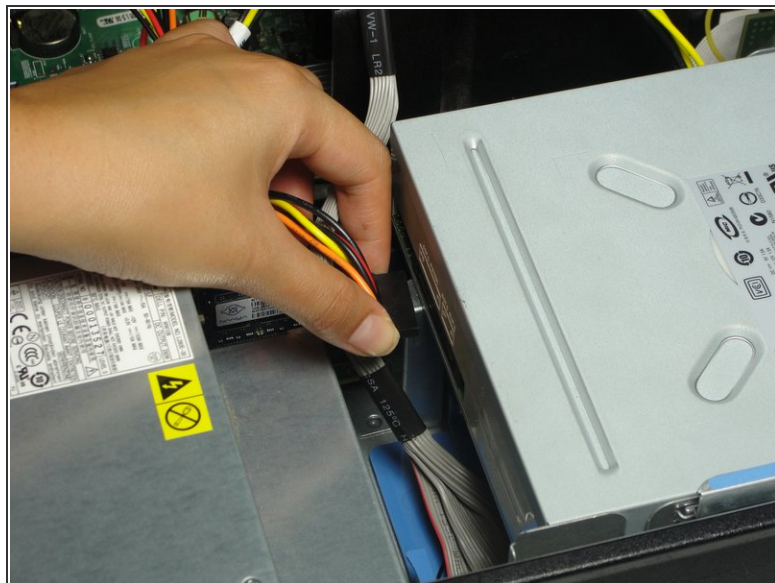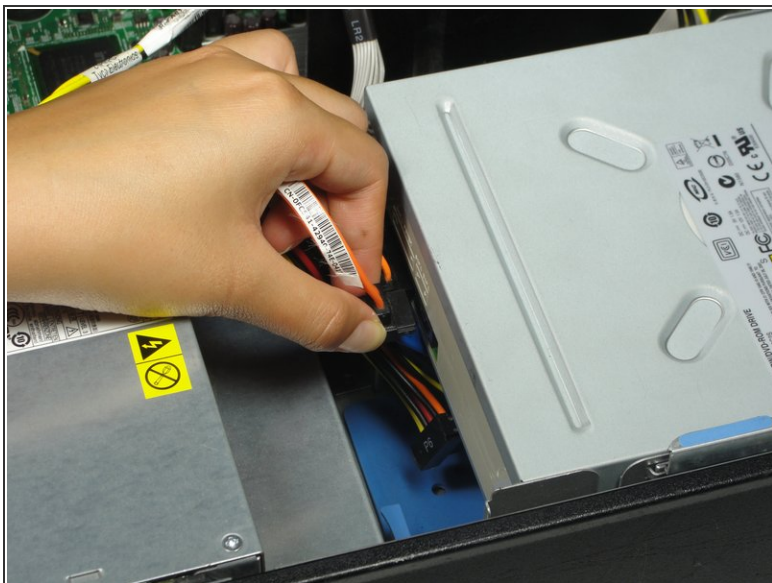

- Pull out both sets of cables from the side of the optical drive.
- ⓘ Both cables are plugged into the drive right next to each other.



### Step 4 — Removing the optical drive

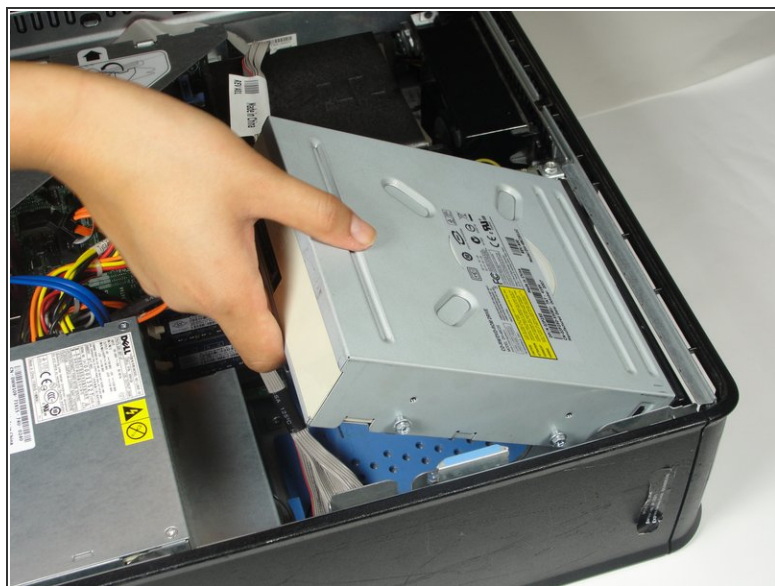

- Pull the tab up holding the optical drive in place.
- Slide the optical drive out.




## Step 5 — Unlocking the RAM stick from the motherboard

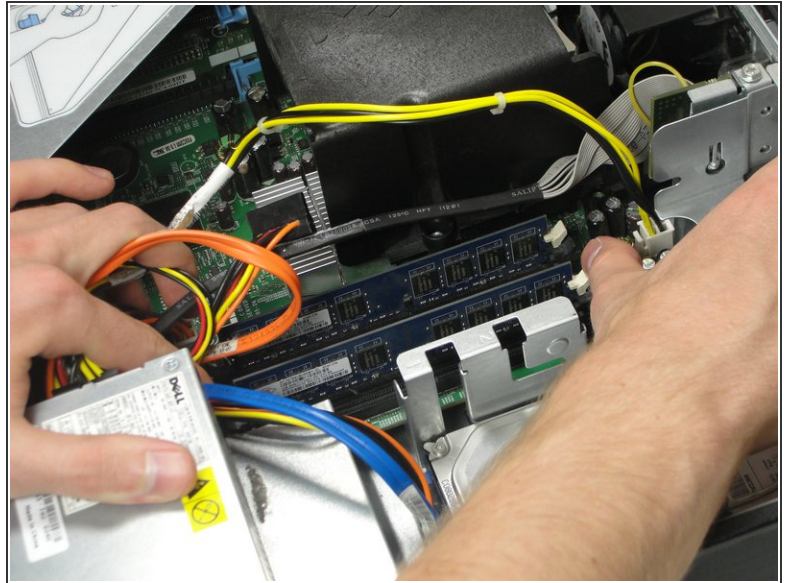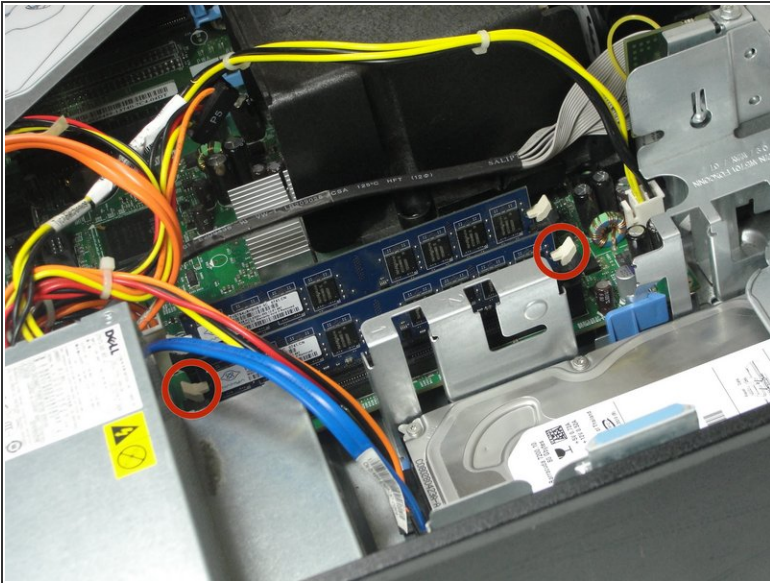

- Press down on the white tabs on both sides of the RAM stick until the RAM stick pops up.

## Step 6 — Lifting the RAM stick out of the case

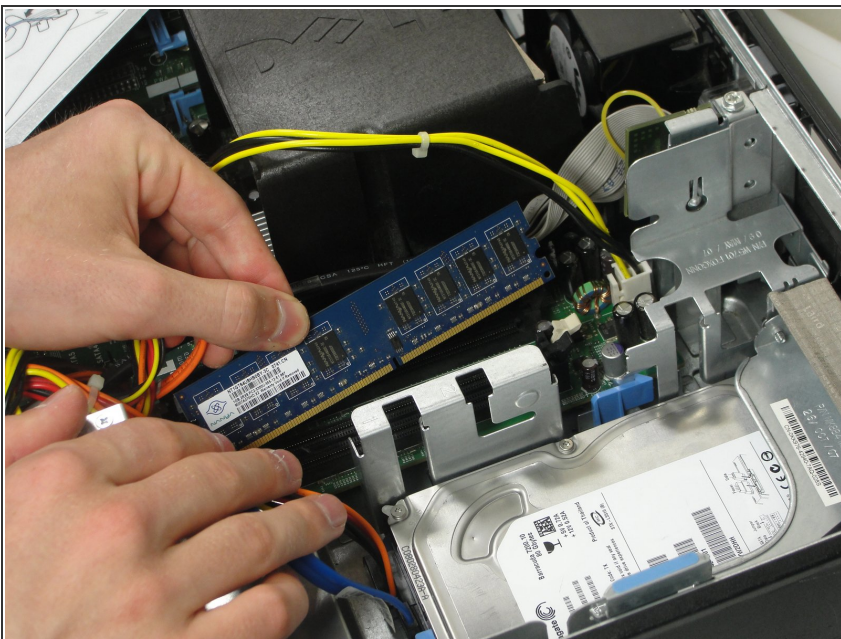

- Gently lift the RAM stick up and out of the case.
- ☑ When inserting a RAM stick, press firmly down into the slot until the white tabs lock into both sides of the stick.

To reassemble your device, follow these instructions in reverse order.