



Eureka AirSpeed Bagless Zuum Brush Roll Replacement

This guide outlines the removal of the main cleaning component within the vacuum. After using this guide, the broken brush roll can be replaced.

Written By: Celina Burchett



INTRODUCTION


If you determine that your vacuum brush roll will not turn and produces a burning smell, this guide will help you to replace the brush roll.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Brush Roll

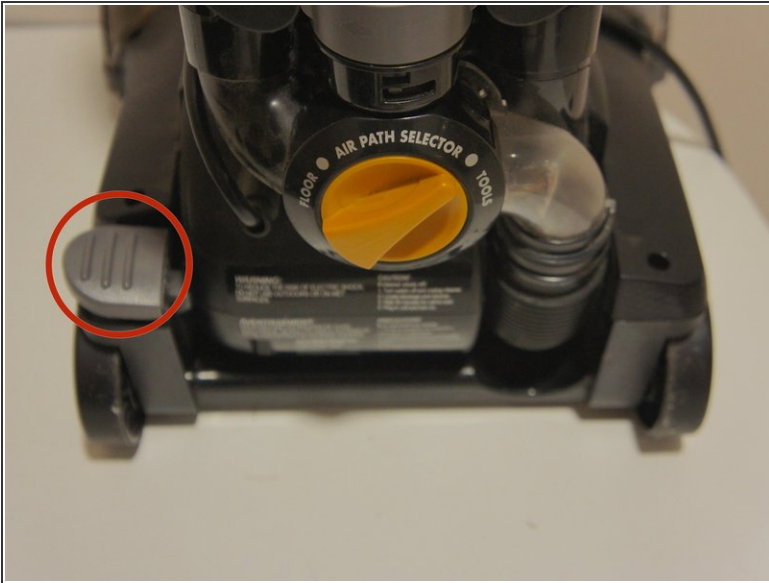

- Step on the grey release button located between the two back wheels to lower the handle flat to the floor.

⚠ Insure the vacuum is unplugged before starting the process of removing the brush roll.

Step 2




- Using a Phillips #2 screwdriver, remove the four screws from each corner of the brush roll cover.

Step 3



- Remove the brush cover from the vacuum base, by pulling straight up.

Step 4

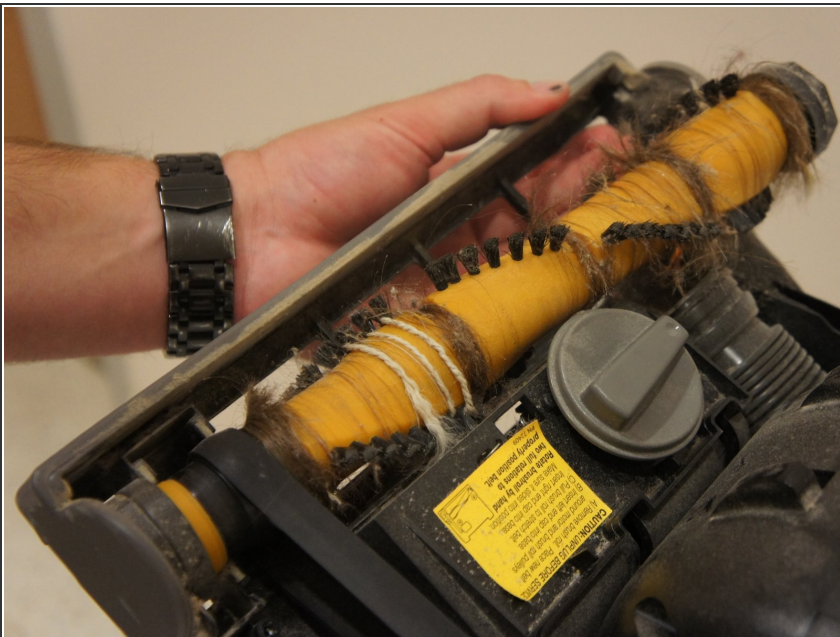

- Firmly press upwards from below the brush roll on the side opposite the belt.

Step 5



- After one end is displaced, remove the other side by pressing firmly upwards from below the the brush roll.

Step 6



- Once the brush roll is displaced from the base, detach the belt from the brush roll in order to clean the brush roll.

To reassemble your device, follow these instructions in reverse order.