



Alcatel One Touch Fierce Front Facing Camera Replacement

In this guide you will be shown how to...

Written By: Rijkaard Thomas



INTRODUCTION

In this guide you will be shown how to effectively replace the front camera on your device.

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Spudger](#) (1)


[Tweezers](#) (1)

Step 1 — Rear Case




- Pry with a plastic opening tool, or your fingernail, in the divot at the bottom left corner of the phone.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — Midframe

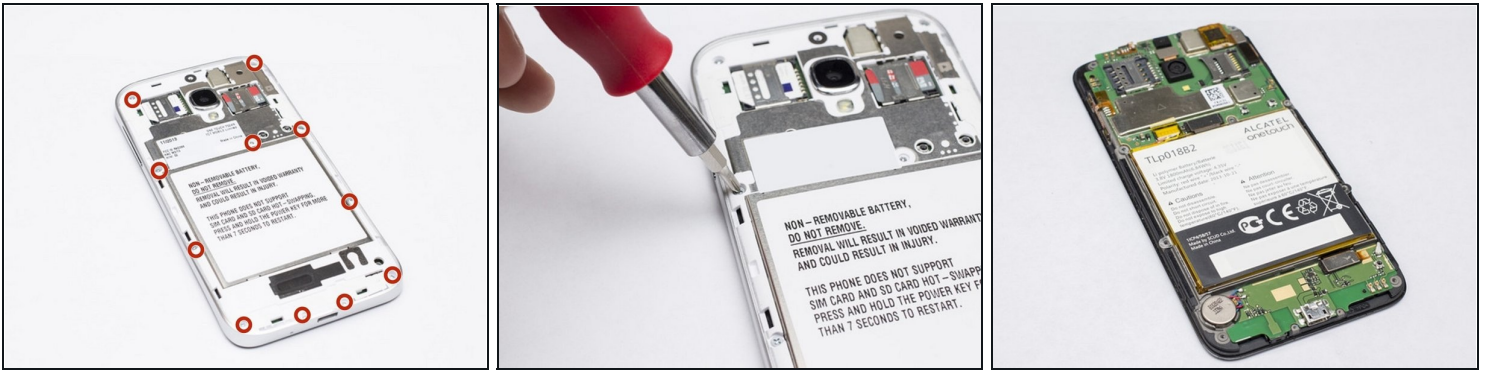

- Remove the 11 Phillips #000 screws.
- The midframe should lift free.


Step 3 — Battery

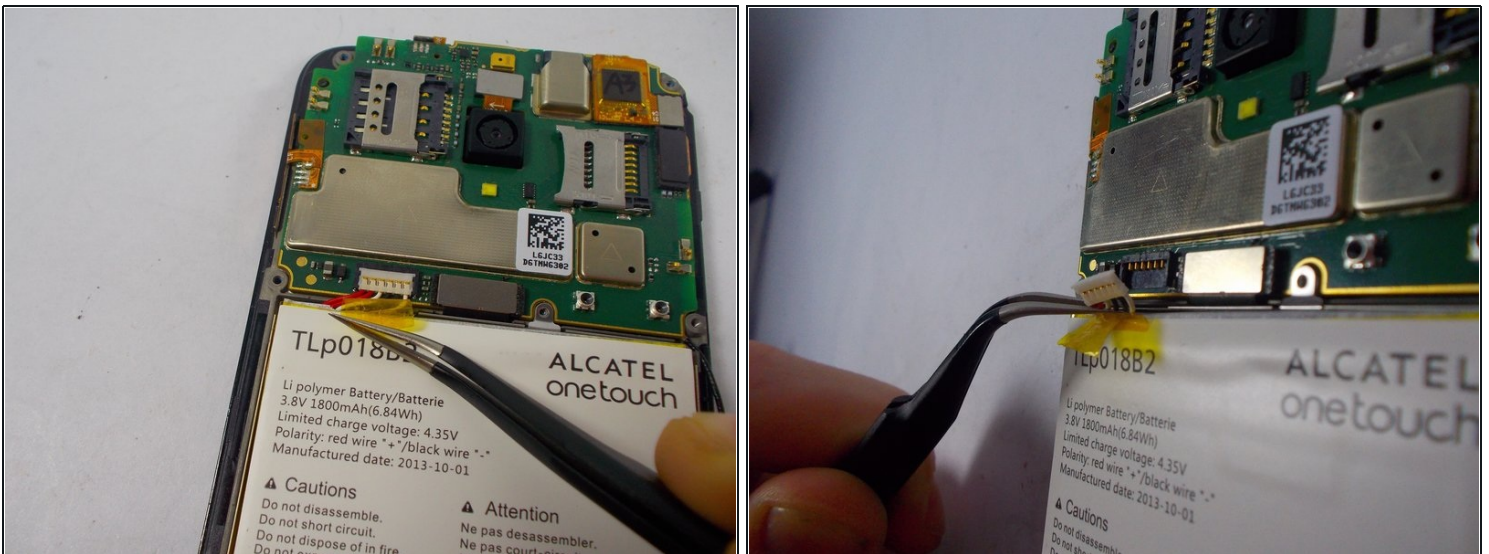

- Use the tip of a spudger to pull back the yellow tape covering the battery connector.
- Use a pair of [tweezers](#) to pull the battery connector from its port.



⚠ Be careful not to tear the battery from its connection.

Step 4 — Camera

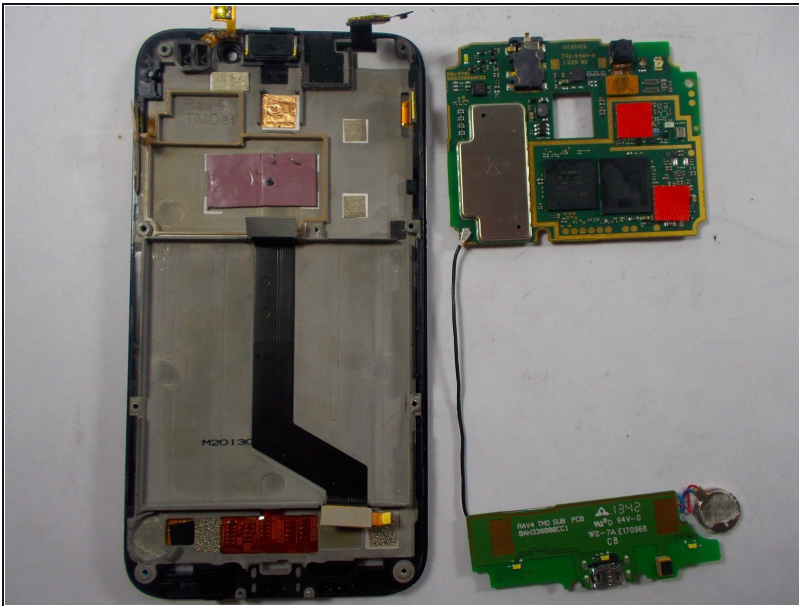

- Carefully remove the motherboard from the rest of the phone.

Step 5

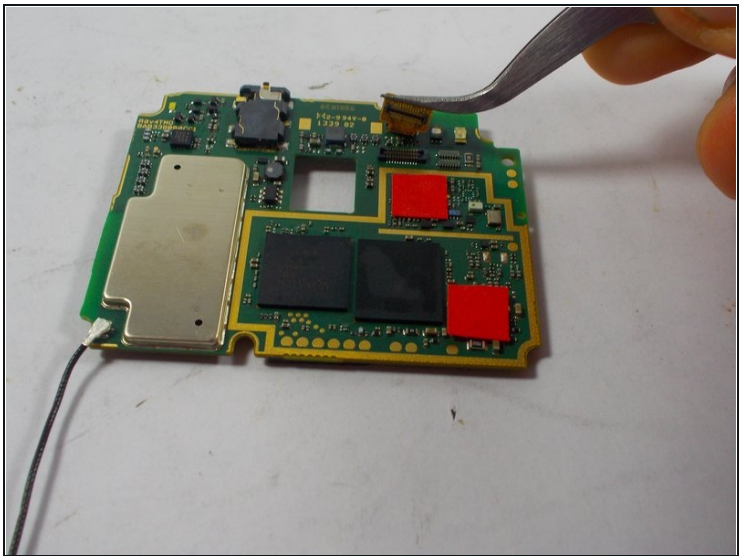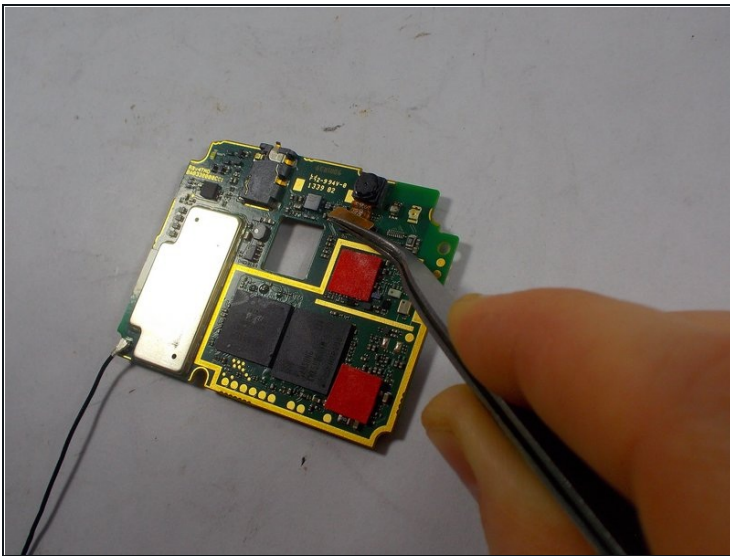

- Use a pair of [tweezers](#) to disconnect and remove the front facing camera from the motherboard.

To reassemble your device, follow these instructions in reverse order.