

Samsung T139 Camera Lens Replacement

Use this guide to replace the camera lens on your Samsung T139.

Written By: Reagan May



INTRODUCTION

If you are having problems with the camera on your Samsung T139, use this guide to replace it.

TOOLS:

- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)

Step 1 — Remove Back Cover



- (i) Power off your phone before beginning disassembly
- Apply pressure to the back cover and slide towards the base

Step 2 — Remove Battery



• With a plastic opening tool, lift and remove the battery

Step 3 — Remove Screw Stickers




Using the tweezers, remove the two rubber soles that cover the panel screws

Step 4 — Remove Screws




Remove two Phillips 1.0mm #0 screws

Step 5 — Remove Face Plate

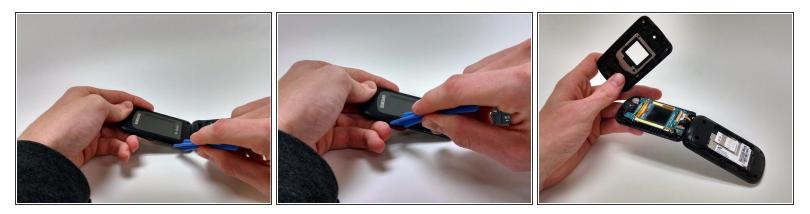

• With the plastic opening tool, work around the face plate until it pops off

Step 6 — Remove Camera Lens

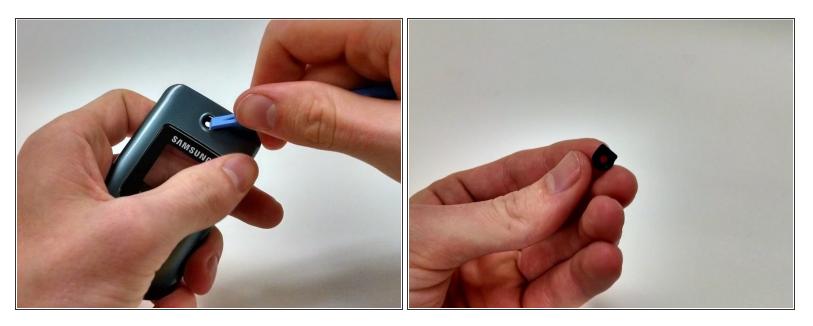

• Apply pressure to the lens, pushing it out the back

To reassemble your device, follow these instructions in reverse order.