



# Honeywell HY-204 Fan Blades Replacement

In this guide you will be removing the cylindrical fan blade column so it can be cleaned or replaced.

Written By: Jenna Johnson



---

## INTRODUCTION

After removing the outer casing, replacing the fan blades is quick and easy! You would want to use this guide to replace the broken part or clean dirty blades.

---

### TOOLS:

- [Socket Wrench](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Case



**i** Before you begin, be sure to unplug the fan.


- Remove the four 14 mm screws from the back of the device using the Phillips #0 Screwdriver.

## Step 2



- Pull the front and back parts of the case away from each other until the back is free from the front. This may require a large amount of force.



### Step 3 — Fan Blades

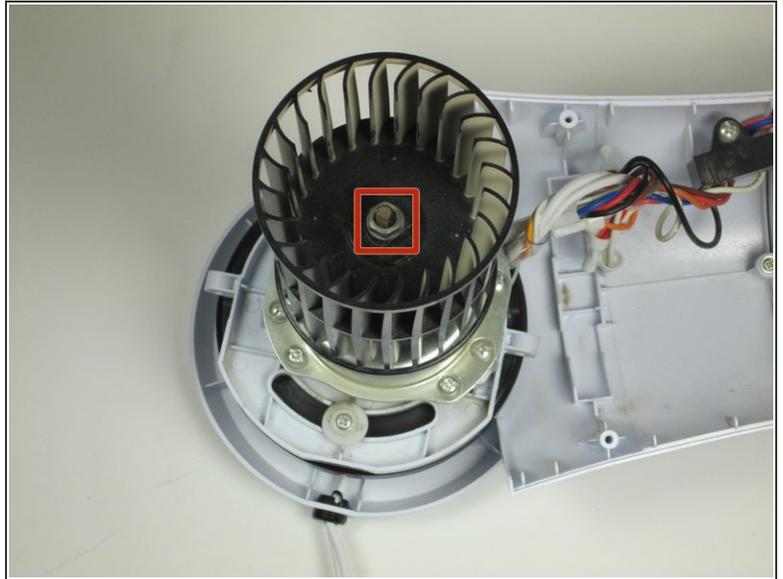

- Remove the hex nut from the fan motor with a 10mm hexagonal ratcheting socket wrench.

**i** The nut uses a left-handed thread.

### Step 4

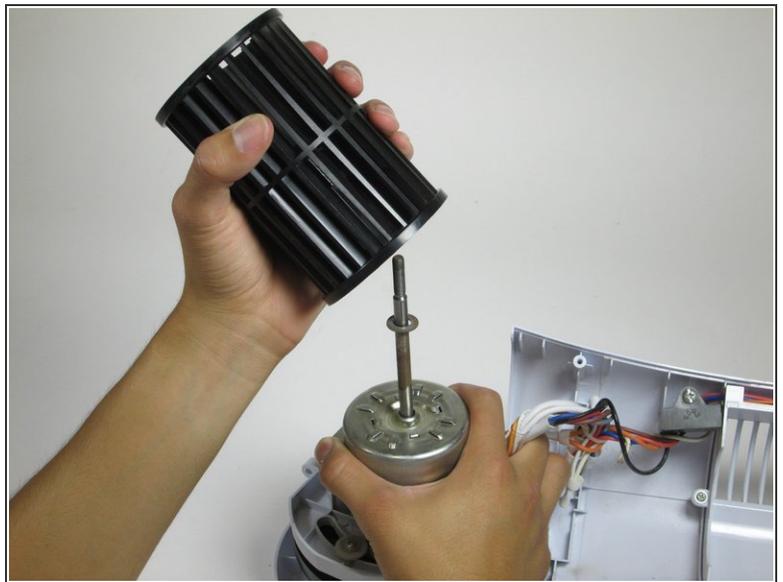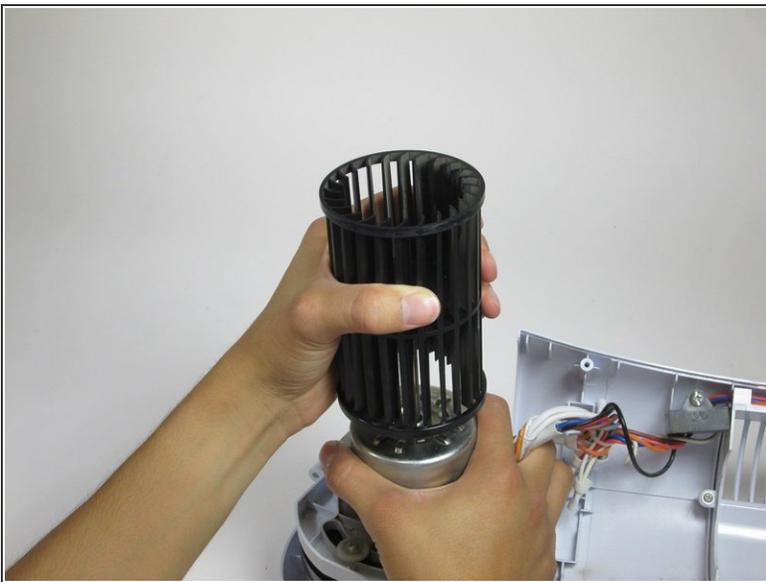

- Grasp the fan blade firmly and pull upward to remove it from the center column of the fan.

**⚠** The slots on the fan blades and center column need to be aligned for reassembly.

To reassemble your device, follow these instructions in reverse order.