



# Uniden EXP 371 Antenna Replacement

This guide is about replacing the antenna of your Uniden EXP 371.

Written By: Eric Rodrigues



**TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)

**PARTS:**

- [New antenna](#) (1)

## Step 1 — Uniden EXP 371 Teardown



- Uniden EXP371 900 MHz Cordless Phone.
- 900 MHz Extended Range with One Touch RocketDial/Find Handset Locator and is Desk or Wall Mountable.

## Step 2




- Remove the battery by first pressing down on the rear of the cover and pushing the cover towards the bottom of the phone.
- Next remove the battery by pulling on the connector.

### Step 3



- Next remove the two screws at the bottom of the phone with a PH1 philips screwdriver.
- Now remove the top portion of the case from the bottom. This may be difficult to do with your bare hands. The use of a plastic opening tool may come in handy.

## Step 4

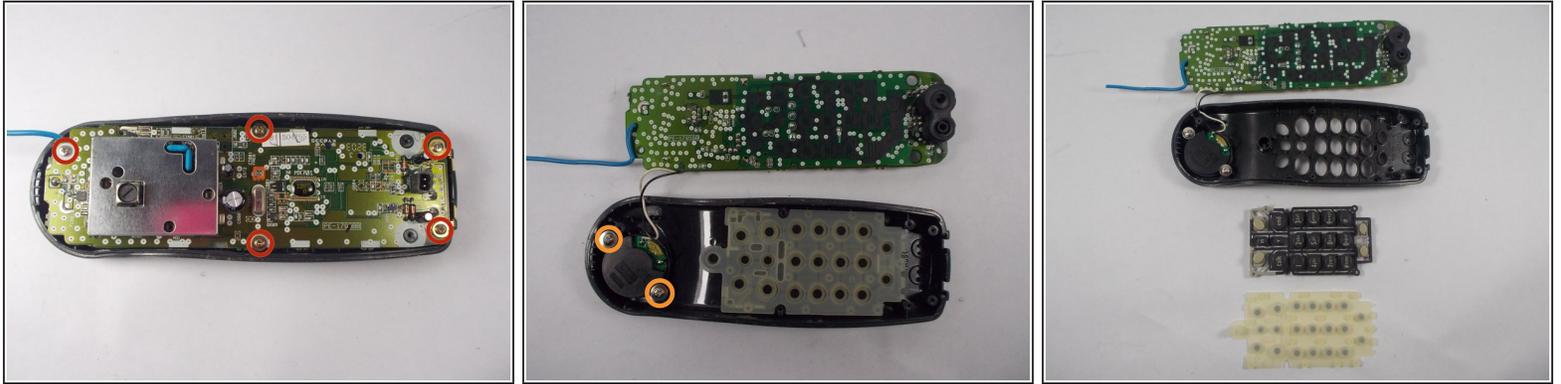

- Your next step is to remove the five screws holding down the motherboard. Use the PH1 philips screwdriver.
- Once you have removed the five screws you may lift the motherboard off of the front case.
- At this point you may also remove the dial pad. It simply lifts off.
- You may also remove the speaker if needed by unscrewing the two screws using the PH1 philips screwdriver.
- The whole phone is now disassembled at this point.

## Step 5 — Antenna



- After following the teardown guide. Take the bottom case and locate the antenna at the top of the phone.
- Lift the bottom of the the antenna with the aid of a tool (these tweezers work well) and push the antenna inside the phone to remove it.
- To reassemble the phone, follow the steps in the reverse order.

To reassemble your device, follow these instructions in reverse order.