

ZTE Telstra T95 Keypad Replacement

If your keys are stuck or broken you will be able to replace them or clean them.

Written By: Dioselina M Varela



INTRODUCTION


You will be able to replace the keypad on your ZTE Telstra T95. No background information required.



TOOLS:

• Phillips #00 Screwdriver (1)

Step 1 — Battery

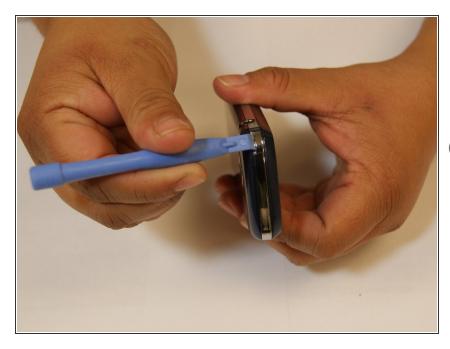


- Remove the back cover using a plastic opening tool. Insert it into each corner starting at the upper left of the back cover and pushing out.
- You may also use your finger nail if you do not have a plastic opening tool at hand.

Step 2



- Using a plastic opening tool, push out the battery by inserting it into the small groove at the top left corner of the battery and pushing out.
- The battery snaps out of place and you can remove it using your fingers.
- When you are ready to insert a battery make sure the three copper teeth on the phone are aligned with the 3 copper dents on the battery.

Step 3 — SIM Card

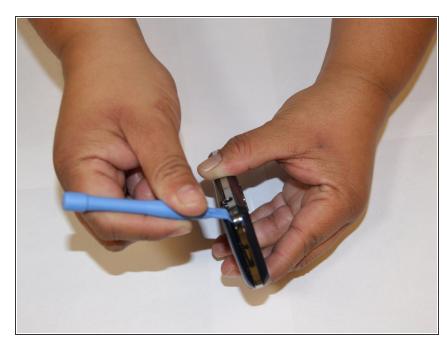

- Remove the back cover using a plastic opening tool. Insert it into each corner starting at the upper left of the back cover and pushing out.
- You may also use your finger nail if you do not have a plastic opening tool at hand.

Step 4



- Using your a plastic opening tool, push out the battery by inserting it into the small groove at the top left corner of the battery and pushing out.
- The battery snaps out of place and you can remove it using your fingers.

Step 5





- Remove the SIM card by placing your index finger over it and sliding it out.
- Mhen you are ready to re-insert the SIM card make sure the pink side facing up.


Step 6 — Keypad

ZTE Telstra T95 Keypad Replacement



- Unscrew the phone casing using a small screw driver. Remove the four screws on each corner on the back of the phone.
- (i) Screw sizes are 1.42mm in width and 3.37mm in length.

Step 7

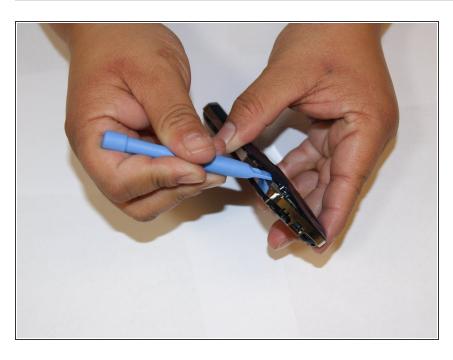

 Remove front casing by sliding a plastic opening tool between the chrome layer and the top cover.

Step 8



- The buttons should come off with the front casing but sometimes they don't. If that is the case simply remove them using your fingers and place them with the front cover.
- if your keypad buttons are sticky you can clean them in this step.

To reassemble your device, follow these instructions in reverse order.