




LG Optimus L7 P705 Speaker Replacement

Replacing the LG Optimus L7 P705 speaker.

Written By: Bruna

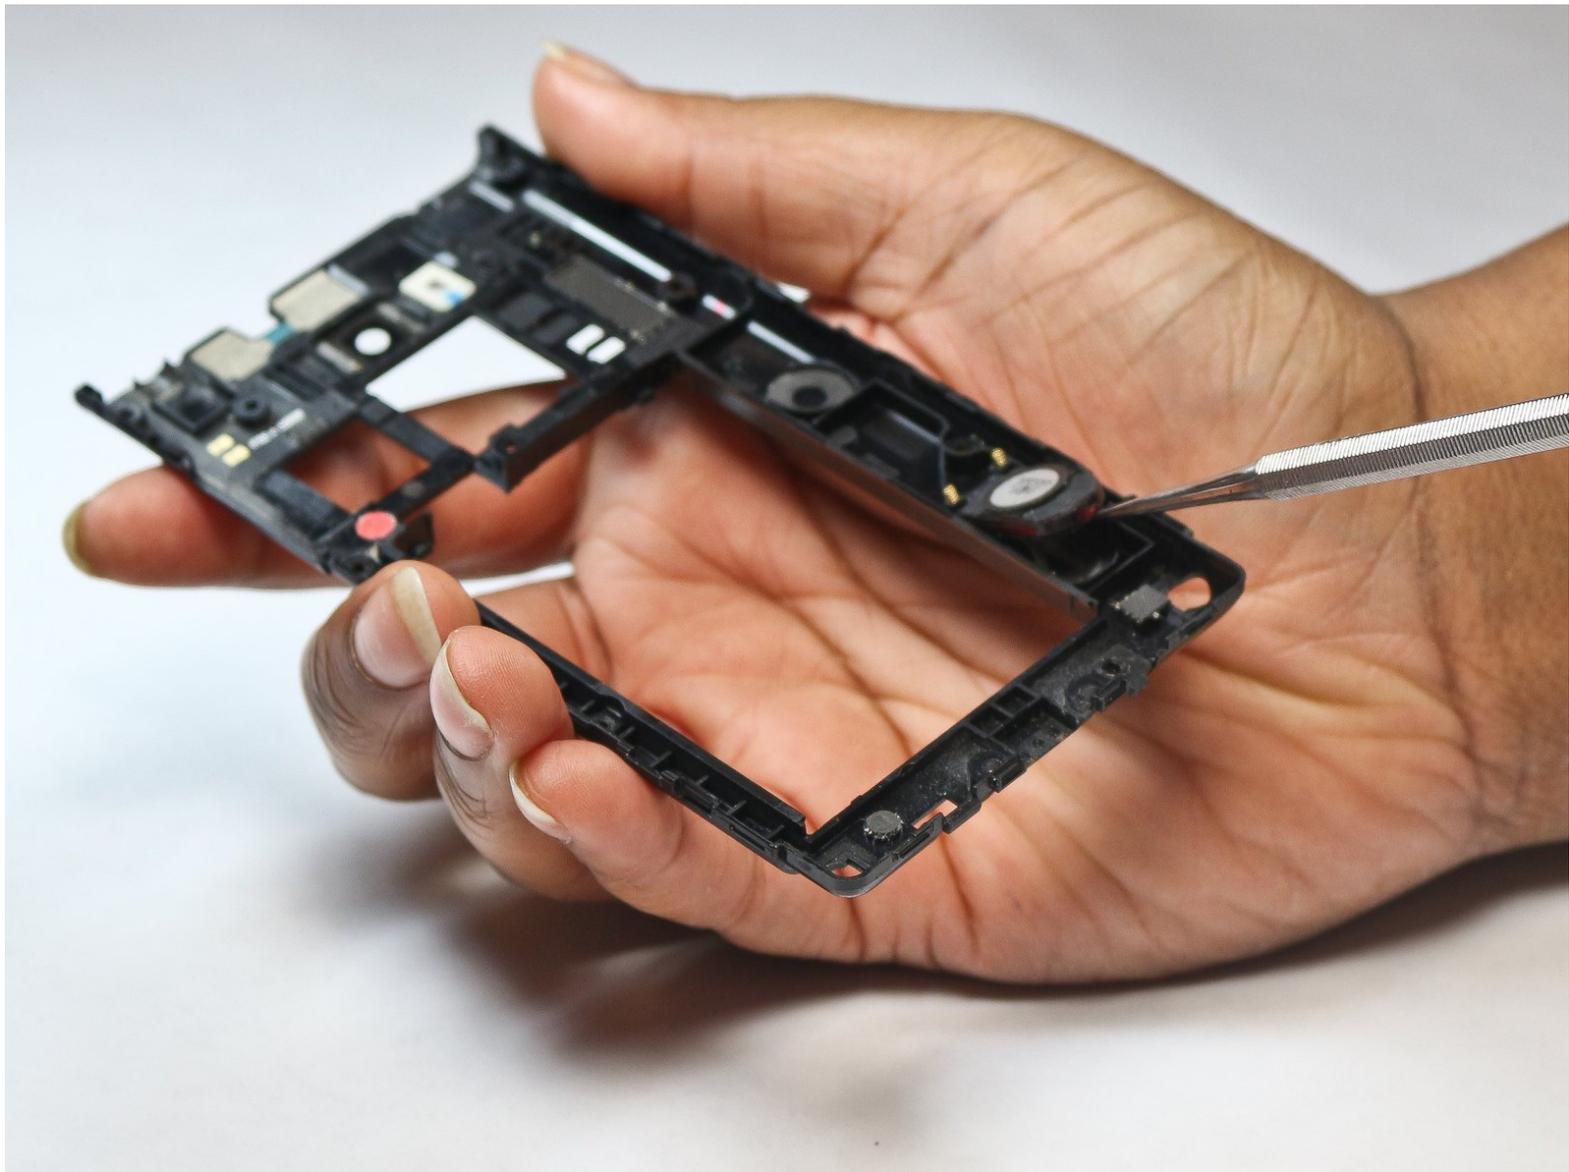

INTRODUCTION

The following guide explains how to replace the speaker.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Speaker




- Remove back cover.
- Remove the battery and simcard.

Step 2




- Remove the 12 screws (with the phillips head 000) around frame and near sim and sd cards.

Step 3

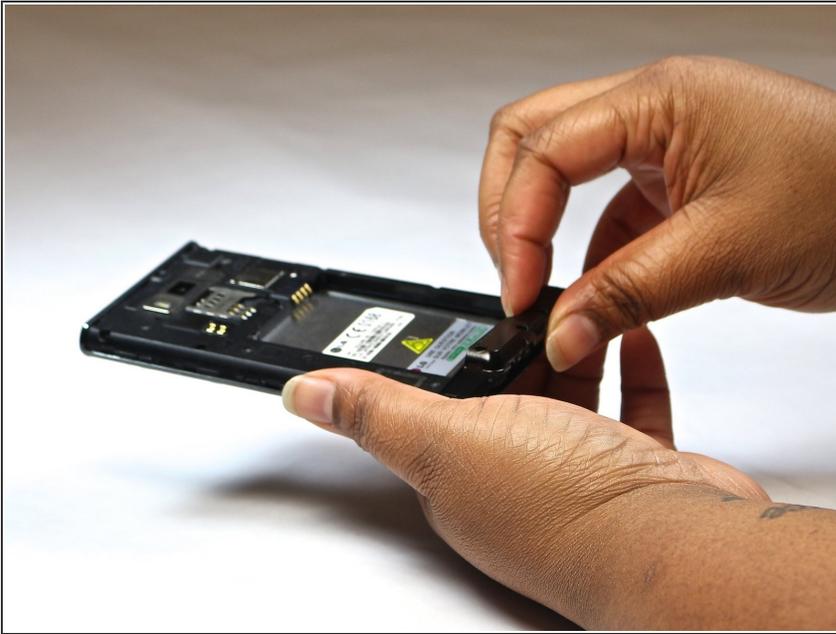


- Remove bottom plate where the charger port is located.

Step 4

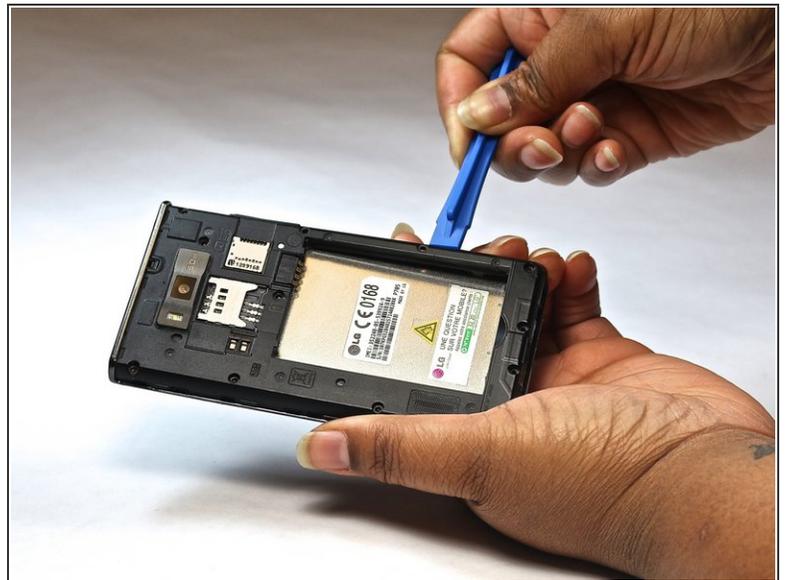

- Remove the back piece.

Step 5

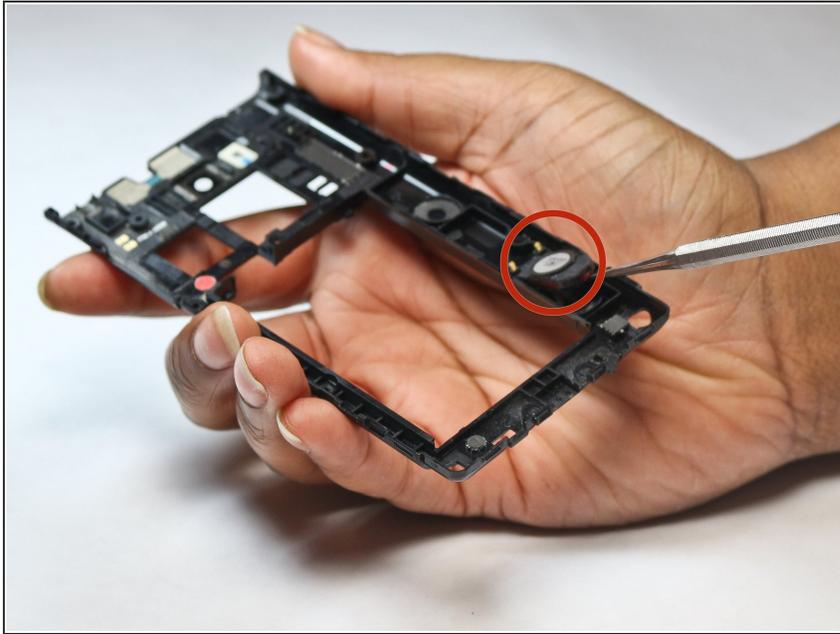

- Locate the speaker on reverse side of back piece.
- Using a Spudger, lift off the speaker and replace as needed.

To reassemble your device, follow these instructions in reverse order.